

# Tiger Touch

## Operator's Manual

### Version 3.0



Copyright Avolites Limited 2010

Useful Avolites phone numbers: -

Avolites England

Sales and service\* (+44) (0) 20 8965 8522

Service out of hours\* (+44) (0) 831 17 8888

Fax (+44) (0) 20 8965 0290

Email name@avolites.com

Website <http://www.avolites.com>

\*Before contacting Avolites for service enquiry please ensure that you have the product serial number and the Software version. The serial number can be found on the back of the desk; the software version is displayed on the menu prompt when the console is switched to System mode.

The latest version of this manual and Tiger Touch Software can be downloaded from the Avolites website.

**The small print :**

**No Liability for Consequential Damages**

Avolites has a policy of continuous product and documentation improvement. As such the detail within this manual may not match the operation of the Tiger Touch.

In no event shall Avolites be liable for any direct, indirect, special, incidental, or consequential damages or loss whatsoever (including, without limitation, damages for loss of profits, business interruption, or other pecuniary loss) arising out of the use or inability to use the Tiger Touch even if Avolites Ltd. has been advised of the possibility of such damages. Because some jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, the above limitation may not apply to you.

Avolites Ltd recognise that all trademarks within the manual are the property of their respective owners.

Reprint and revision history:

First produced October 2009

Revised for v3 March 2010 by TM

Copyright Avolites Limited 2010

This manual was written by Tim Mitchell, Sabre Technology Ltd  
<http://www.sabretechnology.co.uk>

## SECTIONS

<b>1. SETTING UP THE CONSOLE</b>	<b>13</b>
<b>2. PATCHING</b>	<b>27</b>
<b>3. CONTROLLING DIMMERS AND FIXTURES</b>	<b>37</b>
<b>4. PALETTES</b>	<b>49</b>
<b>5. SHAPES</b>	<b>57</b>
<b>6. CUES</b>	<b>63</b>
<b>7. CHASES</b>	<b>75</b>
<b>8. CUE LISTS</b>	<b>85</b>
<b>9. RUNNING THE SHOW</b>	<b>97</b>
<b>10. REMOTE CONTROL</b>	<b>101</b>
<b>11. USER SETTINGS AND OTHER OPTIONS</b>	<b>107</b>
<b>12. WORKING WITH FIXTURE PERSONALITIES</b>	<b>125</b>
<b>13. NETWORKING</b>	<b>129</b>
<b>14. TIGER TOUCH FOR AVOLITES USERS</b>	<b>141</b>
<b>15. RELEASE NOTES</b>	<b>145</b>
<b>16. GLOSSARY OF TERMS</b>	<b>155</b>

Copyright Avolites Limited 2010

## CONTENTS

<b>1.</b>	<b>Setting up the console</b>	<b>13</b>
1.1	Guide to the console .....	13
1.2	Connecting up .....	16
1.2.1	Connecting mains power .....	16
1.2.2	Starting up and shutting down .....	16
1.2.3	Connecting DMX lines .....	16
1.2.4	Connecting a VDU monitor .....	17
1.2.5	Other connections .....	17
1.3	Using the touch screen and VDU .....	18
1.3.1	Workspace windows .....	18
1.3.2	The menu area of the touch screen .....	20
1.3.3	The toolbar .....	21
1.3.4	The Heads-Up Display (HUD) .....	23
1.3.5	Visualiser .....	23
1.3.6	Key profiles .....	24
1.3.7	Key macro buttons .....	24
1.3.8	The Tiger Touch Titan application .....	24
1.4	Loading and saving shows .....	25
1.4.1	Manual save and load .....	25
1.4.2	Autosave .....	26
1.4.3	Backing up existing show files to USB pen drive .....	26
1.5	Clearing the console .....	26
<b>2.</b>	<b>Patching</b>	<b>27</b>
2.1	Create .....	27
2.1.1	Fixture select buttons .....	27
2.1.2	Patching dimmers .....	28
2.1.3	Patching moving light fixtures .....	28
2.1.4	Visualiser Auto Patch .....	30
2.2	Edit .....	31
2.2.1	Changing the DMX address of a fixture .....	31
2.2.2	Setting legends .....	31
2.2.3	View Fixture Patch .....	32
2.2.4	Fixture Exchange .....	32
2.2.5	Update personalities .....	33
2.3	Copy and Move .....	34
2.3.1	Copying or moving a patched fixture .....	34
2.3.2	Using copied fixtures .....	34
2.4	Delete .....	34
2.4.1	Deleting a patched fixture .....	34
2.5	Advanced options .....	35
2.5.1	Swap pan and tilt .....	35
2.5.2	Invert attributes .....	35
<b>3.</b>	<b>Controlling dimmers and fixtures</b>	<b>37</b>
3.1	Create .....	37
3.1.1	Selecting fixtures and dimmers for control .....	37
3.1.2	Setting fixtures to a start position .....	38
3.1.3	Clearing selection .....	38
3.1.4	Changing attributes using the wheels .....	39
3.1.5	Setting attributes using the touch screen .....	41
3.1.6	Setting attributes by number .....	42
3.1.7	Selecting fixtures and dimmers by number (Channel) .....	42
3.1.8	Selecting using a pattern .....	43
3.1.9	Attribute groups - IPCGBES .....	44
3.1.10	Using fixture groups .....	44
3.1.11	Stepping through selected fixtures one at a time .....	45
3.1.12	Highlighting the selected fixture .....	45
3.1.13	Align fixtures .....	46
3.1.14	Flip .....	46
3.1.15	Fan mode .....	46
3.2	Edit .....	47
3.2.1	The Channel Grid window .....	47
3.3	Advanced options .....	48
3.3.1	The Fixture Tools / Menu Latch button .....	48

<b>4.</b>	<b>Palettes</b>	<b>49</b>
4.1	Create .....	49
4.1.1	Palette values stored as a reference .....	49
4.1.2	Which attributes are stored in palettes .....	49
4.1.3	Storing a palette .....	50
4.1.4	Quick record .....	51
4.2	Playback .....	51
4.2.1	Recalling a palette value .....	51
4.2.2	Palette pages .....	52
4.2.3	Quick palettes with no fixtures selected .....	52
4.2.4	Setting palettes to fixtures in a playback .....	52
4.3	Edit .....	52
4.3.1	Editing palettes .....	52
4.3.2	Setting legends for palettes .....	53
4.4	Copy and Move .....	53
4.4.1	Copying or moving a palette .....	53
4.5	Delete .....	54
4.5.1	Deleting palettes .....	54
4.6	Timing .....	54
4.6.1	Fading a palette and fixture overlap .....	54
4.6.2	Master Time for palettes .....	54
<b>5.</b>	<b>Shapes</b>	<b>57</b>
5.1	Playback .....	58
5.1.1	Creating a shape .....	58
5.1.2	Changing size and speed of a shape .....	59
5.1.3	Changing the phase of a shape across multiple fixtures .....	59
5.2	Edit .....	60
5.2.1	Editing shapes which are running .....	60
5.2.2	Reversing a shape .....	61
5.3	Delete .....	61
5.3.1	Deleting shapes .....	61
5.4	Advanced options .....	61
5.4.1	Shape fade mode .....	61
<b>6.</b>	<b>Cues</b>	<b>63</b>
6.1	Create .....	63
6.1.1	How the Tiger Touch works when programming .....	63
6.1.2	Creating a cue .....	64
6.1.3	Using shapes in cues .....	64
6.2	Playback .....	65
6.2.1	HTP and LTP .....	65
6.2.2	Playing back a cue .....	65
6.2.3	Changing playback pages .....	66
6.2.4	Releasing running playbacks .....	66
6.3	Edit .....	66
6.3.1	Editing a cue .....	66
6.3.2	Playback and Cue view .....	67
6.3.3	The Include function .....	68
6.3.4	Removing attributes from cues using "Off" .....	69
6.4	Copy, Move and Link .....	69
6.4.1	Copying or moving a cue .....	69
6.5	Delete .....	70
6.5.1	Deleting a cue .....	70
6.6	Timing .....	70
6.6.1	Setting fade times and Overlap for a cue .....	70
6.6.2	Changing fixture order .....	72
6.6.3	Setting attribute fade times for a cue .....	73
6.7	Advanced options .....	73
6.7.1	Release mask .....	74
6.7.2	Shape size/speed on fader .....	74
6.7.3	Curve .....	74
6.7.4	Handle Paging .....	74
6.7.5	Playback priority .....	74
6.7.6	Key Profile .....	74
<b>7.</b>	<b>Chases</b>	<b>75</b>



7.1	Create .....	75
7.1.1	Programming a chase .....	75
7.2	Playback .....	76
7.2.1	Playing back a chase .....	76
7.2.2	Connecting a chase for control .....	76
7.2.3	Setting speed and crossfade for a Chase .....	77
7.2.4	Manually controlling the steps of a chase .....	78
7.2.5	Changing chase direction .....	78
7.2.6	Jumping to a step .....	78
7.3	Edit .....	78
7.3.1	Opening a chase for editing .....	78
7.3.2	Editing a chase using Unfold .....	79
7.4	Copy, Move and Link .....	80
7.4.1	Copying or moving a chase .....	80
7.5	Delete .....	80
7.5.1	Deleting a chase .....	80
7.5.2	Deleting a step from a chase .....	80
7.6	Timing .....	81
7.6.1	Global timings for chases .....	81
7.6.2	Individual cue times in chases .....	82
7.6.3	Setting attribute fade times for a cue in a chase .....	83
7.7	Advanced options .....	84
7.7.1	Loop/Stop on Final Cue .....	84
7.7.2	Forwards/backwards/bounce/random .....	84
7.7.3	Cue linking .....	84
7.7.4	Renumber cues .....	84
<b>8.</b>	<b>Cue Lists</b> .....	<b>85</b>
8.1	Create .....	86
8.1.1	Programming a cue-list .....	86
8.1.2	Changing legends for cues in a cue list .....	87
8.1.3	Autoloading a playback within a cue list .....	87
8.2	Playback .....	88
8.2.1	Running a cue list .....	88
8.2.2	Killing a cue list .....	88
8.3	Edit .....	89
8.3.1	Editing a cue list using Unfold .....	89
8.3.2	Editing a cue list which is running .....	89
8.3.3	Editing a cue list while recording .....	90
8.4	Copy, Move and Link .....	90
8.4.1	Copying or moving a cue list .....	90
8.5	Delete .....	91
8.5.1	Deleting a cue list .....	91
8.5.2	Deleting a cue from a cue list .....	91
8.6	Timing .....	92
8.6.1	Time and fade options for Cue Lists .....	92
8.6.2	Cue linking & Link Offset .....	92
8.6.3	Individual attribute fade times .....	93
8.6.4	Fixture overlap .....	94
8.6.5	Running a cue list to timecode .....	95
8.7	Advanced options .....	95
8.7.1	Release mask .....	95
8.7.2	Fader mode .....	96
8.7.3	Handle Paging .....	96
8.7.4	Cue Options .....	96
8.7.5	Autoload .....	96
8.7.6	Key Profile .....	96
<b>9.</b>	<b>Running the show</b> .....	<b>97</b>
9.1	Playback .....	97
9.1.1	Back up the show .....	97
9.1.2	Operating modes .....	97
9.1.3	Master faders .....	97
9.1.4	Flash and swop buttons .....	97
9.1.5	Playback priority .....	98
9.1.6	Preset playbacks .....	98
9.1.7	Manual control during a show ("busking") .....	98
9.2	Workspaces on touch screen and VDU .....	99

9.2.1	View menu.....	99
9.2.2	Tiger Touch Titan application window .....	99
9.3	Organising the console .....	99
9.3.1	Using the Move function.....	99
<b>10.</b>	<b>Remote control</b> .....	<b>101</b>
10.1	Setting up the remote .....	101
10.1.1	Network setup .....	101
10.1.2	Console setup.....	102
10.2	Operating the remote.....	103
10.2.1	Keypad.....	103
10.2.2	Fixture List.....	104
10.2.3	Playback List .....	104
10.2.4	Settings screen.....	105
10.3	Troubleshooting .....	105
<b>11.</b>	<b>User Settings and other options</b> .....	<b>107</b>
11.1	Configuring the Workspace .....	107
11.1.1	Opening workspace windows .....	107
11.1.2	Selecting and positioning workspace windows .....	107
11.1.3	Saving workspaces.....	108
11.1.4	Compatibility view.....	108
11.1.5	Configuring an external monitor.....	109
11.2	Key Profiles .....	111
11.2.1	Creating and editing key profiles .....	111
11.2.2	Selecting a key profile .....	112
11.2.3	Individual Key profiles for playbacks.....	112
11.3	The System menu .....	112
11.3.1	Avotalk Security.....	112
11.3.2	Network Settings .....	112
11.3.3	User Settings.....	112
11.3.4	Key Profiles .....	113
11.3.5	Wipe.....	113
11.3.6	Display Setup .....	114
11.4	VDU Tools menu.....	114
11.4.1	Virtual Panel.....	114
11.4.2	Visualiser .....	114
11.4.3	VDU User settings .....	114
11.4.4	Factory settings .....	116
11.4.5	Exchange fixture .....	117
11.4.6	Setup DMX outputs .....	117
11.4.7	Hotkeys .....	117
11.5	Curves.....	117
11.6	Upgrading the software .....	121
11.7	Recovering/reinstalling the system.....	121
11.7.1	Bootng from USB recovery stick.....	121
11.7.2	Installation Instructions .....	122
11.7.3	After Installation .....	122
11.7.4	Front panel button mapping for BIOS.....	122
<b>12.</b>	<b>Working with Fixture Personalities</b> .....	<b>125</b>
12.1.1	Downloading fixture personalities from Avolites.....	125
12.1.2	Updating the personality cache on the console .....	126
12.1.3	Requesting a new fixture personality .....	126
12.1.4	Reporting a personality bug to Avolites .....	126
12.1.5	In an emergency.....	126
<b>13.</b>	<b>Networking</b> .....	<b>129</b>
13.1	Setting the Tiger Touch's IP address.....	129
13.1.1	Setting IP address.....	129
13.2	Setting up DMX outputs.....	129
13.2.1	Setup DMX outputs screen .....	130
13.3	ArtNet.....	131
13.3.1	A simple ArtNet system.....	131
13.3.2	Setting up an ArtNet system.....	132
13.3.3	Additional ArtNet Resources.....	133
13.4	Connecting to a simulator with ACDI .....	133
13.4.1	ACDI .....	133

13.5	Module Setup.....	135
13.5.1	Installing additional Modules.....	135
13.6	AvoTalk.....	135
13.6.1	Example AvoTalk setup.....	136
13.7	All about IP addressing.....	137
13.7.1	Setting your IP address.....	137
13.7.2	Subnet Masks.....	138
13.7.3	Choosing an IP address and Subnet Mask.....	138
13.7.4	Automatically assigning IP addresses (DHCP).....	139
13.7.5	Private IP address ranges.....	139
13.8	Repairing a Network Connection .....	139
<b>14.</b>	<b>Tiger Touch for Avolites users</b>	<b>141</b>
14.1	The controls and screen.....	141
14.2	New programming features .....	142
<b>15.</b>	<b>Release notes</b>	<b>145</b>
15.1	Version 3.0.....	145
15.1.1	Upgrading from: 2.0:.....	145
15.1.2	New features in v3.0 .....	145
15.1.3	Improvements in v3.0 .....	150
15.1.4	Changes in v3.0.....	152
15.1.5	Bugs fixed in v3.0 .....	153
<b>16.</b>	<b>Glossary of terms</b>	<b>155</b>


Copyright Avolites Limited 2010

# 1. Setting up the console

*This chapter contains: Connecting mains power, DMX lines, VDUs; configuring the console and the various VDU windows; guide to where everything is on the console; loading and saving shows.*

Welcome to the Avolites Tiger Touch console. This manual is a reference guide to all the functions of the console.

## 1.1 Guide to the console

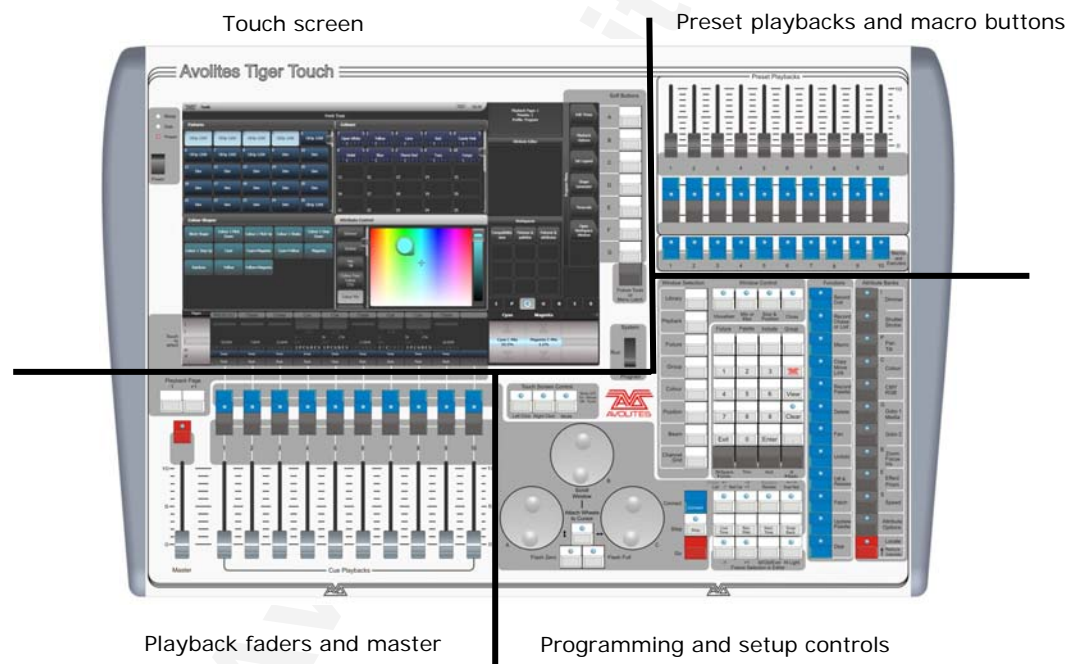


The Tiger Touch has four main control areas:

The **Touch screen** contains fixture, palette and group select buttons. It also shows legends for the playback faders and shows the current menu page and softkey buttons on the top right of the screen.

The **Playback faders** select and control cues and programs

The **Preset playbacks** give you additional (unpaged) playbacks and the **macro buttons** allow storage of frequent key sequences.


The **Programming and setup controls** configure and program the console

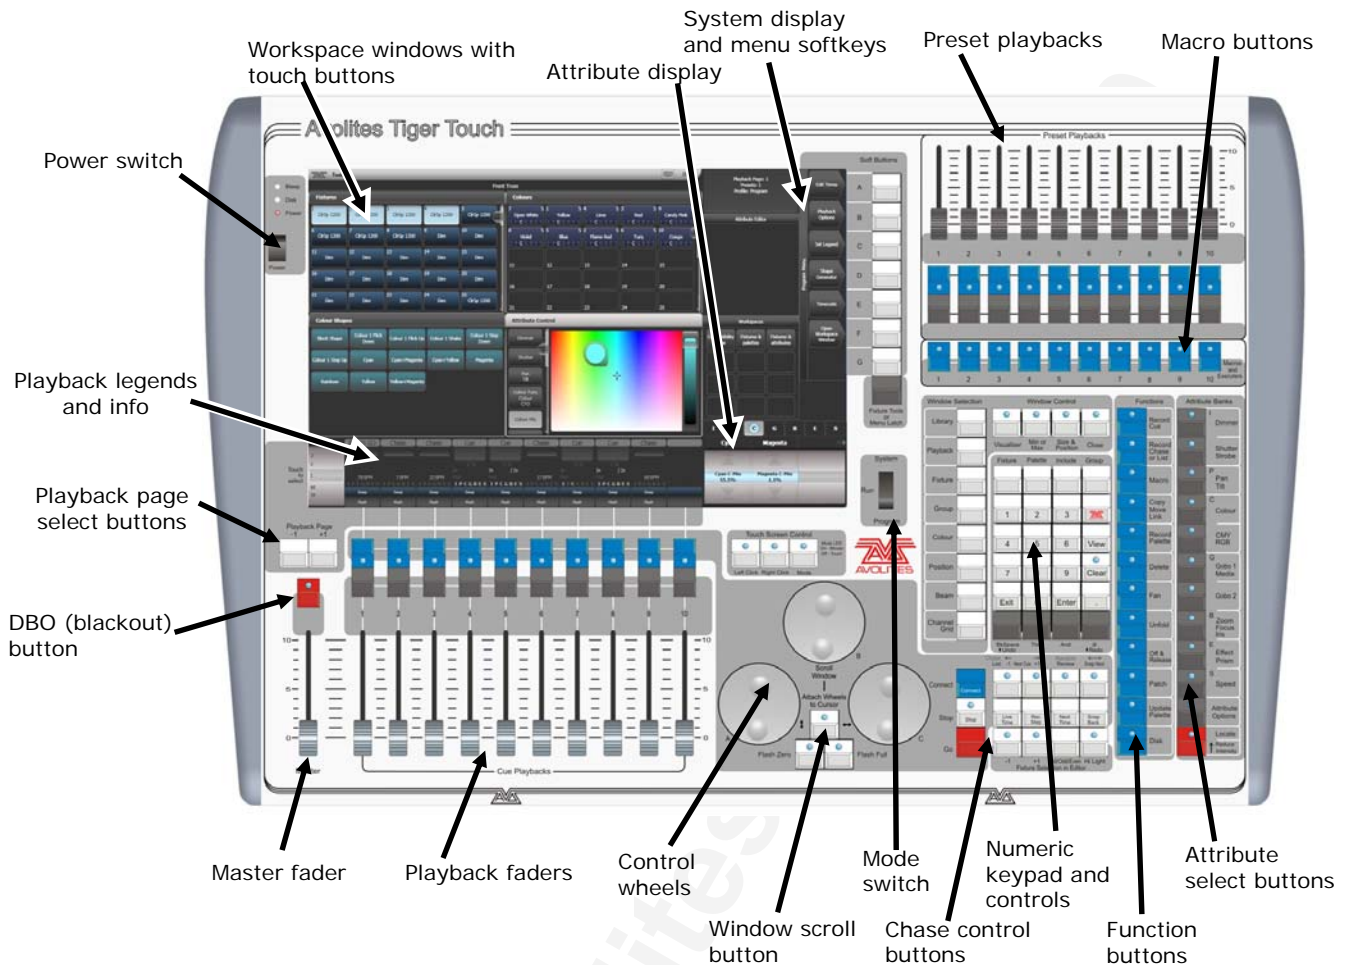

### The main controls

- The **Workspace windows** on the touch screen contain touch buttons for fixtures, palettes, groups, playbacks, macros and more. You can also set fixture attributes and show information windows.
- The **System display and menu** area of the touch screen is the nerve centre of the console and shows you what is going on. This part of the display shows various screens of information depending on what you are currently doing.
- The **Menu Softkeys** (labelled A – G) are used to select control options. The display next to the buttons shows what each one will do. The options for each key change depending on what the console is doing. Softkey commands are shown in the manual with square brackets like this: [Edit Times]
- The **Preset Playbacks** are used to store and play back cues or chases that you need frequently. These playbacks are not changed by the page select buttons.
- The **Macro Buttons** store frequently used sequences of keypresses which can be replayed with a single button press. Playbacks can also be stored here.
- The **Master fader** controls the overall output of the console. You will normally have this set at Full. The **DBO button** allows you to blackout the whole console.

- The **Playback faders** are used to store and play back cues or chases. The **Page Select buttons** let you change to a different page of playbacks. The touch screen above the faders shows information about each playback.
- The **Mode switch** selects Programming, Run or System modes of operation.
- The **Control wheels** are used to set control values (attributes) for the fixtures, and to set chase speeds and fades. The touch screen above the wheels shows information about the attributes being controlled. Press the **Window Scroll Button** to switch the wheels into scroll mode – this is used to move a selection box around the screen when editing.
- The **Numeric keypad** and other control buttons are used to enter values and change controls on the console.
- The blue **Function buttons** are used to carry out functions such as storing cues, copying, saving to disk, etc. These buttons have lights on to indicate when they are active.
- The **Attribute select buttons** are used to select which attributes of a fixture (e.g. colour, gobo, pan, focus) are going to be controlled using the Control wheels. The buttons have lights on to show you which attributes are active. The bottom (red) button allows you to locate fixtures, which sets them to a known start position while programming.

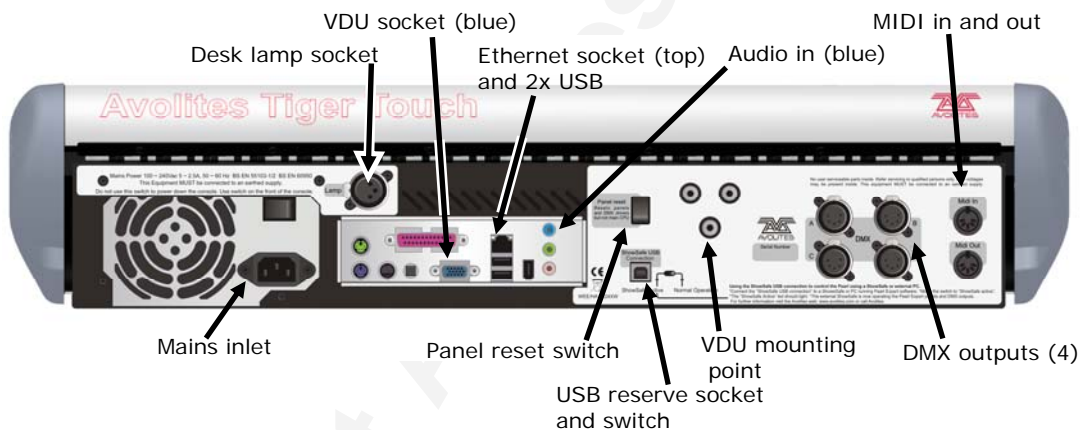

### The back panel

All the connections required for the console are found on the back panel. Most are self-explanatory.

- The Panel reset switch may be pressed to restart the front panel electronics if something odd happens with the switches and faders. The main board will continue running but the DMX output will be interrupted until the restart is completed.
- The USB reserve socket and switches are for future expansion. The switch should be set to "Normal operation".

## 1.2 Connecting up

### 1.2.1 Connecting mains power

You can safely connect the Tiger Touch to any voltage from 80 to 260V.

We recommend that you run the console from a computer UPS (uninterruptible power supply) . If the console unexpectedly loses power, you can lose data (up to the last Autosave) and the console may want to check its disks on startup which can cause delays. The UPS will protect you from most power problems and give you chance to shut down the console normally.

### 1.2.2 Starting up and shutting down

The Tiger Touch runs a Windows-based operating system internally, so you need to make sure it is shut down properly rather than just turning off its power.

**Start up** the console by pressing and releasing the Power switch at the left hand side of the touch screen. The console display and VDU screen (if you are using one) should come alive. The Tiger Touch takes about 1 min 30 seconds to start up.

**Shut down** the console by pressing and releasing the Power switch again. The console will perform a controlled shutdown. Wait until the Power light has gone off (about 30 seconds) before you disconnect power from the console.

To carry out a **Forced Shutdown** of the console, if the normal shut down does not work, hold down the power switch for 5 seconds. You will lose any changes to your show since the last save.

**Note:** Do not use the power switch on the rear of the console to switch off the console as this would not close down the console properly and you will lose any changes to your show.

### 1.2.3 Connecting DMX lines

The Tiger Touch communicates with lighting fixtures using the DMX512 system. It can produce 12 universes of DMX (each 512 control channels). It has 4 physical DMX outputs for direct connection to fixtures and dimmers, and can also send DMX over Ethernet and wireless Ethernet systems to allow connection to remote DMX Ethernet nodes and to the Avolites Console DMX Interface (ACDI) system which is used to connect visualiser applications.

When you patch a dimmer or fixture you tell the Tiger Touch which of the 12 DMX universes it is on. Each universe can be configured to come out of one or more of the 4 standard DMX outputs on the back of the console, or over an Ethernet protocol (see section 13 on page 129.)

The 4 standard DMX outputs come out of the 5 pin XLR sockets on the back of the console. They are wired like this:



Pin 1	Earth
Pin 2	Data -
Pin 3	Data +
Pin 4	Not used
Pin 5	Not used

Each DMX line should pass through all the fixtures to be connected on that line one after the other and have a DMX terminator fitted at the end (120 ohm resistor between pins 2 and 3). You should not split the DMX lines using passive splitters (Y-splitters) as this can corrupt the data.

#### 1.2.4 Connecting a VDU monitor

You can optionally connect a computer VDU monitor to the Tiger Touch, which plugs into the VGA port on the rear of the console. The monitor gives you extra screen space if you're running Visualiser on the console and can also give additional information about what the console is doing.

- The external VDU is disabled by default and will show a "disabled" message. To enable it, switch to System mode and select [Display Setup] then press [External Display Disconnected]. The option will change to [External Display Connected] and the display will be enabled.
- If you need to change the VDU resolution or settings, touch "Tools" at the very top of the touch screen and select "Control Panel", then "External Monitor", then select the option to match the resolution of your monitor.

There are more details about setting up an external monitor, including troubleshooting help, in section 11.1.5 on page 109.

#### 1.2.5 Other connections

You can connect an external keyboard and mouse to the pc connectors on the rear of the console if you don't like the touch keyboard which pops up on the touch screen. If you are using an external VDU you will need to connect a mouse.

The console provides MIDI connections which can be used to connect MIDI timecode to the console for timecode-controlled cue lists.

You can connect the console to a LAN (local area network) using the RJ45 socket on the rear. This allows you to link to a DMX-over-ethernet system.


A 3-pin XLR socket for a desk lamp is provided on the rear edge of the console. Suitable lamps are available from Avolites. The lamps are 12 volt, wired from pins 1 and 2 of the XLR.

## 1.3 Using the touch screen and VDU

The Tiger Touch has many useful features on its onboard display and on the VDU.

### 1.3.1 Workspace windows

The main area of the touchscreen contains the workspace windows. These contain touch buttons for selecting fixtures, groups, palettes, playbacks and so on. Information windows such as Playback View and the integrated Visualiser application can also appear as a workspace window.

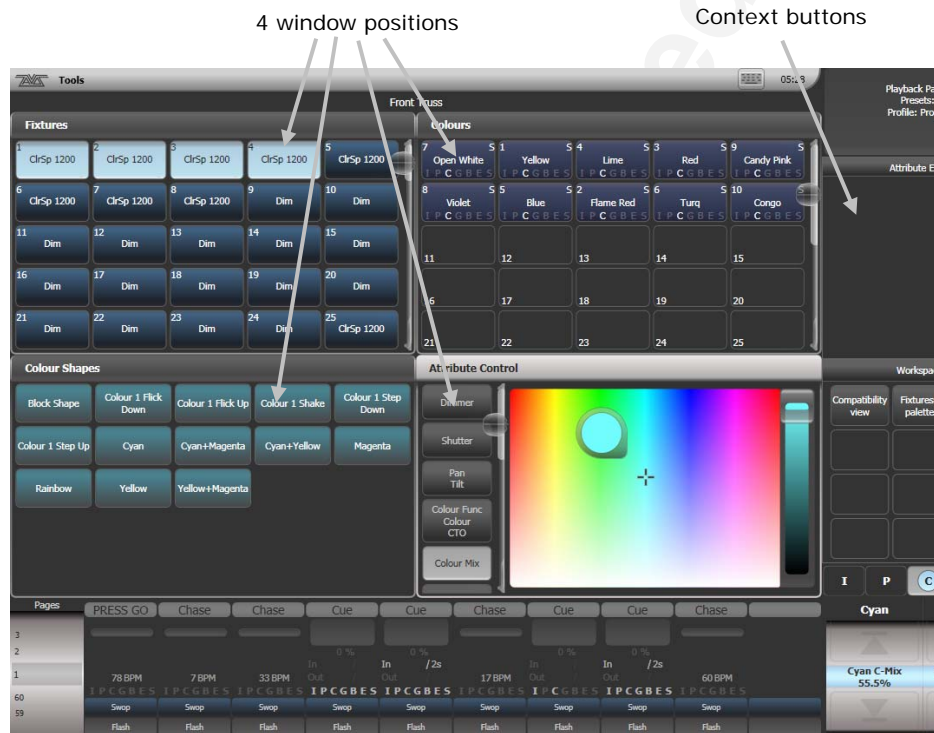

Up to 4 windows can be shown on the touch screen in a 2x2 grid, but if you need a larger view, you can make a window twice as big, or it can take up the whole area. You can also move windows to the external VDU screen which can show a further 4 windows. Some possible window sizes/positions are shown below.



Quarter size



Double wide



Double height



Maximised


Some windows have associated control buttons, these are positioned in the "context buttons" area as shown in the picture.

#### Selecting and positioning workspace windows

You select which workspace windows you want to see using the [Open Workspace Window] menu command on the root menu, or by pressing the Window Selection buttons just to the right of the touch screen.

You can change the positions and sizes of the windows by using the Window Control buttons above the numeric keypad. The min/max button swaps the active window between full screen and quarter size. The size/position button moves the active window around the possible positions. You make a window active by touching its header bar.

You can move the active window to the external VDU monitor by pressing Avo and the Size/Position button, or View then [Window Options] then [Move Screen]. If the window contains touch buttons, you can click them using the mouse trackpad on the keyboard.

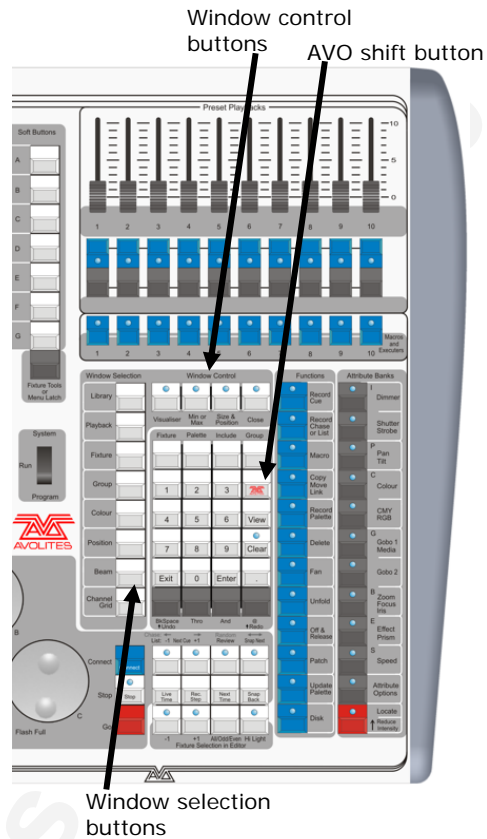

**Saving workspaces**

You can save different workspace setups to the Workspaces touch buttons (to the left of the menu) by pressing View then [Record Workspace], then touching one of the Workspaces buttons. This allows you to reconfigure the workspace at the touch of a button.

Workspaces are saved with the show.

Setting up and recording workspaces is described in more detail in section 11.1 on page 107.

**Quick record**


Some windows – Groups, Workspaces, Playbacks, and all the Palette windows - have a Quick Record function. Set up what you want to record, then touch or click the button once. The button will light up red with a + sign. At this point you can enter a legend. Touch or click again to store the item.



The Quick Record function can be disabled using Key Profiles (see section 11.2.1 on page 111).

### 1.3.2 The menu area of the touch screen

The right hand side of the touch screen is used for the operating menu display.

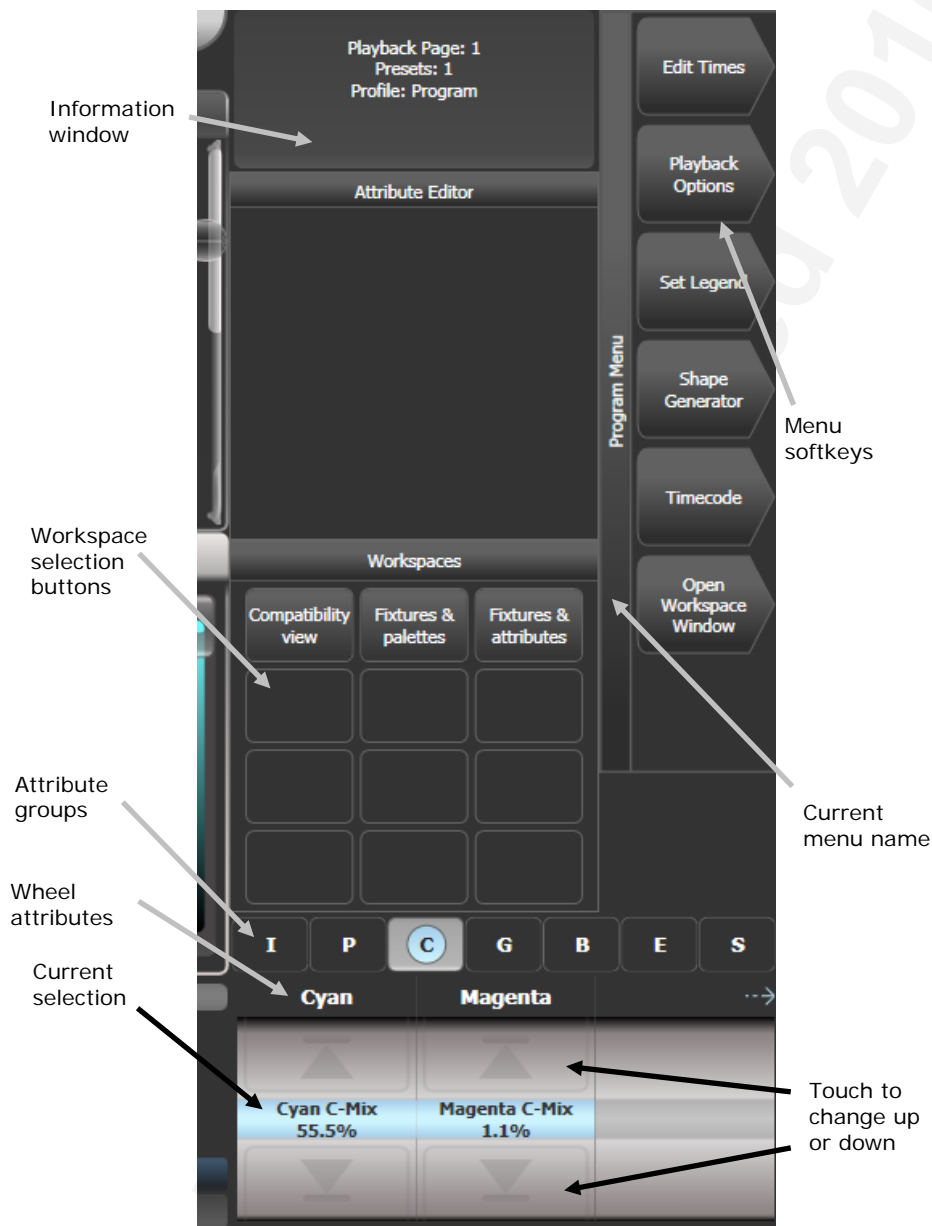

Down the right hand side of the screen, the functions of the A-G menu softkeys are listed. If there are more functions than will fit on one screen, [Previous] and [Next] buttons are provided to page through the functions. You can either press the real button or touch the key on screen.

The vertical bar to the left of the softkeys shows you which menu you are currently in. You can “latch” the menu (so that you don’t have to keep reselecting it) by pressing the Menu Latch button below G. The menu bar turns red when latched.


At the bottom of the screen, the current function of the wheels is shown. If fixture attributes are being set, this shows the possible settings which are available on the fixtures. Above the roller image a legend shows which attributes are being controlled by each wheel and

the centre of the roller shows the current attribute. If a chase is being controlled, information about the chase is shown here.


Above this, the screen shows which attribute group (Intensity, Position, Colour, Gobo, Beam, Effect and Special) is selected (grey box) and which are currently modified (blue circle).

The area at the top of the screen shows instructions to the user and information from the console.


The appearance of the softkeys varies to indicate the type of actions available:

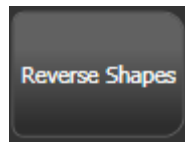

Action button: console will carry out the action shown

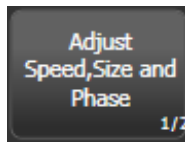

Option button: cycles through a range of options shown

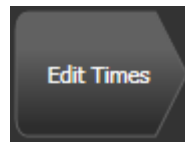

New menu button: jumps to a new menu



Text entry button: press and enter text using the touch keyboard

### 1.3.3 The toolbar

Across the very top of the touchscreen is the toolbar. If you touch at the left hand side on "Tools", you will get a menu giving you access to some configuration functions.

**About** gives you information about the software version.

**Help** shows you the online manual.

**Control Panel** opens a sub-menu allowing changes to monitor settings and to the USB expert console which links the front panel controls to the system. The "More..." option opens Windows Control Panel allowing you to change the operating system configuration.

**Touch Screen Setup** opens the setup utility for the touch screen which among other things allows you to align the touch positions.

**Usb Expert Console** sets up the connection between the front panel controls and the software. If you are having problems this can be used to troubleshoot.

**Folders** opens the file explorer. You might need this when backing up show files or when updating the operating software.

**Switch Task** allows you to show other programs (such as Titan, for setting up DMX outputs) on the touch screen or move them to the



external VDU screen. Touch the Switch Screen icon to swap the program between the touch screen and the external VDU. Touch the Centre icon to centre the window on the screen. Touch Close to close the program.



**Additional Programs** allows you to run some diagnostic programs which might help Avolites Support find problems you're having.

**Restart** and **Shutdown Software** restarts and closes the Titan and Tiger Touch software. You would normally only use these when upgrading the software.

At the right hand end of the toolbar is the keyboard popup button which will open the touch keyboard.



The touch keyboard can be switched between large and small size using the Max/Min button and you close it using the large X button in the top right hand corner. It can be set to pop up automatically when text input is required, using the Man/Auto button. You can also move it on the screen by touching and dragging the blank area of the keyboard at the top.

The small version of the keyboard (pictured) does not have some of the less frequently used buttons.




### 1.3.4 The Heads-Up Display (HUD)

The HUD window is shown as one of the workspace windows. You can move it between the touch screen and external monitor using the [Window Options] [Move Screen] command from the View menu. Most of the HUD information is already shown on the touch screen, but if you're used to using it on the Pearl Expert you might like to have it displayed.

Fixtures are highlighted in dark blue if in the programmer and in light blue if selected.



### 1.3.5 Visualiser

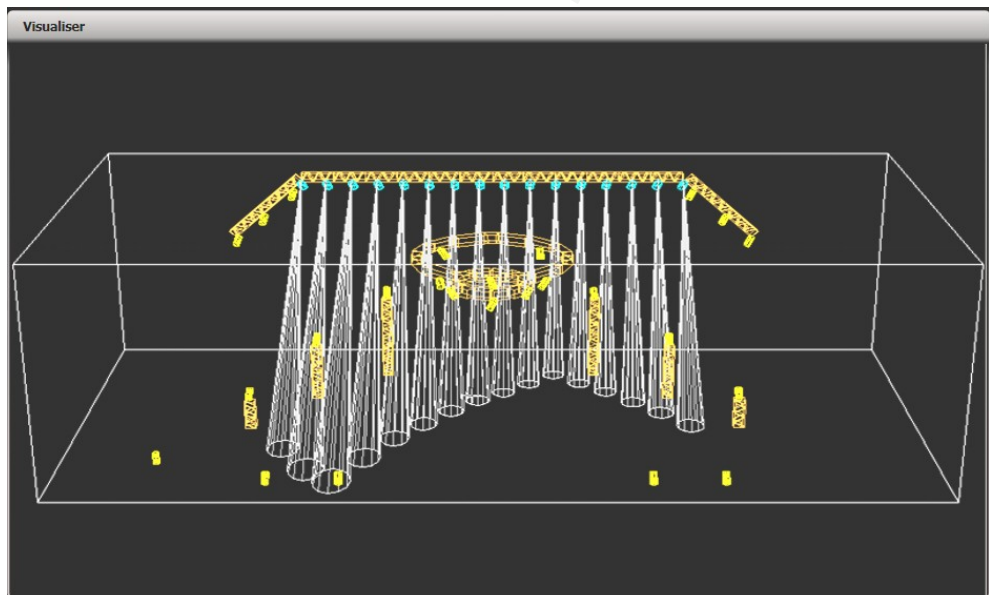

The Tiger Touch runs Avolites Visualiser internally. This allows you to view the output of the console if you can't use the real lights, enabling you to make changes to your show at home or in your hotel.

Visualiser is shown in a workspace window, either on the touch screen or on the external monitor. Press [Window Options] then [Move Screen] on the View menu to move it between the touch screen and external monitor.

Configuration buttons for Visualiser are provided in the context button area to the left of the menu buttons.

The operation of Visualiser is not covered in this manual, please refer to the Visualiser manual.

#### Auto Patch

The Auto Patch function automatically creates a Visualiser rig from your Tiger Touch show. When you start Visualiser, it will open with an automatic representation of your patch.

You will see the fixtures laid out on screen with 60 fixtures in a row, sorted by handle number.

The Visualiser will start in run mode, with the simulator tab selected so you can start controlling lights immediately.

Multiple dimmers patched to one handle will appear as a single fixture in Visualiser.

### Fixture selection

When a fixture is selected on the console, it is highlighted in blue in Visualiser.


### 1.3.6 Key profiles

The Tiger Touch allows you to change the function of the blue and grey panel buttons associated with the playback faders. You can also change the way some of the touch keys work. You can save your settings as a Key Profile. Different profiles can be selected for different users or to enhance the operation of the console for a particular use. See section 11.2 on page 111 for details.

### 1.3.7 Key macro buttons

Lighting programming can sometimes require a repeated sequence of button presses. You can record sequences of keypresses and play them back with a single keypress – this is called a macro.

Macros can be stored in the 10 dedicated buttons below the Preset Playbacks, and there is also a Macro window which can be shown in the workspace. The macro buttons correspond to the first 10 macros in the window.

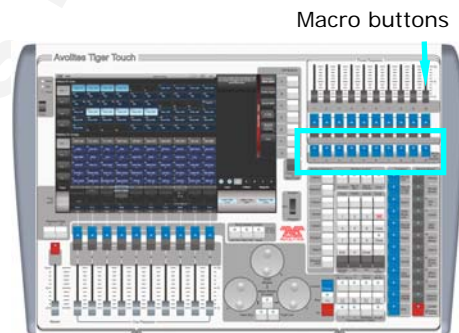

To record a macro:

- 1> Press the blue Record Macro button (to the right of the numeric keys).
- 2> Press [Record]
- 3> Press an empty Macro button, or touch an empty button on the touch screen. Recording starts. The Insert/Macro button flashes during recording.
- 4> Press the sequence of buttons you want to record.
- 5> Press Record Macro to finish recording.

To play back the macro, just press or touch the button where you recorded the macro. The macro will repeat all your button presses (with no delay or timing between the presses).

### 1.3.8 The Tiger Touch Titan application

The Pearl Expert Titan application is the “engine room” of the console. The main reason you will need to use it is to configure DMX outputs. Use the Tools → Switch Tasks menu to bring the application window in front of the touch button window.

Setting up DMX outputs is described in section 13.2 on page 129.




## 1.4 Loading and saving shows

You can save any number of different shows on a USB drive or the Tiger Touch's internal hard disk. The Tiger Touch will also autosave the show periodically.

**Note:** Tiger Touch shows can be transferred to Pearl Expert Titan consoles, but not to other Avolites consoles as the showfile format is different.

Although your show is safe on the console's internal hard disk, it's a good idea to also save it to a USB pen drive which you can take with you in case something bad happens to the console or if you want to transfer a show to a different console. USB drives are plugged into

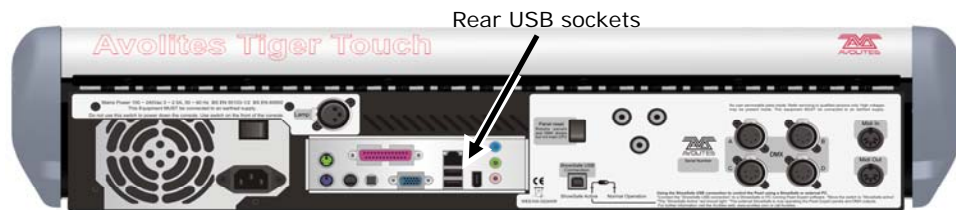

the rear USB sockets on the console.

### 1.4.1 Manual save and load

You can save your show at any time either with its current name or with a new name.

- 
- 1> Press the blue Disk button (bottom right).
  - 2> Press [Save Show].
  - 3> If you have a USB drive connected, use the softkeys to select whether to save on [Removable Disk] or [Internal hard drive].
  - 4> Enter a name for the show on the keyboard (the screen shows a list of shows which already exist).
  - 5> Press Enter or [Save] (or [Overwrite] if the show already exists). The show will be saved.
  - 6> Press Exit or [OK] to leave Disk mode.
- 

If you save to hard drive, shows are saved in the C:/Program Files/Avolites/Titan/ShowData folder, unless you change this in the User Settings.

The Tiger Touch will automatically load the last show when it is turned on.

If you want to load a different show:

- 
- 1> Press the blue Disk button.
  - 2> Press [Load Show].
  - 3> If you have a USB drive connected, select which drive you want to load from.
  - 4> Available shows are listed on the softkeys; press the key to load the show (the F and G keys show more pages). If you type the first few letters of the show name on the touch keyboard, the

*list will only include shows starting with those letters, which can make it easier to locate the show you want.*

*5> Press Exit to leave Disk mode.*

---

You can save any number of different shows on the Tiger Touch's internal hard disk.

#### **1.4.2 Autosave**

The Tiger Touch will automatically save your show to its internal hard disk when you shut it down. It will also autosave the show every 30 minutes in case the console loses power. The time remaining to the next auto save is shown on the status bar of the Titan application.

You can disable Autosave or alter the time between saves using option [Auto Save] on the Disk menu (selected using the blue Disk button). Softkey A enables or disables autosave and Softkey B sets the time between saves. We recommend that you have autosave enabled while programming in case the console power fails, but disable it while running a show as it can cause the console to pause slightly at inconvenient moments.

#### **1.4.3 Backing up existing show files to USB pen drive**

If you just want to save a copy of your current show, you can use the normal save function to save it to the USB drive instead of the hard drive.

To copy an existing show file on the hard disk to a USB drive, first ensure your current show is saved, then use the Disk functions to load the existing show from hard disk, then save it to the USB drive.

### **1.5 Clearing the console**

When you start a new show on the Tiger Touch it is usually a good idea to clear the console. All programming and patching is deleted, but user options are not changed.

---

*1> Press the blue Disk button.*  
*2> Press [New Show].*  
*3> Press [OK] to confirm.*  
*4> Press Exit to leave Disk mode.*

---

- There is also an option [Wipe] in the System menu (when the key is turned to System) which has the same function, and is located in the same place as on other Avolites consoles.

## 2. Patching

*This chapter contains: patching dimmers; patching moving light fixtures; checking the patching; changing the DMX address; deleting a patched fixture; patching options.*

Patching is the process where you tell the Tiger Touch

- What type of lighting units you have connected to it
- What DMX addresses they are operating at
- Which DMX line (universe) each unit is connected to (there are 12)
- Which fixture buttons on the touch screen you want to use to access them

You should normally plan out the lighting rig in advance to allow the DMX addresses on your fixtures to be set up before they are rigged. The easiest way to do this is to patch the fixtures on the console, then read off the DMX addresses from the console (using the Fixture Patch view) and use them to set up the addresses on the actual fixtures.

Alternatively you can allocate the DMX addresses to the fixtures yourself, and set up the console to match.

The Tiger Touch's System/Run/Program switch must be set to Program before you can patch.

### 2.1 Create

#### 2.1.1 Fixture select buttons

To control intelligent fixtures or dimmer channels, they must be patched to a fixture button in the Fixtures workspace window on the touch screen.

If the Fixtures window is not shown, press the Fixtures button to the right of the screen to show it.

Fixture buttons can be shown either in pages with Page buttons, or you can use the scroll bar to show different pages. Use the [Pages Show/Hide] touch button on the right of the screen to select between page buttons and scrolling mode. on the left of the screen. You can change the fixture page at any time.

The Tiger Touch also allows you to allocate fixtures and dimmers to Groups, which allows you to quickly select a set of fixtures with one button touch. Groups are described in the next chapter.



### 2.1.2 Patching dimmers

Each fixture button can control single or multiple dimmer channels.

- 1> Press Patch (one of the blue function buttons bottom right), then [Dimmers].
- 2> Softkey A [DMX Line=] shows you which of the 12 DMX output lines you are patching onto. Press A then enter a new number (1-12) to change the line. Softkey B shows the DMX address about to be patched. You can change this by pressing B [Address=xx], typing in the new address on the numeric keypad and pressing Enter.
- 3> To patch a single dimmer, touch a Fixture Select button. To patch a sequence of dimmers each to its own button, touch and hold the Select button for the first dimmer in the range, then touch the last Select button in the range, then release the first button (or you can sweep your finger along the range). The range of dimmers will be patched to sequential DMX addresses.
- 4> The Select buttons turn dark blue to show that they are patched.
- 5> Repeat from step 2 for other dimmers.



- When setting the DMX address using Softkey B, you can set the DMX line (universe) as well by entering {line}.{DMX}, for example 2.56 will set DMX address 56 on DMX line 2.
- To see how DMX channels are patched, press View (next to the numeric keypad) then [Fixture Patch]. The fixture patch view is described in section 2.2.3 on page 32.
- C [User Number = xx] allows you to set a user-defined number for each dimmer or fixture patched, to help you identify them later. You can also edit the User Number from the Repatch Fixture menu.
- You can patch multiple dimmer channels to a single handle. This can be useful if, for example, you want to control all the lights for one area together. To do this, just press the same Fixture Select button again when patching the new dimmer channel. You can tell the dimmer channel has patched OK because the DMX address will increase by 1.

### 2.1.3 Patching moving light fixtures

Moving light fixtures are more complicated to patch than dimmers because they have more attributes to control, such as pan, tilt, colour etc., whereas a dimmer channel just has intensity.

The Tiger Touch uses a "personality" system to control fixtures. This means you don't have to know how each fixture works, you just tell the Tiger Touch what you want to do and it will send the right control commands. There is a personality file in the Tiger Touch for most types of fixture, which tells it what attributes are available and how to control them. If the Tiger Touch does not have the personality for

your fixture, you can download further personalities from the Avolites website or Avolites can create one for you. See section 12 on page 125 for details of how to find personalities.

1> Press Patch (bottom right of console).

2> Press [Fixtures].

3> Select correct fixture manufacturer from the softkeys ([Previous] and [Next] page through the list of manufacturers). Or use Quick Search and type the first few letters of the manufacturer's name on the keyboard to find the one you want.

4> Select correct fixture from the softkeys (F and G show other pages). You can use Quick Search here as well.

5> Select the correct fixture operating mode from the softkeys.



6> Softkey B shows the first free DMX address. Type the new address on the numeric keypad if you want a different one. Press A [DMX line=xx] to patch to a different DMX line, or you can enter the address as [line].[address], e.g. 2.45 would set address 45 on line 2.

7> Touch a Fixture Select button to patch the selected fixture.

8> The Select button will turn dark blue to show that it is patched.

9> Repeat from 7 to patch more of the same fixture type. The DMX address automatically updates so you can just keep patching by pressing Select buttons.

- You can patch a range of fixtures by sweeping your finger across the buttons, or by touching and holding the first button, then touching the last button, then releasing the first button, in the same way as for dimmers.

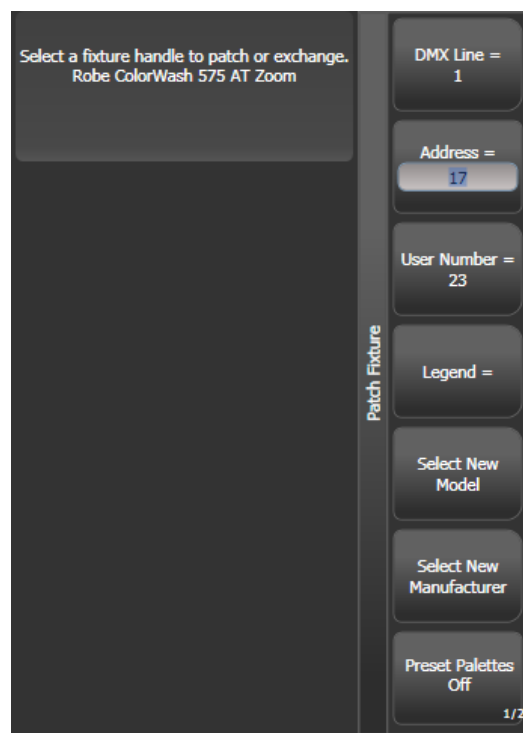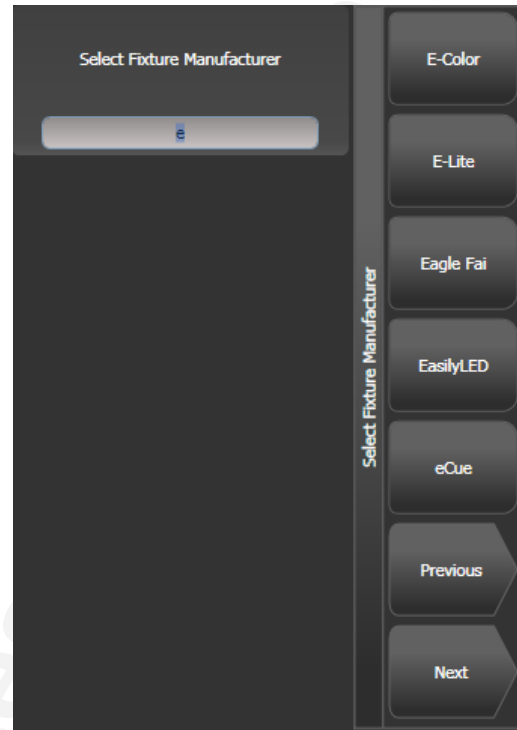

- You cannot patch more than one fixture onto a button. If the button is already used, the patch will fail.
- If you are patching a fixture which uses a separate dimmer channel, such as a VL5, you can patch the dimmer channel onto the same handle as the moving light part of the fixture so you can control it all together. This is called a Pending Dimmer.
- [Preset Palettes] sets whether the console will create default colour, gobo and position palettes for the new fixture. These are assigned to palette handles 1-30.
- You can use the View > DMX option on the VDU screen to show the DMX address for fixtures, or the View [Fixture Patch] screen on the console.
- If a patch goes over the capacity of a DMX line, the Tiger Touch will patch at the beginning of the next line. For example if you try to patch a Mac500 at channel A510, it will actually be patched at B1.

#### 2.1.4 Visualiser Auto Patch

If you want to use Visualiser, start it by pressing the Visualiser button above the numeric keys, or press View then [Open Workspace Window] then [Visualiser]. Visualiser will open in one of the workspace windows with an automatic representation of your patch.

You can move Visualiser to the external VDU monitor by holding Avo and pressing Size/Position, or by pressing View then [Window Options] then [Move Screen].

You will see the fixtures laid out on screen in handle number order.

## 2.2 Edit


### 2.2.1 Changing the DMX address of a fixture

You can re-patch a fixture to a different DMX address or a different DMX output line. All programming is kept.

- 1> Press Patch (if you're not already in Patch mode).
- 2> Press [Repatch Fixtures].
- 3> Touch the Select button of the fixture you want to change.
- 4> To change DMX press [Address], type the new address and press enter. If this address is already in use, a warning icon will be shown.
- 5> To change the DMX output line, press [DMX Line=x] and enter a new output line number 1-12.
- 6> Press Enter or [Repatch] to confirm the change.
- 7> Repeat from step 3 if you want to change other fixtures.



- You can "Park" the fixture using [Park]. This removes the fixture from the DMX output map, but all programming is retained.
- If the new DMX address already has another fixture or dimmer patched on it, the console will warn you (unless this is disabled in User Options, see section 11.3.3 on page 112). You can either press [Select another DMX address] to abort the change or [Park Conflicting Fixtures]. All programming for the parked fixture is preserved, but you need to repatch it to a free DMX address using the above procedure before you can use it again. If you press [Always Park Conflicting Fixtures] the console will park this and any future conflicting fixtures without warning you. (You can change this option back in the User Settings).

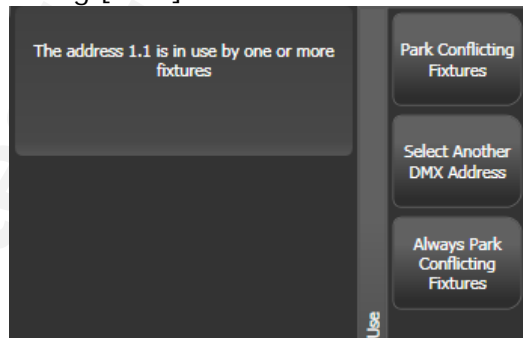

### 2.2.2 Setting legends

You can set a legend for each fixture or dimmer you've patched which is displayed in the Fixture Select touch button. This can be really useful to help you identify the fixture.

- 1> At the main menu press [Set Legend].
- 2> Touch the Select button for the fixture you want to legend.
- 3> Type the legend on the touch keyboard.
- 4> Press Enter when you have finished.

- You can set the same legend for multiple fixtures by selecting a group of fixtures after pressing [Set Legend].
- You can automatically allocate User Numbers for multiple fixtures by selecting a group of fixtures, then using softkey A on the Set Legend menu. The first fixture will have the User

Number you entered, and the other selected fixtures will be given a number increasing by 1 for each fixture.

- You can set a legend for the current page of fixtures using the [Set Legend] function from the main Program menu. The legend is shown on the touch button for the page and on the HUD.

### 2.2.3 View Fixture Patch

The fixture patch view allows you to see and edit how fixtures are patched on the console.

To open the fixture patch view, press the white View button (next to the numeric keypad) followed by [Fixture Patch]. You will get a table on the touch screen showing all your fixtures. The list of fixtures can be filtered by typing in a search term on the keyboard. You can also use the wheels to scroll around the list and select different fixtures, or touch the list or one of the fixture buttons. As you select a fixture its button will be highlighted in red.


You can edit the selected item by pressing [Edit]. This option toggles between [Edit] and [Search] modes.

- Please note that some values are input in the following form:
  - Handle Number: {Page} . {Index}
  - DMX address: {Universe} . {Address} .
- You can choose which columns are displayed by pressing [Columns] and choosing which columns to hide or show.
- You can Park a fixture by moving to its DMX address and deleting the address using the left arrow key (or backspace on the keyboard).

### 2.2.4 Fixture Exchange

The Fixture Exchange function enables you to repatch fixtures in your show using alternative fixtures, retaining important elements such as cue times, shapes and legends. This is very useful for touring shows and venues with a high turnover of events.

For example, if you have programmed your show in a venue which has MAC 500s and are moving to a venue with VL6s you can exchange the MAC 500s for VL6s whilst retaining many elements of your show.

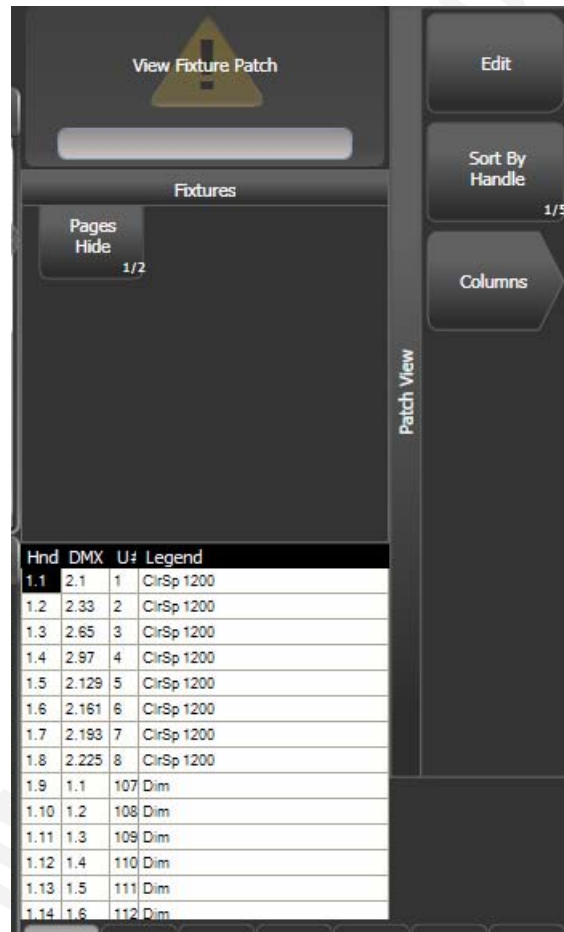



Fixture Exchange works best if you use Palettes to create your cues. This allows you to adjust for position differences and so on by reprogramming a few position palettes, rather than having to reprogram every cue. Cues recorded with absolute values will need to be re-recorded, preferably using palettes.

The pan, tilt and dimmer will always be preserved from one fixture type to the next, as will times, shapes and legends for recorded items. Links from the palettes to groups, cues, chases and cue lists will also be preserved, so the show can be easily recreated by updating your palettes as normal.

Fixture exchange also gives you a powerful way to re-use an existing show with new lights, so you can give yourself a programming head start when faced with a new fixture.

- It's a good idea to save your show before performing major changes such as fixture exchange. Should you change your mind or have problems, you will easily be able to return your show to its previous state.

- 
- 1> *Enter patch mode by pressing Patch.*
  - 2> *Select the new fixture type you wish to use.*
  - 3> *Touch the select button of the fixture which is to be exchanged.*
  - 4> *The console will warn you that the fixture is in use. Press the [Exchange Fixture] option.*
  - 5> *Repeat from step 3 to exchange other fixtures with the same type of new fixture.*
- 

**Note:** After exchanging fixtures you need to update the palettes which used those fixtures. If you have trouble switching values off in a palette, set new values for all the attributes in the attribute group and re-record the palette. You should then be able to switch off an attribute group as required.

### 2.2.5 Update personalities

This option allows you to update the personality for a fixture used in your show. Normally the fixture personality is saved in the showfile, so updating the personality library on the console would not update fixtures which are already patched.

- It's a good idea to save your show before using Update Personalities, then you will be able to undo any changes if you change your mind or have problems.

- 
- 1> *Enter patch mode by pressing Patch.*
  - 2> *Press [Update Personality].*
  - 3> *The console shows you a list of personalities used in the show which can be updated.*
  - 4> *Press the personality you want to update.*
- 

- The new personality is loaded from the Titan/Personalities folder.

## 2.3 Copy and Move

### 2.3.1 Copying or moving a patched fixture

Using the Copy/Move/Link button you can make a copy of an existing fixture or move it to a new button. You cannot link fixture buttons. You can copy or move multiple fixtures in one operation.

Move is useful for tidying up the console.

- 
- 1> *Press the blue Copy/Move/Link button.*
  - 2> *Select [Copy] or [Move]. Pressing the Copy/Move/Link button again will also toggle through these options.*
  - 3> *Touch the Select button of the fixture you want to copy/move. You can select multiple fixtures by sliding your finger across the buttons.*
  - 4> *Touch the empty Select button where you want it to go.*
- 

- The Menu Latch button latches the Copy/Move/Link menu, so you can keep copying or moving things without having to keep pressing the Copy/Move/Link button. Press again to unlatch.
- The [Retain Layout] or [Bunch Up] option is used when copying a group of fixtures with empty handles in the group – you can either keep the empty handles, or bunch up the used handles together.
- When in Copy mode, option [Copy Legends] can be changed to [Don't copy legends] so that the copied fixtures are given default legends.
- When in Move mode, [Swap Items if Required] will attempt to reposition any existing handles which are in the way of the move. This is useful when rearranging buttons on a page which is nearly full.

### 2.3.2 Using copied fixtures

Fixture copying is very useful if you need an additional fixture of a type you've already patched and programmed. The new copy will come complete with all the cues and palettes of the original fixture you've copied.

The copied fixture will be "Parked" (have no DMX channel allocated) and you will need to repatch it before you can use it (see section 2.2.1 above).

## 2.4 Delete

### 2.4.1 Deleting a patched fixture

You can delete a fixture or dimmer from a button if you patched it accidentally or if you change your rig and want to use the button for something else.

- 
- 1> *Enter Patch mode by pressing the Patch button.*
  - 2> *Press the blue Delete button.*
  - 3> *Touch the Select button of the fixture you want to delete.*
  - 4> *The fixture will light up red and the console asks for confirmation. Touch the Select button again to confirm.*
-

- All programming for the fixture is also deleted. You cannot undo deletion of a fixture or get the programming back by repatching a fixture to the same handle.

## 2.5 Advanced options

### 2.5.1 Swap pan and tilt


This allows you to make the pan channel control tilt and the tilt control pan. This is useful for moving-mirror fixtures rigged sideways.

- 
- 1> Press Patch.
  - 2> Press [Edit Fixtures]
  - 3> Press [Swap Pan and Tilt].
  - 4> Select the fixtures to be pan-tilt swapped. Press [Pan and Tilt ...] to select either [Swapped] or [Normal] for the selected fixtures.
  - 5> Press Exit when finished.
- 

### 2.5.2 Invert attributes

This option inverts individual attributes of fixtures. Useful if you have a fixture which pans right when the rest pan left, saving a trip up the rig to set fixture options, but you can invert any attribute.

- 
- 1> Press Patch.
  - 2> Press [Edit Fixtures].
  - 3> Press [Invert Attribute]
  - 4> Select fixture(s) to be changed.
  - 5> Select the attribute to invert from the softkeys. The display shows [Inverted] when the attribute is inverted.
  - 6> Press Exit to finish.
- 

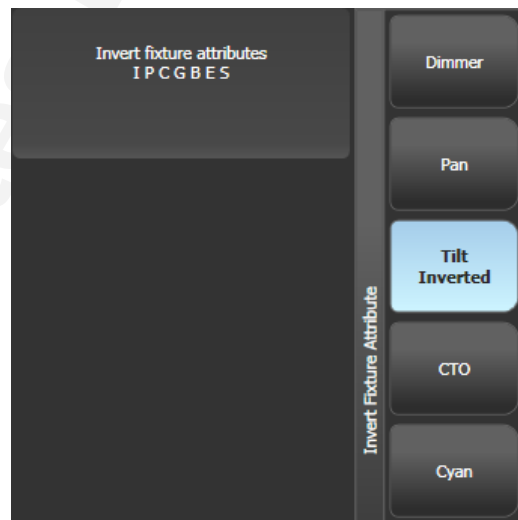

- You can change the invert on multiple fixtures by selecting more than one, but the "Inverted" display will not show if there is a mixture of inverted and non-inverted fixtures in the selection.
- Some attributes cannot be inverted.

Copyright Avolites Limited 2010

## 3. Controlling dimmers and fixtures

*This chapter contains: Selecting fixtures and dimmers for control; changing attributes of the selected fixtures; using groups.*

When you are programming a show, and sometimes when you are running a show, you need to manually control the fixtures and dimmers to set the intensity, position, colour, etc. To do this you first select the fixtures you want to change using the select buttons, then you set the attributes of those fixtures using the Wheels and Attribute buttons.

### 3.1 Create

#### 3.1.1 Selecting fixtures and dimmers for control

To select the fixtures or dimmer channels that you want to control, you use the Fixture Select buttons on the touch screen to load the fixtures into the Editor. You can select fixtures or dimmers individually, or several at once.



- 1> *Touch the Select buttons for the fixtures you want. The select button will light up pale blue for selected fixtures (they are also shown in light blue on the HUD).*
- 2> *To select a range of fixtures, slide your finger across the touch buttons. To select a large number of fixtures you can touch and hold the Select button for the first fixture, then touch and hold the Select button for the last fixture, then release the button for the first fixture.*

Here are some other things to know:

- Press Locate (red button at the bottom right of the console) to light up the selected fixtures in open white and move them to a central position. See the next section for more Locate options.
- You can deselect a fixture by touching the select button again.
- At the top of the touch screen, just above the top windows, the console will show you which fixtures are currently selected.

- Press Clear (right of numeric keys) to deselect all fixtures and remove all changes from the programmer. See the next section for more Clear options.
- Once you have changed any attribute, touching a Select button will deselect all fixtures and start the selection process again. All previously selected fixtures (since you last pressed Clear) stay in the programmer. Once a fixture has been edited, the button shows a darker blue (also on the HUD). The picture shows the first two fixtures selected, with the second three in the programmer and the others unselected.
- You can select fixtures on another page by touching one of the page buttons to the left of the fixture buttons, if you have “Pages” set to Show (using the context button to the left of the menu buttons). Otherwise you can use the scroll slider to show other pages.
- Using Key Profiles (see section 11.2.1 on page 111) you can set the fixture touch button to latch mode so that it turns the fixture’s dimmer channel on (like putting a preset fader to full).

### 3.1.2 Setting fixtures to a start position

The Locate button (the red button on the bottom right of the console) is used to put the fixture into a known position with light coming out, so that you can start programming it.

A quick press of the button will move all selected fixtures to a central position and reset all the attributes so that you get a white light. However you sometimes might not want to move the fixture, and by holding down the Locate button, you get some more options.

- You can mask off some of the Locate settings (such as only turning the fixture on, but not changing its position or colour) by holding down Locate and pressing [Set Mask to Exclude All]. Then (still holding Locate) turn on the Attributes you want to change using the Attribute Bank buttons down the right hand side. Only the lit attributes will be changed by Locate. Pressing the Attribute Options button will clear the mask.
- Option [Auto Reset Mask] sets the mask to be automatically reset to include everything each time Locate is pressed, or you can toggle the option to [Remember Mask] which will keep the mask setting you used last time.
- Option [Clear/Don’t Clear Located Attributes] sets whether the attributes changed by the Locate function will be saved into any cues you store. If the option is set to “Clear” then the Located attributes will not be stored in the Programmer unless you modify them using the wheels. This is useful if for example you want to program a cue which sets the position of fixtures, but does not turn them on. The Locate button will light up the fixtures for programming, but the lit state will not be stored in any cues you save.

### 3.1.3 Clearing selection

The Clear button (on the right of the numeric keypad) is used to remove all changes from the Programmer and deselect all fixtures. A quick press of the Clear button just clears everything, however if you hold down the Clear button, then more options are available.

- You can mask which attributes are to be cleared (for example, leaving the pan/tilt in the programmer but clearing everything else) by holding down Clear and pressing [Set Mask to Clear Nothing]. Then (still holding Clear) turn on the Attributes you want to change using the Attribute Bank buttons down the right hand side, or press [Set Mask] and use the softkeys. Only the lit attributes will be cleared. Pressing the Attribute Options button will clear the mask.
- [Clear Options] opens a submenu showing some further options (described below).
- [Clear All Fixtures/Selected Fixtures] sets whether all fixtures will be cleared from the programmer, or if only currently selected fixtures will be cleared. This is useful if you want to clear specific fixtures.
- [Individual Attributes] allows you to clear individual attributes from the Programmer. When you press the softkey, you are given a list of attributes in the Programmer – press the appropriate softkey to clear that attribute.


The options in the “Clear Options” submenu are:

- [Auto Reset Mask] sets the mask to be automatically reset to clear everything each time Clear is pressed, or you can toggle the option to [Remember Mask] which will keep the mask setting you used last time.
- [Leave/Zero Preset Fader Levels] is used to set whether latched fixtures are cleared (the fixture key profile can be set to “Latch” mode, which turns on the fixture dimmer channel when the fixture button is touched. See section 11.2.1 on page 111.)
- [Freeze current values] sets what happens to LTP (non-intensity) channels you have modified. If set to [Freeze Current Values] the channels remain as you set them. If set to [Release To Playback Values] the channels will go back to how they are set in the current playback. For example: you have an active playback making some lights green, then you select the lights and change them to red. If you press Clear with this option set to [Freeze] then the lights remain red. If the option is [Release] the lights will go back to green.

You can use the Channel Grid window to selectively attributes from fixtures. See section 3.2.1 on page 47.

### 3.1.4 Changing attributes using the wheels

“Attributes” are the functions of the fixture, like pan, tilt, colour, dimmer, etc. You select which attributes you want to modify using the buttons on the right edge of the console and set values using the wheels at the bottom of the Tiger Touch. The attributes available depend on the fixture type. Dimmer channels only have a dimmer attribute.

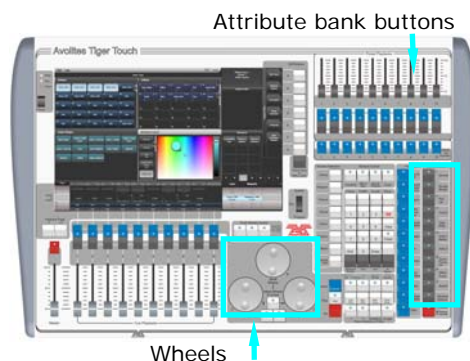


You can also select attributes by touching the IPCGBES buttons on the touch screen, and modify them using the Attributes workspace window; this is described in the next section.

Each attribute button controls several attributes, one on each wheel.

1> *With some fixtures selected, press the button for the attribute to be changed*

2> *Turn the wheels to set the attribute. The display above the wheels shows which attributes are being controlled, and the settings which are available scroll up and down as you turn the wheels.*

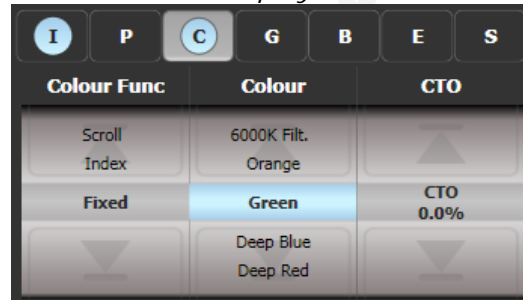


*You can also touch the roller image on the screen to change the attributes up or down by one. For continuously variable controls like a dimmer, touching the roller will set the attribute to full or zero.*

3> *Repeat from 1 to change other attributes of the selected fixtures.*

Some other things to know about attributes:

- If an attribute is in the programmer, it is shown in pale blue (as shown with the "Green" setting in the screen picture above). This provides a quick way to see which attributes are in the programmer.
- You can also select the attribute to be changed from the softkeys by pressing the "Attribute Options" button.
- If the display above the wheels does not show the attribute when you press the button, that attribute is not available on the selected fixtures.
- If the wheel display shows a blue arrow next to the legends, this means that there are more than three attributes to control. Press the Attribute button again to toggle through the attributes.
- The wheels operate in an "acceleration" mode. If you spin the wheel fast, the fixture changes in larger steps. If you move the wheel slowly, the fixture moves in its smallest increment.
- Holding down the Avo button while turning a wheel puts the wheel into "Fast" mode. When in this mode, a single rotation of the wheel changes the attribute you are controlling over its full range. For example, if while moving the Pan wheel you hold down Avo the fixture will make a complete pan movement between end stops in one rotation of the wheel.
- You also can view the available settings (Gobo names, etc) of the wheels on the VDU by selecting View->Wheels on the VDU menu bar.

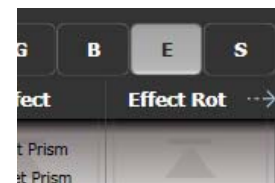




- Some LED colour mixing fixtures have a Virtual Dimmer function (using the Intensity wheel) which offers intensity control by mastering the RGB levels when the fixture itself does not provide an intensity channel.

### 3.1.5 Setting attributes using the touch screen

For attributes with fixed values such as gobos and fixed colour wheels, the Attribute Editor window can be easier to work with than the wheels. It also offers a colour picker window for fixtures with RGB or CMY colour mixing.

Press View then [Open Workspace Window] then [Attribute Editor] to show it. As a shortcut you can also show it by touching the attribute name text just below the IPCGBES buttons (for example Colour Func in the above picture).

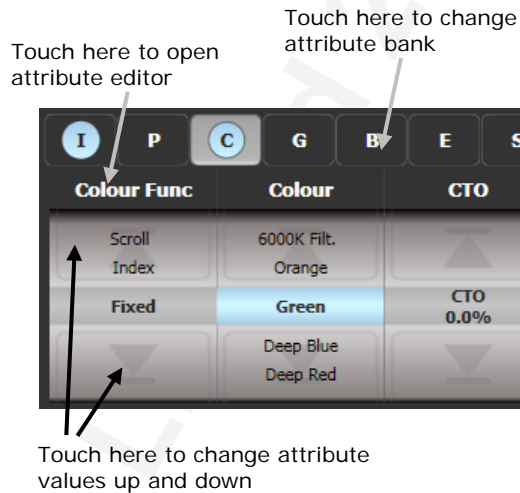


The buttons on the left of the window select the attribute to change.

The rest of the window contains buttons or controls to set the attribute value. For attributes such as gobos and fixed colours, a button is provided for each one, making selection a lot quicker than scrolling through on a wheel.

When you apply an attribute, the button turns blue to show that the attribute is in the programmer. If you touch the button again, the attribute will be removed from the programmer.


Touching the title of each attribute (such as "Colour Func") expands the attribute to the full window, displaying more buttons.

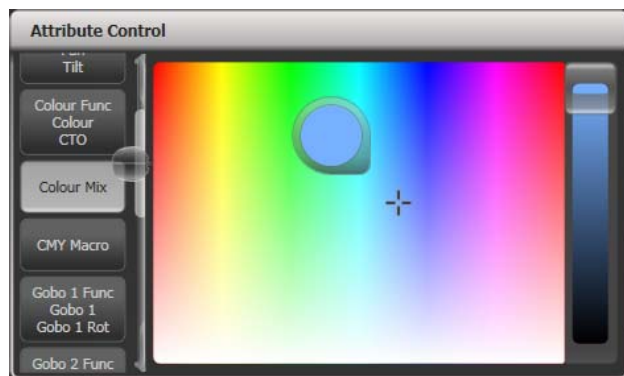

For variable attributes like Dimmer, holding down the button will display a horizontal slider bar. You can then move your finger left or right to change the value.



Active fixtures such as media servers will display a thumbnail of the media clip in the button. The media server must support CIP and be patched as an active fixture.

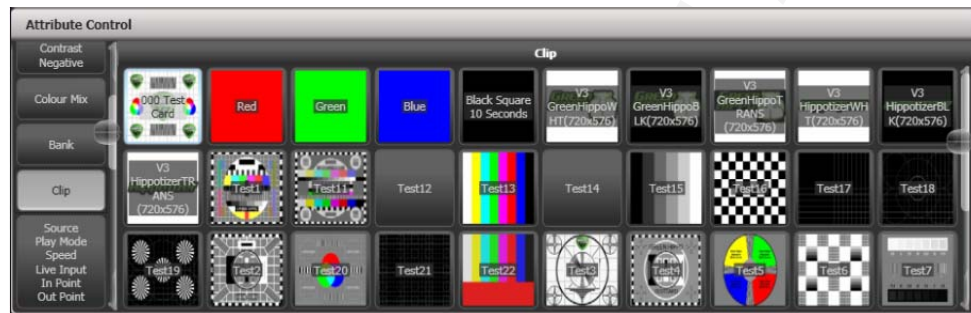

### 3.1.6 Setting attributes by number

You can directly enter a numeric value for the attributes which are live on the wheels. You must be at the main Program menu to do this (keep pressing Exit until the vertical menu bar shows "Program Menu").

Type a number on the numeric keypad then press one of the softkeys to set the value to the fixture. The Softkey legend will show what effect your value is going to have (such as [Gobo 5], or [Deep Blue]).

For attributes displayed in percent, such as Dimmer, or Colour Mix, you enter a value from 0-100 to set the percentage output. For attributes where the output is divided up into ranges, such as colour wheels, you enter the index of the range you want. For example to select the 3rd colour (as displayed in the list above the wheel) you would enter 3.



### 3.1.7 Selecting fixtures and dimmers by number (Channel)


In some situations, for example when programming lots of dimmers, it can be easier to type in the dimmer channels you want to program. The Channel menu allows you to do this for dimmers or fixtures. To access the Channel menu, press the Channel button on the top left of the numeric keypad.

Fixtures may be selected by User Number, Handle Number or DMX Address, as set by the option on Softkey A.

When using the Channel menu it is helpful to latch it by pressing the Menu Latch button.

- To select a fixture, type the number and press Enter.
- To select more than one fixture, press the [And] softkey between each number. For example 1 And 2 And 5 Enter will select 1, 2, 5.

- To select a range of fixtures, press [Through]. For example 1 Through 8 Enter will select 1-8.
- To miss out fixtures in a range, use [Not], for example 1 Through 4 Not 3 Enter will select 1, 2, and 4.
- The @ softkey sets a dimmer level to the selected fixtures, for example 1 Through 8 @ 5 Enter will set 1-8 at 50%. (You can choose whether 50% is entered as "5" or "50" in the User Settings – see section 11.3.3 on page 112). When you press @ there are softkey options for Full, Off and +/- (increase or decrease brightness).
- You can work with Groups using the Group button, for example Group 1 And Group 2 Not 5 Enter will select all fixtures in group 1 and group 2 except for fixture 5.
- You can use the Locate button instead of Enter, to select fixtures and locate them. For example 1 Through 4 Locate will select fixtures 1 to 4 and locate them.
- When entering a command, the command line is shown on the display. You can go back using the grey ← button and you can abandon the line using the grey → button.
- The AND, THRO and @ functions are also provided on the arrow buttons as printed next to the buttons.

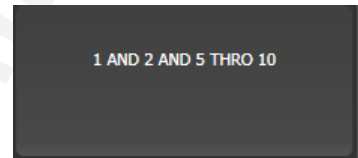

### 3.1.8 Selecting using a pattern

When programming you will often want to select patterns of fixtures. Rather than having to individually select and deselect fixtures, the Tiger Touch has an easy way of selecting odd then even fixtures in a range of fixtures, or it can, for example, select every 4<sup>th</sup> fixture.

- 1> *Select some fixtures.*
- 2> *Press the white "All" button (below the Next Time button to the right of the wheels).*
- 3> *Select a pattern from the softkeys. Your selection is modified so you will only be controlling, say, the odd fixtures.*
- 4> *Press the white "Next" button to change the selection to the next stage of the pattern.*
- 5> *To end the pattern selection, press All twice.*



- For example, if you are programming a chase using 16 fixtures and you want every 4<sup>th</sup>

fixture to do the same thing, you just select the 16 fixtures, then press All, then D [1 in 4]. You will see that the 1<sup>st</sup>, 5<sup>th</sup>, 9<sup>th</sup> and 13<sup>th</sup> fixtures are now selected, and you can create the look for those fixtures. Then press Next, and the 2<sup>nd</sup>, 6<sup>th</sup>, 10<sup>th</sup> and 14<sup>th</sup> fixtures will be selected ready for programming. After you have programmed the fourth set of fixtures, the pattern will go back to the first position again, until you press All twice to end.

- You can enter your own patterns using the numeric keypad and softkeys, for example "2" A [In] "6".

### 3.1.9 Attribute groups - IPCGBES

To make life a bit simpler, the Tiger Touch groups together attributes which have similar effects, using the letters IPCGBES.

I-Intensity (dimmer, strobe shutter)

P-Position (pan, tilt)

C-Colour (colour wheel, CMY mixing)

G-Gobo (gobo wheels, gobo rotate, gobo position)


B-Beam (iris, focus, zoom, beam shaper)

E-Effects (prism)

S-Special (motor speeds)

These groups are used to select which attributes you want to work with in many of the functions on the console, particularly when you are "masking off" certain attributes from being saved.

Above the attributes roller on the touch screen, the Tiger Touch shows you which attribute group you are currently changing (the grey box).

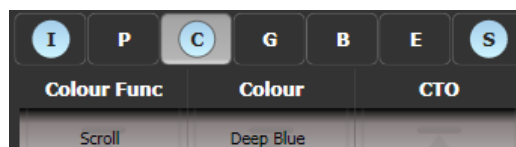


The Attribute Group is also highlighted in blue if the programmer contains any of those attributes. For example in the image above we are currently changing Colour attributes, but Intensity and Special attributes have also been modified.


### 3.1.10 Using fixture groups

You can create groups of fixtures or dimmer channels, which can then be quickly selected together by touching a group button (shown in the Groups window) or typing the group number. You can, for example, make a group for each type of fixture, or group by stage left / stage right, etc.

If the Groups window is not visible, you can show it by pressing View, [Show workspace window], [Groups].

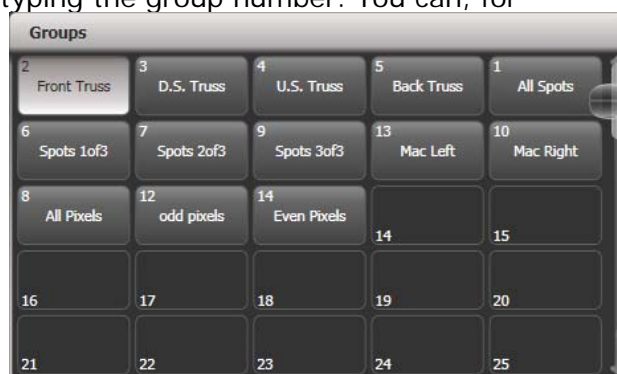

- 
- 1> *Select the fixtures/dimmers you want in the group (the order in which you select them will also be stored in the group).*
  - 2> *Press the grey Group button (top right of the numeric keys).*
  - 3> *Press [Record Group]*
  - 4> *Use softkey A to enter a number for the group, or B [Provide a legend] to set a legend.*
  - 5> *Touch an empty Group button where you want to store the group, or press C [Store] to store as a numbered group.*
  - 6> *Press Clear then repeat from 1 to store other groups.*
- 

 - You can also press the Avo button and the Group button to go directly to the Record Group menu, or touch the button twice to use Quick Record – on the first touch the button will turn red with a +, on the second touch the group will be recorded. 
- To select all the fixtures/dimmers in a group, just touch the button for the group.
- The order in which you originally selected the fixtures when creating the group is also stored. This takes effect when you use the last fixture – next fixture functions described in the next section, and when you use Shapes, Fan mode and Fixture Overlap functions. You can change this later, see page 72.
- You can also recall a group by its number:

- 
- 1> *Press the grey Group button.*
  - 2> *Type in the number of the group you want to recall.*
  - 3> *Press [Recall Group].*
- 

- The Group button also gives you facilities on the softkeys to edit and delete groups.

### 3.1.11 Stepping through selected fixtures one at a time

If you have selected a range of fixtures, or a group, the Tiger Touch has functions to step through the selected fixtures one at a time. This can make it easier to program a range of fixtures because you don't have to select each one manually.

This mode uses the Prev/Next/All/Hilight buttons to the right of the Go button.

- 
- 1> *Select a range of fixtures or a group.*
  - 2> *The Prev and Next buttons will select the fixtures in the range one at a time (in the order you selected them).*
  - 3> *The ALL button will select all fixtures in the programmer (everything which has been selected since Clear was last pressed).*
- 

- The Hilight function can be used to highlight the output of the selected fixture (make it brighter onstage), see the next section.

### 3.1.12 Highlighting the selected fixture

- When stepping through a fixture selection using the Prev/Next/All buttons, you can highlight the selected fixture on

stage. This makes it very easy to see which fixture you are controlling. The other fixtures in the selection go to a dimmed level.

- Press the HiLight button to enable highlight mode. Press HiLight again to disable highlight mode. When you are in highlight mode, the highlighted attribute is overridden and any changes you make to it are not stored in the programmer (so if the highlight uses intensity, you cannot change the intensity of the fixture).

### 3.1.13 Align fixtures

You can copy attributes from one fixture to another using the Align Fixtures function. This is very useful, for example, if you've accidentally left a fixture out of a cue you can copy settings from its neighbour.

- 
- 1> *Select the fixtures you want to Align.*
  - 2> *At the top level menu press Fixture Tools/Menu Latch (just below the G softkey) then [Align Fixtures].*
  - 3> *Set the mask to include the attribute groups you want to copy (using the Attribute Bank buttons on the right of the console, or the softkeys set options for exclude and include all attributes).*
  - 4> *Touch the select button of the fixture you want to copy the settings from.*
- 

### 3.1.14 Flip

Moving head fixtures can point at the same stage position from two possible yoke positions. Sometimes to get the fixture moving the same as other fixtures, you need to swap to the opposite yoke position and the Flip function lets you do that.

- 
- 1> *Select the fixtures you want to Flip.*
  - 2> *At the top level menu press Fixture Tools/Menu Latch then C [Flip Pan and Tilt].*
- 

### 3.1.15 Fan mode

Fan mode automatically spreads out the values on a selected range of fixtures. If used on pan and tilt, the result is spreading out "rays" of light beams. The first and last fixtures of the range are affected most, and the central fixtures are affected least. The amount of fan can be set using the attribute wheels.

As with shapes, the order in which you select the fixtures sets how the fan effect works. The fixtures you select first and last will be the ones which change most. If you use a group to select the fixtures, the order you selected the fixtures when you recorded the group is used.

The fan effect, while normally used on pan or tilt attributes, can be applied to any attribute.

- 
- 1> *Select the fixtures you want to fan.*
  - 2> *Press the blue Fan button.*
-

- 3> Select the attribute you want to Fan using the attribute bank buttons.
- 4> Set the amount of fan using the attribute wheels.
- 5> Turn off Fan by pressing the Fan button again when you have finished.

Fan mode needs to be used on at least 4 fixtures to give good effects. If you have an odd number of fixtures, the central fixture will not move in fan mode.

Press the Fan button again to leave Fan mode. Any effects you have set will remain in the programmer.

- It's fairly easy to accidentally leave Fan mode turned on and be very confused about why the wheels aren't working properly, so turn it off as soon as you have completed the effect.

## 3.2 Edit

### 3.2.1 The Channel Grid window

It can sometimes be useful to display and edit exactly what each fixture is doing. The Channel Grid window allows you do to that. Display it by pressing the white Channel Grid button to the right of the screen, or press View then [Show workspace window] then [Channel Grid].

Channel Grid												
	Number	Dimmer	Shutter	Shutter Func	Pan	Tilt	Colour Func	Colour	CTC	CTO	Cyan	Red
ClrSp 1200	1	-	Closed		54.89	40.68	Fixed	Open	-	-		
ClrSp 1200	2	-	Closed		45.78	39.77	Fixed	Open	-	-		
ClrSp 1200	3	-	Closed		59.67	39.88	Fixed	Open	-	-		
ClrSp 1200	4	-	Closed		60.77	40.51	Fixed	Open	-	-		
ClrSp 1200	5	-	Closed		53.30	45.85	Fixed	Open	-	-		
ClrSp 1200	6	-	Closed		51.78	47.06	Fixed	Open	-	-		
ClrSp 1200	7	-	Closed		48.32	47.26	Fixed	Open	-	-		

The window can be set to different modes using the context buttons to the left of the menu. The modes are:

- Playbacks: shows which playback is controlling each attribute of each fixture
- Levels: shows the output levels of each attribute. These may be shown numerically or as range names.
- Palettes: shows which palettes are allocated to fixture attributes
- Shapes: shows which shapes are running on fixtures
- Output/Programmer: switches between the attributes on the console output, and the attributes currently in the programmer
- Highlight off/changes: if set to [Highlight changes] then changing attributes will be highlighted.

- **Narrow/Wide columns:** changes the column width on the screen.

You can **select** fixtures by touching the fixture names on the left of the screen, or if you select any fixture values, the appropriate fixture will automatically be selected.

You can **clear** attributes in the channel grid by selecting them (touch or touch and drag to select multiple attributes). Then press Clear.

You can **edit values** by selecting one or more values in the grid, then modify the values using the wheels, or type a new value on the numeric keypad and press Enter.

## 3.3 Advanced options

### 3.3.1 The Fixture Tools / Menu Latch button

When the Tiger Touch is at the top menu, the Fixture Tools / Menu Latch button opens the Moving Light Actions menu which contains options to Locate Fixture (same as the Locate button) and to run Macros on fixtures such as Lamp On, Lamp Off, Reset etc. The Align Fixtures and Flip functions as described above are also in this menu.

If another menu is loaded, the Menu Latch button latches the current menu. Press Exit to get back to the top menu so that you can access the Moving Light menu.



## 4. Palettes

*This chapter contains: About palettes; shared and normal palettes; recalling a palette; storing a palette; palette masks.*

When programming a show you will find that you frequently use certain positions, colours, etc. The Tiger Touch lets you store these settings so you can recall them at the touch of a button rather than having to find them on the wheels every time. Palettes are stored and selected using buttons on the touch screen, grouped into different windows for Colours, Positions and Gobos & Beams. You can set a legend for each button so that you know what you're getting.



If the Colours, Positions, Gobos & Beams windows are not shown, press View then [Open Workspace Window] then [Groups and Palettes] to show all three windows.

### 4.1 Create

#### 4.1.1 Palette values stored as a reference

The most important thing about palettes is that when you use a palette value in a cue, the Tiger Touch stores a reference to the palette, rather than the actual value. This means that if you program your cues using palettes, you can easily change all the positions in your show just by reprogramming a few palette entries rather than having to reprogram all the cues. This is handy if you are touring and have to cope with different stages or truss heights every show.

#### 4.1.2 Which attributes are stored in palettes

A palette entry can store any or all attributes of a fixture, so you could store position, colour and gobo in the same palette entry. However, it's easier to operate the Tiger Touch if you have some palettes which only set positions, some for colour, some for gobo and so on. The Tiger Touch helps you with this by providing separate windows for Colour palettes, Position palettes, and Gobo/Beam palettes.



To create these separate palettes, when saving a palette you can set a mask which limits which fixture attributes will be stored in the palette.

In addition, palettes may be either Shared or Normal. Shared palettes are used where the same value is set for all fixtures of the same type – for example when setting colours, the “Red” palette would set the same colour values for “Red” to all MAC 2000 fixtures. Normal palettes are used when each fixture requires its own value - for example when programming positions, each fixture will have a different setting.

#### 4.1.3 Storing a palette

This is how you save a palette value:

- 1> Press Clear to clear the programmer.
  - 2> Select the fixtures for which you want to store palette values.
  - 3> Using the attribute buttons and wheels, set the attributes you want in the palette entry. You can store any or all attributes of a fixture in each palette entry.
  - 4> Press the blue Record Palette button
  - 5> Set the palette Mask – this sets which attributes will be recorded in the palette. Select attributes using the Attribute Bank buttons – anything lit up will be saved. [Set Mask] and [Record by] softkeys also control the Mask (see below). Some masks are automatically set by the window you save the palette in – Positions only includes P, Colours only C and Beams includes IGBES.
  - 6> Touch an unused Palette button to store the palette. Or enter a palette number and press [Store]
- 
- The console will automatically set the palette as Shared or Normal (by checking if the values to be stored are the same across all fixtures of the same type). You can override the setting by pressing softkey C.
  - [Set Mask] allows you to specify which attribute groups will be included in the palette. You can also use the grey Attribute Bank

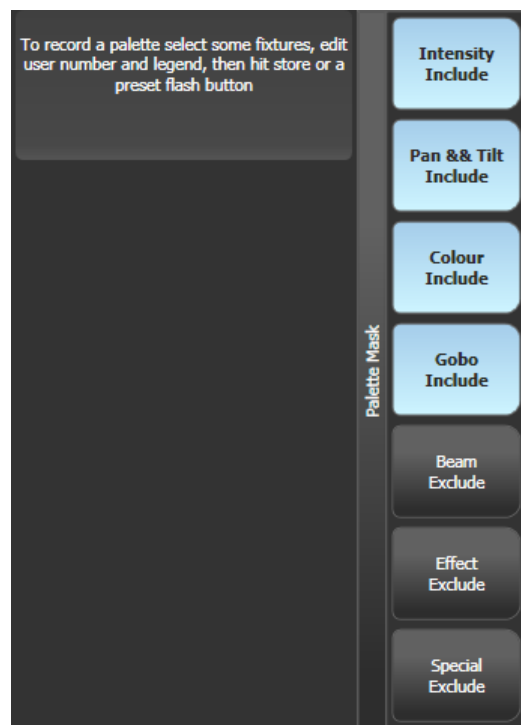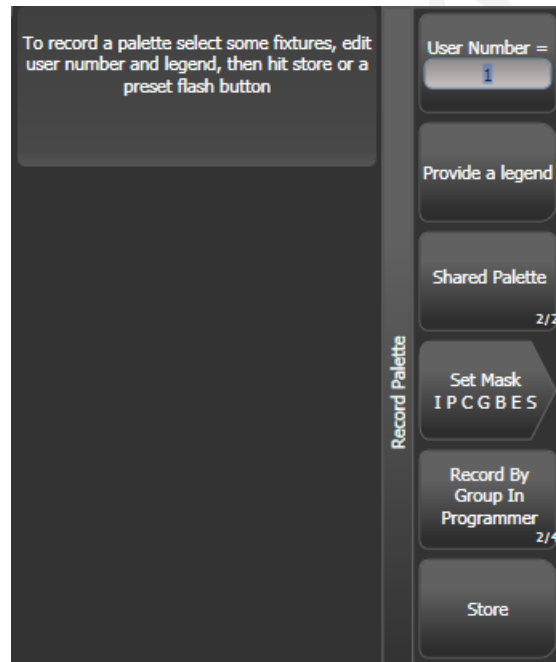


buttons on the right hand edge of the console to set the mask. An attribute group is included when the softkey is inverted (like the Colour group in the picture) and when the LED is lit on the Attribute Bank button. Some masks are automatically set by the window you save the palette in – Positions only includes P, Colours only C and Beams includes IGBES.

- [Record By...] allows you to control how the mask is used when saving the palette. The options are:  
 [Channel in programmer] records only channels which are in the programmer (which have been changed)  
 [Group in programmer] records all channels in any attribute group which has one or more channels in the programmer. For example if Cyan is in the programmer, all colour channel settings will be recorded even if not in the programmer.  
 [Group in mask] records everything included by the mask set on the attribute buttons  
 [Mixed] records by attribute group for Position and Colour but by channel for all other controls.
- You can set a legend for the palette while you are saving it using [Provide a legend]. See section 4.3.2 for how to change the palette legend.
- If you select a Palette button which is already used, the Tiger Touch offers you options to [Cancel], [Replace] or [Merge] the existing palette. [Replace] will erase the palette and save only the latest changes you have made. [Merge] will combine your changes with the palette. This allows you to add settings for additional types of fixtures to a shared palette. Pressing the palette button again will automatically merge.

#### 4.1.4 Quick record

 The palette windows allow you to quickly record a new palette. Just touch the button where you want to record – the button will turn red with a + sign. At this point you can enter a legend for the new palette or change mask settings. A second press on the button will save the palette.



Quick record also works for groups, workspaces and the playback window.

## 4.2 Playback

### 4.2.1 Recalling a palette value

To recall a palette value, this is what you do:

- 1> *Select the fixtures to be changed. Shared palettes can be set to any fixture of the same type. Normal palettes will set individual values to each fixture.*
- 2> *Touch the Palette button you want to recall. The palette will be set to the selected fixtures.*

- You can make palettes fade over a time when you recall them, see section 4.6.1 below.
- You can recall a palette by its number by typing the number on the numeric keypad and selecting [Apply Palette] from the

softkeys. The softkey shows the legend of the palette which will be applied.

#### 4.2.2 Palette pages

Each of the palette windows can either display pages of palettes, with page buttons on the left, or a continuous scrolling window of palettes. To change between pages and scrolling, touch the Pages Show/Hide button in the context button area to the left of the menu buttons. using the page buttons to the left of the palette buttons.

- You can also recall a palette from any page using its number by doing the following:

- 
- 1> *Select some lights*
  - 2> *Press the Palette button above the numeric keypad*
  - 3> *Type in the number of the palette you want to recall.*
  - 4> *Press Enter or A [Apply Palette]*
- 

#### 4.2.3 Quick palettes with no fixtures selected

If you touch a palette button when no fixtures are selected, the palette will be set to all the fixtures the palette applies to. This is called a Quick Palette. For example if you've got some colour palettes programmed for your MAC 2000's, pressing one of the palettes when no MAC 2000's are selected will set the colour to all the MAC 2000's.

#### 4.2.4 Setting palettes to fixtures in a playback

You can apply a palette to all fixtures in a particular playback. Touch and hold the palette button and press the select button of the playback which the palette is to apply to.

### 4.3 Edit

#### 4.3.1 Editing palettes

To edit a palette entry, press the Update Palette button, select the palette to edit (this will automatically select the fixtures used in the palette), make the changes you want, then press the [Update Palette x] softkey to save the changes.

The Update Palette button also allows you to change the palette name and number.

You can also load the palette into some fixtures, modify the attributes and record the new information back on top of the existing palette entry. The Tiger Touch will give you options on the softkeys to Replace or Merge the palettes. If you select Merge, anything you haven't changed will not be affected, values you have changed or added will be amended.

- You can set the console to "Always Merge" (so it doesn't ask you) using option A of the User Settings (hold down the Avo button to set these). You can also press the palette button a second time to select the Merge option.
- You can add additional fixtures to a palette without affecting existing ones. For example, if you have colour palettes for Mac 600s, you can add colours for your Mac 500s without affecting any previously recorded values in the palette.


- You can remove attributes from palettes using the Off function, see section 6.3.4 on page 69.
- When editing a palette from a touch button, the state of the programmer will be preserved; when the modified palette is saved, your original programmer contents will be restored and the programmer will be left in the same state as when you started editing the palette.

### 4.3.2 Setting legends for palettes

You can enter a legend for each palette which is displayed on the palette touch button.

- 
- 1> Press [Set Legend] at the top level menu.
  - 2> Touch the palette button for the palette you want to legend.
  - 3> Type the legend on the touch keyboard.
  - 4> Press Enter when you have finished.
- 

- Also on the touch button, the palette number is shown top left. The IPCGBES attribute groups contained in the palette are displayed below your legend, so for example Position palettes will show a P, colour palettes a C and so on. In the top right corner is shown N for a Normal palette or S for Shared.

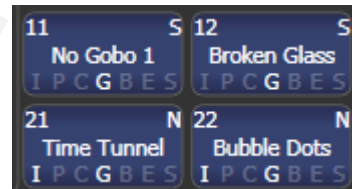

## 4.4 Copy and Move

### 4.4.1 Copying or moving a palette

Using the Copy/Move/Link button you can make a copy of an existing palette or move it to a new button. You can copy or move multiple palettes in one operation. You cannot link palette buttons.

Move is useful for tidying up the console.

- 
- 1> Press the blue Copy/Move/Link button.
  - 2> Select [Copy] or [Move]. Pressing the Copy/Move/Link button again will also toggle these options.
  - 3> Touch the Select button of the palette you want to copy/move. You can select multiple palettes by sliding your finger across the buttons.
  - 4> Touch the empty Select button where you want it to go.
- 

- The Menu Latch button latches the Copy/Move/Link menu, so you can keep copying, moving or linking things without having to keep pressing the Copy/Move/Link button. Press Exit to unlatch.
- [Retain Layout] or [Bunch Up] is used when copying a group of palettes with empty handles in the group – you can either keep the empty handles, or bunch up the used handles together.
- When in Copy mode, option [Copy Legends] can be changed to [Don't copy legends] so that the copied palettes are given default legends.

- When in Move mode, [Swap Items if Required] will attempt to reposition any existing handles which are in the way of the move. This is useful when rearranging buttons on a page which is nearly full.

## 4.5 Delete

### 4.5.1 Deleting palettes

You can delete a palette entry by pressing the blue Delete button, then touching the palette select button to be deleted. Touch the palette button again to confirm the deletion.

Other ways to delete a palette:

- Press the Update Palette button, select a palette, use the [Delete] softkey option.
- Press the Palette button above the numeric keypad and use the [Delete] option in the [Palette Utilities] menu.
- Press Delete then [Palette], type the palette number, press Enter.

## 4.6 Timing

### 4.6.1 Fading a palette and fixture overlap

A timed palette is a very useful tool allowing easy "busking" of shows. When a palette is recalled in this way, a time is added and the palette fades in over that time.

- 
- 1> *Select some fixtures*
  - 2> *Type in the fade time for the palette on the numeric keypad*
  - 3> *Touch a palette button to recall the palette*
- 

- Palette fading can be very useful when recalling a palette live during a show, as you can smoothly move fixtures to a new position or change colour slowly (on colour mixing fixtures).
- Palettes applied with a fade time do not get put into the programmer, so will not be saved in any cues; don't use fade times when programming. This is to ensure that when used in a live situation, the next cue will override the palette and play back as intended.
- Additionally you can set Fixture Overlap, which means that if you recall the palette to a group of fixtures, the change will be applied in sequence to each fixture in the group. This is a very quick way to busk some amazing effects. Fixture Overlap=100% means that all fixtures will change together. Fixture Overlap=0% means that each fixture must complete its fade before the next will start its fade.
- To set an overlap, type the overlap amount then press [Set Overlap]. Then type the fade time (if required) and recall the palette by pressing its button.

### 4.6.2 Master Time for palettes

Option [Master Time] on the Palette menu (press the grey Palette button above the numeric keypad) allows you to set a default fade

time. This fade time will be used for all palettes unless you manually type in a different time. This can be useful when "busking" a show with palettes.

Copyright Avolites Limited 2010

Copyright Avolites Limited 2010




## 5. Shapes

*This chapter contains: Selecting a shape; changing the size and speed of a shape; spreading a shape across multiple fixtures; editing shapes which are running.*

The Tiger Touch, in common with other Avolites consoles, has a shape generator (sometimes known as an Effects Generator on other consoles). This allows you to quickly create exciting light shows using lots of movement and changes, with the minimum of programming.

A shape is simply a sequence of values which can be applied to any attribute of a fixture. A circle shape, for example, applied to the pan and tilt attributes, would cause the fixture to move its beam around in a circular pattern. You can set the centre point of the circle, the size of the circle and the speed of the circle movement.

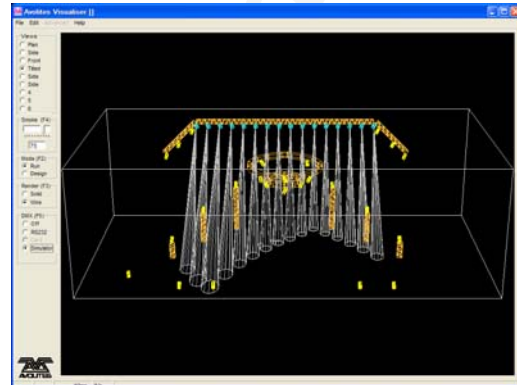

In addition to position shapes, there are a large number of other shapes available in the Tiger Touch. The shapes are defined for a particular attribute such as colour, dimmer, focus and so on. Some shapes will not work with some fixtures; focus shapes, for example, can produce nice "focus pull" effects on fixtures which have DMX focusing, but will do nothing on fixtures which don't have focusing.

A further category of shapes is the Block Shape. This type of shape blocks out other shapes, preventing them from running. For example, if some fixtures are running a Circle shape, and then a playback is fired which has a Block Pan/Tilt shape on some of the fixtures, those fixtures will stop running the circle shape. This can be very useful to modify playbacks at showtime when used with the playback priority feature (see section 6.7.5 on page 74).

When you use a shape with more than one fixture, you can choose to either apply the shape identically to all the fixtures, or offset them so that the shape runs along the fixtures creating "wave" or "ballyhoo" type effects. This is called the *Phase* of the shape.

## 5.1 Playback

### 5.1.1 Creating a shape

To create a shape you simply pick the type of shape from a list on the softkeys, then choose the shape you want from the Shapes window. Shapes are organised using the IPCGBES attribute groups, so you can pick from a list of Dimmer shapes, or a list of Pan/Tilt shapes, or Colour shapes, and so on. You can also pick from a list of All Shapes.

When you choose a shape, it will be applied to all selected fixtures.



- 1> *Select the fixtures the shape is to be applied to.*
- 2> *At the main menu press [Shape Generator].*
- 3> *Press [Create] to start a new shape.*
- 4> *Press a softkey to select the attribute type to use in the shape or press [All shapes] for a full list.*
- 5> *Touch the desired shape in the Shapes window, or press a softkey to select a shape. You can type a search word on the touch keyboard to search for a particular shape.*
- 6> *The shape will be applied to all selected fixtures.*

- If you open the Shapes window as part of your workspace, it will remain open for instant selection of shapes (you don't need to select [Shape Generator]).



The window will only show shapes which are possible on the selected fixtures. Pressing attribute buttons will filter the Shapes window to show only shapes for that attribute. Press the Dimmer attribute button to show all shapes.


- Shapes are based on the current settings of the fixture, so a circle would move around the current pan-tilt position of the fixture.
- You can change the base value of a shape (e.g. the centre of a circle) by changing the attributes using the wheels in the usual

way. You can reduce the Size to zero (see next section) to help you see what the base value actually is.

- You can run more than one shape at a time by repeating the above procedure. You can run several shapes on one fixture.
- Press [Shape Generator] then [Edit] to show what shapes are running.
- If you apply the same shape to two different groups of fixtures, the shape will appear twice on the shape list. You can edit the two shapes separately to give different directions, speeds etc (see later)
- Each shape is designed to work on a particular attribute. Obviously if the fixtures don't have the attribute, you will not see any effect if you use the shape.
- Each shape has a default size and speed setting (defined in the shape file).

### 5.1.2 Changing size and speed of a shape

It is easy to change the size and speed of a shape after it has first been created. If the display above the wheels is showing Spread and Offset rather than Size/Speed, press softkey E to select [Adjust Speed, Size and Phase].

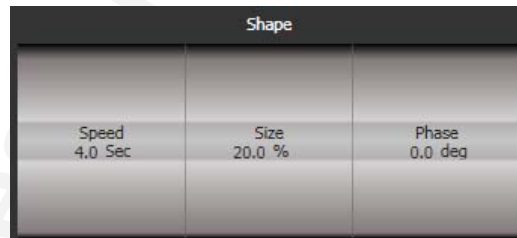

- 1> Control the speed of the shape using the left hand wheel.
- 2> Control the size of the shape using the middle wheel.
- 3> The size and speed is shown above the wheels on the display.

Other things to know about size and speed of shapes:


- If you have more than one shape running, the controls operate on the most recent one. You can edit the parameters of any shape that's running using the Edit Shape function, see section 5.2.1.
- The minimum size is zero. This will "hide" the shape, and the fixture will resume its previous settings. The shape is, however, still active.
- You can edit the shape individually on each fixture by selecting the fixtures you want to change. Use the Shape mode of the channel grid window to show the shape running on each fixture. To show the channel grid, press View then [Open Workspace Window] then [Channel Grid] or press the dedicated Channel Grid button.

### 5.1.3 Changing the phase of a shape across multiple fixtures

Shapes get more interesting (and look more impressive) when you apply them to multiple fixtures. The Tiger Touch lets you control how a shape is phased across several fixtures. You can also control Spread, which is a different way of selecting the same thing.

The sequence of the shape across the fixtures is controlled by the order in which you selected the fixtures when you created the shape..

- 1> Press softkey E to select [Adjust Phase, Spread and Offset]
- 2> Control the phase of the shape using the left hand wheel, or to set in terms of Spread, use the middle wheel.

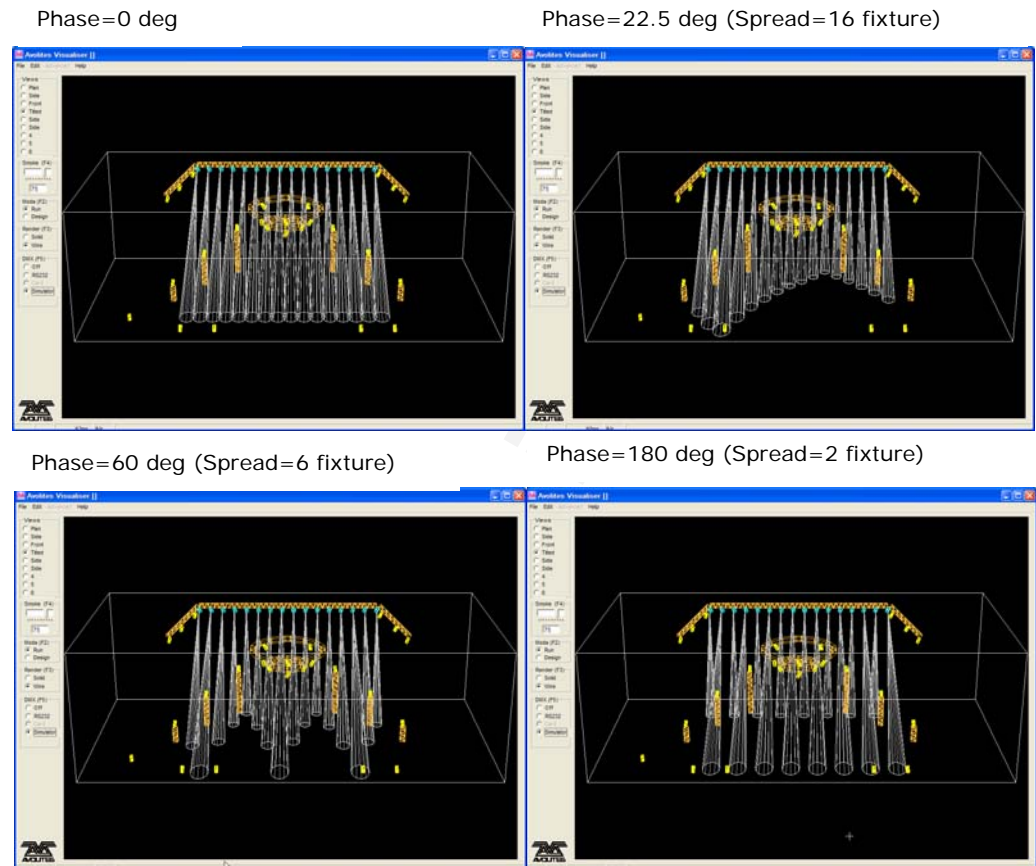

The display above the left hand wheel shows the phase in degrees. For example, 180 degrees repeats every 2 fixtures, 90 degrees repeats every 4 fixtures, 60 degrees repeats every 6 fixtures, and so on.

The Offset function allows you to set the starting phase of the shape, when more than one shape is running. For example, if you were running a Cyan shape and a Magenta shape to create a mix of colours, you would probably want to start them with Cyan at full and Magenta at zero to give the full range of colours. In this case you would set one of the shapes to have a Phase Offset of 180 degrees. Without the phase offset, both shapes would reach full at the same time.

## 5.2 Edit

### 5.2.1 Editing shapes which are running

If more than one shape is running, you can select which one is connected to the control wheels using Shape option B [Edit].

- 
- 1> *If you are not in the Shape menu, press [Shape Generator] at the top menu.*
  - 2> *Press [Edit].*
  - 3> *By the softkeys is a list of the currently running shapes.*
  - 4> *Press a softkey to make the shape active. The active shape is highlighted.*
  - 5> *Press Enter to get back to the Shape Generator menu.*
- 

- If you applied the same shape several times to different fixtures, you can change each copy of the shape independently.

### 5.2.2 Reversing a shape

You can reverse the direction of a shape by pressing [Reverse Shapes] from the shape menu, then pressing the softkey for the shape you want to reverse.

## 5.3 Delete

### 5.3.1 Deleting shapes

You can delete a running shape by pressing [Delete] from the shape menu, then pressing the softkey for the shape you want to delete.

## 5.4 Advanced options

### 5.4.1 Shape fade mode

When a shape is stored in a cue, you can set how the shape fades in using the cue's Mode setting (use [Edit Times] from the main menu then [Fade Mode]).

Modes 0,1 and 3: The shape size will grow from zero to the programmed size using the time/delay settings of the cue.

Mode 2: The shape size will be set by the fader position. It will start at zero and grow to its programmed size when the fader reaches 100%.

If a new cue is fired which controls the same attributes (for example, a second shape controlling the same fixtures as a currently running shape), the new shape will crossfade from the running shape.


Copyright Avolites Limited 2010

## 6. Cues

*This chapter contains: HTP and LTP channels; how the Tiger Touch works when programming; recording a cue; playing back a cue; changing playback pages; setting fade times for a cue; copying and deleting cues; the include function; editing cues; the "off" button; blind mode; using shapes in cues.*

The Tiger Touch has many functions for producing a complex light show, and the most fundamental part is a Cue, in which you can store a "look" you have created using your lights.

The Tiger Touch has 600 playbacks, in 60 pages of 10, which can be used to store cues, chases (sequences of "looks") or cue lists. Chases and Cue Lists are covered in the next chapters. The playbacks are controlled using the sliders and flash buttons across the near edge of the console.

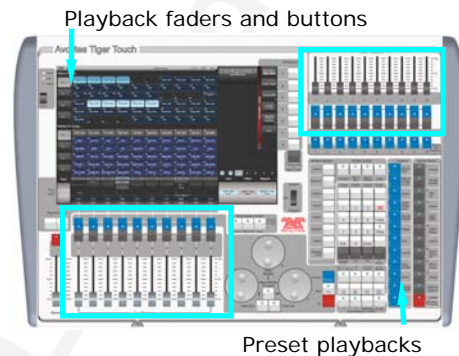

In addition, you can store 10 "preset" playbacks on the faders at the top right of the console. There are no page buttons for these faders, so the 10 playbacks stored there are always available.

Also, you can store cues in touch buttons in the Playbacks window, provided you don't need a fader.

The cue functions on the Tiger Touch are very powerful; the first part of this section explains the basics of how the Tiger Touch uses cues.

### 6.1 Create

#### 6.1.1 How the Tiger Touch works when programming

When you select one or more dimmers or fixtures for control, they are loaded into the Editor. You can then use the wheels and palettes to change the settings on the fixture. You can also apply shapes to it.

If a fixture is selected after you have changed some attributes then the current list of fixtures is emptied and a new list is started.

All fixtures and attributes that have been edited since the last Clear are stored in the Programmer. The order in which you selected the fixtures is also stored, and is used with the Fixture Overlap function. When you record a cue, the contents of the Programmer are saved into the cue.

When you press Clear (by the numeric keypad), the programmer and editor are emptied. This makes sure you don't record fixtures you don't want. You also need to press Clear when you finish programming, because any attributes in the programmer will override playbacks.

Fixtures which are in the programmer are shown in mid blue on the HUD windows and on the touch buttons. Attributes in the programmer (the things you have changed) are shown in cyan on the HUD windows and attribute displays.

Firing a cue does not place the values from the cue in the programmer (although the Include function lets you do this, see section 6.3.3 on page 67).

### 6.1.2 Creating a cue

- 1> Press Clear to clear the programmer. This ensures that you are starting with a clean slate.
- 2> Set up the look using the fixtures. You can save shapes in a cue. Remember that only the fixtures you have selected will be saved in the cue.
- 3> Press the blue Record Cue button.
- 4> Press the Swop button of an empty Playback to record the cue. (Select a new playback page first if you want to use a different page). You can also record a cue onto a touch button in the Playbacks window.
- 5> Press Clear to clear the programmer. Repeat from 2 to program more cues.

Other useful things to know about recording cues:

- [Record Mode] lets you select Record By Fixture (all attributes of any modified fixture are saved), Record By Channel (only modified attributes are saved) or Record Stage (all fixtures with a non-zero dimmer channel are saved). Record By Channel is useful if you want to layer multiple cues to create an effect.
- If you are recording a lot of cues, you can press the Menu Latch button to keep the Record Cue menu active. Press Exit to leave Record Cue mode.
- The touch screen immediately above each fader shows a legend for the playback. To set this, press [Set Legend], then the playback Swop button (or the touch select button), then enter a legend on the keyboard. Press Enter to store it.



### 6.1.3 Using shapes in cues

As you would expect, any shapes you have set up will be saved as part of the cue.



You can create a cue which contains a shape with no base reference values; a shape cue like this can then be fired with other cues to overlay the shape on the cue and give you instant effects based around the settings in that cue. When recording the cue, use the "Off" function to remove the other attributes from the programmer as described on page 69.

## 6.2 Playback

Because it's possible to play back a large number of cues at the same time, the Tiger Touch has to have rules on how it combines the output from different cues. These are called HTP and LTP rules.

### 6.2.1 HTP and LTP

The Tiger Touch treats control channels in two ways:

- Dimmer or intensity channels work on the principle of "Highest Takes Precedence" (HTP). If an HTP channel is active at different levels in several cues, the highest level will be output. When you fade out a cue, the HTP channels fade out with it.
- All other channels work on the principle of "Latest Takes Precedence" (LTP). The latest change takes over from any other values, so the most recent cue to be turned on is the one which is output. When you fade out a cue, LTP channels retain their values until changed by another cue.

### 6.2.2 Playing back a cue

To fire (play back) a cue, raise the fader. (Make sure there are no values in the programmer by pressing the Clear button, because anything in the programmer will override the playback).

- You can fire several cues at once.
- The HTP levels in the cue will be mastered by the fader level; for example if you set the fader at 50% then all HTP levels will be 50% of their programmed values.
- LTP channels are triggered as soon as the fader goes above 0%. If a fade time is programmed the LTP channels will start to fade; if there is no fade time they will snap to position (unless the cue is set to Mode 2; see the timings section 6.6 on page 70 for details of modes).
- You can Flash the cue by pressing the grey flash button. You can Swop (solo) the cue by pressing the blue Swop button (all other active cues will turn off while the button is pressed). Flash and Solo only work when the key is set to Run mode (and if you haven't reassigned the function of the buttons using Key Profiles, see below).
- You can Preload the cue by assigning the Preload function to the blue or grey buttons using Key Profiles. Preload sets the attributes of fixtures in the playback which are not currently active in any other playbacks. This is useful to avoid the fixtures visibly moving into position or changing colours or gobos when you raise the fader of the cue. To assign Preload, hold Avo Shift and press [Edit Key Profile], then press the button you want to assign (also see section 11.3.4 on page 113.) Note that this will

assign the function to all buttons of the same type. Also if you are using one of the system key profiles, which are not editable, you will need to select or create an editable key profile first.

### 6.2.3 Changing playback pages

You change playback pages using the +1 and -1 buttons to the left of the playback faders.. You can also touch the “Pages” roller graphic and enter a page number.

If you have stored cues on the touch select buttons, you select different pages using the Fixtures and Playbacks page touch buttons.

- Playbacks which are fired when you change page remain active. If you want to fire a cue on a fader which is already on from a previous page, lower the fader to zero then raise it again. The cue from the previous page will stop and the cue from the new page will fire.
- If you return to a page with an active playback, the fader will not resume control of the playback until it matches the current level of the playback. This prevents the playback level “jumping” when the fader is first moved.
- You can set a legend for each playback page. The legend is shown on “Pages” roller on the touch screen and on the HUD. Use [Set Legend] from the main Program menu then [Page Legends]. While in this menu you can change the page to set legends for different pages.

### 6.2.4 Releasing running playbacks

You can release a running playback to its previous state by pressing the blue Off button, then the Select button of the playback to be released. Channels will release back to their state in the previous playback until no playbacks are left to be released, at which point they will go to the power-on state. You can release all running playbacks by pressing the blue Off button then [Release all playbacks].

Channels will always release with a fade time of 2 seconds.

You can set a mask to release only some channels from the playback using the [Release Mask] option in the Playback Options menu.

- You can instantly kill a playback by pressing Avo+the swop button of the playback.

## 6.3 Edit

### 6.3.1 Editing a cue

You can edit any part of a cue you have already saved simply by making the changes and saving the new information on top of the cue.

- 
- 1> *Press Clear to empty the programmer.*
  - 2> *Fire the cue you want to edit, so you can see what you are doing. Kill all other cues to avoid confusion.*
  - 3> *Select the fixtures you want to change, and make the changes.*
  - 4> *Press Record Cue.*
  - 5> *Press the Swop button for the cue you are editing.*

- 6> Press [Merge] (the cue being edited is highlighted on the screen)
- 7> The Tiger Touch will merge the existing cue with your changes. Unchanged information is not affected.

- If you want to overwrite the cue entirely, use the option [Replace] at step 6.
- To speed up editing, you can set the console to “Always Merge” the cue. This is option A in the User Settings (press Avo and select User Settings).
- You can also press the Swop button for the cue a second time to select the “Merge” option (quicker than selecting the softkey Merge option).

### 6.3.2 Playback and Cue view

To see the current timings of the cue, touch the playbacks display above the fader, or press View then the swop button of the playback you want to view. The screen will show details of the delay, fade, overlap and curve settings for the cue. You can touch each item to enable editing.

If you touch the View button at the right hand end of the row or the [View Cue] context button, the Cue View window opens, showing you details of the settings individual timings for all the fixtures in the cue.

Playback View - Cue RollerA[4]						
	Delay In	Fade In	Fade Out	Fixture Overlap	Curve	View Cue
0	0	0	Disabled	100%	Linear	View

The Cue View has four different views: Levels, Palettes, Times, Shapes. Views are selected using the context buttons to the left of the menu buttons.

- The **Levels** view shows the individual attribute values for each fixture.
- The **Palettes** view shows which palettes have been used to record the cue. Palettes are shown by their legends. Where an absolute value was saved rather than a palette, the value is shown instead. Again you can edit or remove the values.
- The **Times** view shows individual attribute timings for fixtures. If global timings are set, no times are shown in the cue view.
- The **Shapes** view shows which attributes of each fixture are running shapes.

Cue View -																	
	Number	Order	Dimmer D F	Shutter D F	Pan D F	Tilt D F	Colour Func D F	Colour D F	Cyan D F	Red D F	Magenta D F	Green D F	Yellow D F	Blue D F	CMY Macro D F	Gobo 1 Func D F	Gobo 1 D F
ClrSp 1200	1		100.00	Closed	49.44	55.04	Fixed	Open	0.0	0.0	99.6	-	-	-	Index 0.0	-	-
ClrSp 1200	2		100.00	Closed	43.00	57.04	Fixed	Open	0.0	0.0	99.6	-	-	-	Index 0.0	-	-
ClrSp 1200	3		100.00	Closed	57.59	57.48	Fixed	Open	0.0	0.0	99.6	-	-	-	Index 0.0	-	-
ClrSp 1200	4		100.00	Closed	47.33	54.11	Fixed	Open	0.0	0.0	99.6	-	-	-	Index 0.0	-	-
ClrSp 1200	5		100.00						0.0	0.0	-	-	-	Index 0.0	-	-	-
ClrSp 1200	6		100.00						0.0	0.0	-	-	-	Index 0.0	-	-	-
ClrSp 1200	7		100.00						0.0	0.0	-	-	-	Index 0.0	-	-	-

You can edit or remove one or more individual control values in the cue.

Touch or drag over the required control values in the grid to select them – they will be highlighted in blue.

The softkeys then give you available settings for that control value, or you can directly edit values by typing numeric values and pressing enter,

You can delete the selected control(s) using the [Delete] softkey.

Any changes take immediate effect.

### 6.3.3 The Include function

The Include function lets you load selected parts of a cue back into the programmer. (Normally, only manual changes to fixtures are put in the programmer). You can then use this to make a new cue. This is useful if you want to make a cue which is similar to one you already have, or to build a new cue from various parts of other cues.

There are two modes, Quick Include and Advanced Include. Quick Include simply reloads the whole cue. Advanced Include allows you to specify which attributes of which fixtures you want to load into the programmer. So, for example, if you have a cue which contains position, colour and gobo information for 8 fixtures, you can use the include function to load only the colour information for 4 of the fixtures into the programmer. You could then “Include” position information from another cue into the programmer, and build up a new cue using information from several existing cues.

If you Include a chase or cue list, the screen shows you a list of the cues within it, and you select the one you want to Include using Wheel A or by touching the cue. You can also type in the cue number to Include.

- 1> Press Include (above numeric keypad).
- 2> Press [Quick Include] or [Advanced mode] if you want to change the mode
- 3> Press the Swop button of the cue you want to include. If you are in Quick Include mode, this Includes the cue and finishes.
- 4> If you are in Advanced mode, all fixtures in the cue will be selected. If you don't want them all, deselect the fixtures you don't want. The fixtures in the cue are highlighted on the HUD and on the fixture buttons.
- 5> Use [Set Mask] or the Attribute Bank buttons to select which Attributes you want to include (All are included by default –

*Softkey C turns them all off and D turns them all on). Softkey E lets you include or exclude Shapes from the cue.*

- 6> *Press Enter. The selected attributes of the selected fixtures will be loaded into the programmer.*
- 7> *Repeat from 2 to include other attributes from the same fixtures, or repeat from 1 to include other fixtures.*

- 
- In Quick Include mode, you can set a mask for the include by pressing one or more of the attribute bank buttons before you select the cue to include.

### 6.3.4 Removing attributes from cues using "Off"

The "Off" button allows you to remove an attribute which has been stored in a cue, as if you'd never recorded it.

For example, suppose you recorded a cue which had scans at a certain position, with the colour set to green. If you later decide that you don't want a colour recorded at all in the cue, so that the colour set by previous playbacks will remain, you set the colour values to Off in the programmer, which will remove those values from the cue. You can also use the Off function to remove complete fixtures from a cue by selecting all the attributes.

Setting an attribute to Off is not the same as recording an attribute at zero, since this would change the attribute when the cue was fired. It is the same as excluding that attribute using the mask when recording, and the attribute will remain unchanged when the cue is fired.

- 
- 1> *Use the Quick Include function (described in previous section) to load the cue you want to change into the programmer.*
  - 2> *Press the blue OFF button to display the Off menu.*
  - 3> *All fixtures in the cue will be selected. If you don't want to change them all, deselect the fixtures you don't want.*
  - 4> *Use the softkeys to select which Attributes you want to remove.*
  - 5> *Press Record Cue, then set the record mode to [Replace], and press the Swop button of the cue to update it.*
- 

- You can merge "Off" attributes into a cue without including it first.
- You can also remove attributes from palettes using the Off function.
- Another way to remove attributes is from the Cue View window. See section 6.3.2 on the previous page.

## 6.4 Copy, Move and Link

### 6.4.1 Copying or moving a cue

Using the Copy/Move/Link button you can make a copy of an existing cue, move it to a new playback, or create a new playback which is linked to the existing playback. You can copy, move or link multiple playbacks (which may be cues, chases or cue lists) in one operation.

Move is useful for tidying up the console. Linked cues are handy if you want a cue to appear on more than one page for ease of

programming; also the linked cue will have the same cue information in it, but can have different timings and playback options.

- 
- 1> *Press the blue Copy/Move/Link button.*
  - 2> *Select [Copy], [Move] or [Link]. Pressing the Copy/Move/Link button again will also toggle these options.*
  - 3> *Press the Swap button of the cue you want to copy/move/link. You can select a range of playbacks by holding the first button while pressing the last in the range.*
  - 4> *Press the empty Swap button where you want it to go.*
- 

- The Menu Latch button latches the Copy/Move/Link menu, so you can keep copying, moving or linking things without having to keep pressing the Copy/Move/Link button. Press Exit to unlatch.
- [Retain Layout] or [Bunch Up] is used when copying a group of cues with empty playbacks in the group – you can either keep the empty playbacks, or bunch up the used playbacks together.
- When in Copy mode, option [Copy Legends] can be changed to [Don't copy legends] so that the copied cues are given default legends.
- When in Move mode, [Swap Items if Required] will attempt to reposition any existing playbacks which are in the way of the move. This is useful when rearranging playbacks on a page which is nearly full.

## 6.5 Delete

### 6.5.1 Deleting a cue

To delete a cue:

- 
- 1> *Press the blue Delete button.*
  - 2> *Press the Swap button of the cue you want to delete.*
  - 3> *Press the Swap button again to confirm the delete.*
- 

- Press Menu Latch to keep the delete mode active. You can keep deleting using steps 2 and 3 without having to keep pressing the Delete button. Press Exit to leave latched delete mode.

## 6.6 Timing

The Tiger Touch allows a wide variety of timing functions to be set.


### 6.6.1 Setting fade times and Overlap for a cue

You can set a delay, fade in and fade out time independently for every cue. Shapes in the cue will also be affected, depending on the fade mode.

You can delay the fade times between fixtures in a cue so that the cue is applied sequentially to each fixture. This is called Fixture Overlap and can create some amazing “peel off” or “roll” type effects with no programming at all.

In the diagram below, the top picture shows how the LTP channels change when used with delay, fade and fade out times. The second picture shows how the HTP channels change. The third and fourth

pictures show what happens to the LTP channels when fixture overlap and attribute fade are used.

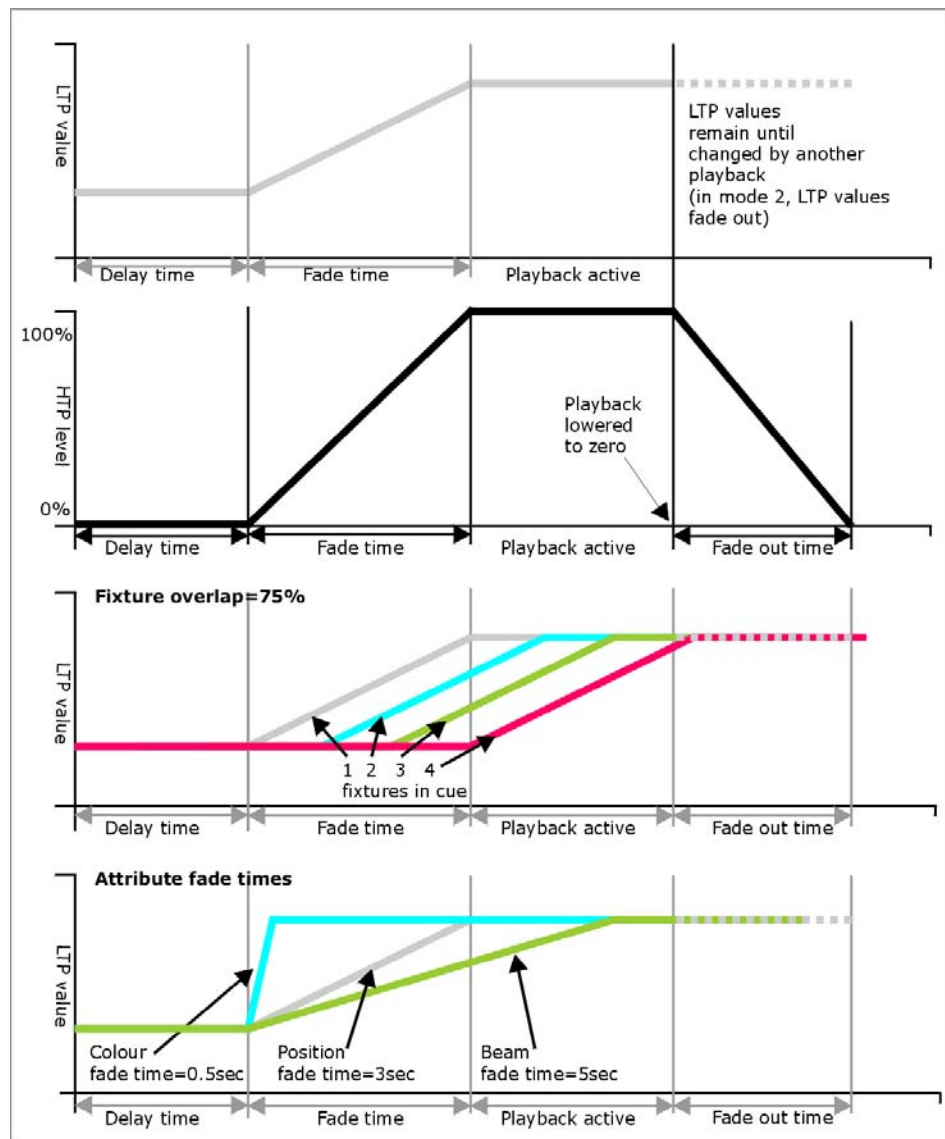

The times are set like this:

- 1> Press [Edit Times] at the top level menu.
- 2> Press the Swop button of the cue.
- 3> Press [Fade Mode x] to set the cue mode. This sets how the times are used, see below.
- 4> Press [Delay time] to set the delay before the cue starts, [Fade time] to set the fade-in time of the cue, and [Fade out time] to set the fade-out time of the cue.
- 5> Type the new time (in seconds) using the numeric keypad and press Enter to save it.
- 6> Press [Fixture Overlap] to change the overlap, then enter 0-100 on the keypad. 100% means all fixtures fade together. 0% means that the first fixture will finish its fade before the next one starts. 50% means that the 2<sup>nd</sup> fixture will start fading when the first one is half way through its fade. The order of the fixtures is set by the order you selected them (but you can change this, see section 6.6.2).

7> *Press Exit to get out of Edit Times mode.*

- You can also set independent times for the IPCGBES attribute groups, and for each individual attribute, see next section for details of this.

The times you enter are affected by the cue mode which is set using the [Fade Mode] option:

- Mode 0 – Channels will fade in as set by the fade time. The Fade Out time is ignored. If times are set to zero, the HTP channels fade in with the 0-100% position of the playback fader and the LTP channels will snap.
- Mode 1 - Channels fade in as set by the fade time. HTP channels fade out as set by the fade out times (LTP channels remain as set in the cue). If times are set to zero, the HTP levels will fade in and out with the fader and the LTP channels will snap when the cue is fired.
- Mode 2 – Channels will fade in as set by the fade time. The Fade Out time is ignored. However, the fade will stop when the fader position is reached, so if the fader is set to 50%, the attributes will stop half way to their programmed position. You can reverse the fade back to the original position by moving the fader back. If times are set to zero, both HTP and LTP channels are controlled by the fader position. In this mode LTP channels revert to their previous settings when the cue is deactivated.
- Mode 3 - Crossfade cue. All channels, including intensity channels, will fade to the settings in the new cue. All other cues fade out and all other active playbacks become inactive; if you need to re-fire a playback, take the fader to zero and put it up again.
- If the cue includes shapes, then the shape will change with fade times. The changes will be timed for a Mode 1 cue and controlled by the fader position for a Mode 2 cue. This allows you to create a shape which gets bigger or faster as you push up the fader.

### 6.6.2 Changing fixture order

You can change the order of the fixtures stored in a cue. Normally this is set to the order in which you selected the fixtures when the cue was created, but you might want to change this (for example to pair up fixtures so they move together).

- 1> *Press [Edit Times] at the top level menu.*
- 2> *Press the Swop button of the cue to be changed.*
- 3> *Press [Fixture Order].*
- 4> *Set the*





*sequence number to start from using option A.*

- 5> *If you want the sequence number to increase automatically, set [Autoincrement] to On. If you want some fixtures to have the same sequence number, set it to Off.*
  - 6> *Touch the Select buttons of the fixture(s) you want to place in that position in the sequence. The sequence number is shown in the top right hand corner of the fixture select touch buttons.*
  - 7> *Press Exit to finish.*
- 

- You can set several fixtures to have the same sequence number. This means, for example, when used with Overlap they will all do the same thing at the same time.
- You can remove a fixture from the sequence by giving it the same sequence number it already has. The fixture sequence will show X. Touch the button again to put it back in the sequence.

### 6.6.3 Setting attribute fade times for a cue

You can set individual fade times for each attribute group (such as Position). If you set a time, it overrides the normal times.

To set an attribute group fade time:

- 1> *Press [Edit Times] at the top level menu.*
  - 2> *Press the Swop button of the cue to be changed.*
  - 3> *Press the Attribute Bank button (right hand side) for the attribute you want to change.*
  - 4> *Press [Delay] to set delay time or [Set fade] to set fade time.*
  - 5> *Type the new time using the numeric keypad and press Enter to save it, or press [Use Global] to delete the attribute times and go back to the normal times.*
  - 6> *Press Enter to save the changes.*
- 

You can take this even further and set individual fade times for each fixture. When you select the cue to be changed, you will see that all the fixtures in the cue are selected. To set attribute times for only certain fixtures, change the fixture selection using the Swop buttons.

The Cue View window will display when editing cue timings to help you see what you are editing. You can touch fixtures or attributes in the grid to select which items are going to be edited.

Press the ALL button to select all fixtures in the cue.

When you are in the Set Attribute Times menu you can only select fixtures which are in the cue you are editing.

## 6.7 Advanced options

To set options for a cue, press [Playback Options] on the root menu, then press the swop button of the playback to be edited.

These options are also available for Chases and Cue Lists.

### **6.7.1 Release mask**

[Release Mask] lets you specify which attributes will be released to the state they were in from a previously fired playback when this playback is killed. You can also use the Attribute Bank buttons on the right side of the console to set the mask. The default setting is to not release any attributes.

### **6.7.2 Shape size/speed on fader**

If the cue contains shapes, options B and C set how the shape behaves when the playback fades in. You can set the size and/or speed to be either fixed or to change with the fader.

### **6.7.3 Curve**

[Curve] defines how the attribute values will change when the playback is faded in. The various curves are illustrated in section 11.5 on page 117.

### **6.7.4 Handle Paging**

This option allows you to lock the playback on a handle so that it always appears on that handle no matter what page is selected. This is useful if you have some general playbacks you want on every page, without having to copy the playback onto each page.

If you select "Transparent Lock" then the playback will appear on the current page only if no other playback is programmed in that position.

### **6.7.5 Playback priority**

This option allows you to configure how playbacks will behave if you turn on two playbacks controlling the same fixture. The priority can be set to Low, Normal, High or Very High. If a fixture is being controlled by a playback and you turn on a playback of the same or higher priority, then the new playback will take over. However, if the new playback is set to lower priority than the first playback, the fixture will not change.

This is useful if, for example, you've programmed looks using all your fixtures, then you decide you want a couple of them to spotlight a singer. If you set the Spotlight playback to be high priority, then while it is active no other playback will affect the spotlight fixtures.

Swop also obeys the priority settings and this provides a useful way of preventing certain playbacks from being swopped.

### **6.7.6 Key Profile**

Each playback can have an individual Key Profile allocated to it. This allows you to customise the panel button functions differently for each playback. A list of available Key Profiles is shown, or you can add a new one. The softkeys show the function allocated to the blue and grey buttons for each of the available Key Profiles.

If the playback Key Profile is set to "None", the default global profile is used.

## 7. Chases

*This chapter contains: Programming a chase; running a chase; setting speed, crossfade and direction; manually controlling the chase steps; setting step times and unlinking; editing a chase using unfold; editing a chase which is running; copying chases; chase options.*

As well as being used to store static cues, the playback faders on the Tiger Touch can also be used to store chases (sequences of cues). You can also store chases on touch buttons in the Playbacks window.

Chases can run once or repeat continuously. You can set individual fade time for each cue in the chase and unlink cues so that the console waits for you to press Go before the chase continues.

### 7.1 Create

#### 7.1.1 Programming a chase

To program a chase, you have to set up the look for each cue in the chase, then save it.

You can either set all the fixtures and dimmers manually for each cue in the chase, or you can use Include to load in the information from cues you have already recorded.

- 1> *Press the blue Record Chase button.*
- 2> *Press the Swop button of the playback where you want to store the chase (you can also store chases on touch buttons in the Playbacks window).*
- 3> *Set up the look for the first cue, either manually or by using "Include" on existing cues.*
- 4> *You can change the number given to the step using [Step Number].*
- 5> *Press the Swop button of the playback to store the programmer contents as a step of the chase. You can also press [Append Step] on the menu.*
- 6> *Press Clear (unless you want to re-use the contents of the programmer), then repeat from step 3.*
- 7> *Press Exit to finish when you have stored all the cues you want.*

- [Record Mode] lets you select Record By Fixture (all attributes of any modified fixture are saved), Record By Channel (only modified attributes are saved) or Record Stage (all fixtures with a non-zero dimmer setting are saved).
- The cue number currently being saved, and the total number of cues, is shown on the top line of the display.
- Press Clear when you have finished recording the chase, otherwise when you try to play it back the programmer will override the chase and you won't see the chase properly.
- You can record shapes in a chase. If the same shape is saved in subsequent cues it will continue from step to step and if not it will stop at the end of the cue. (The Tiger Touch considers the shape to be the same if you didn't press Clear after the previous step, and didn't change the speed, size or phase of the


shape from the previous step; or if you Included the shape from the previous step and have not modified it)

- You can set a legend for the chase by pressing Set Legend, then pressing the Swop button for the chase and entering the legend, as with cues.
- There is no limit to the number of steps in a chase.


## 7.2 Playback

### 7.2.1 Playing back a chase

To fire a chase, raise the fader of the playback. (You can also use the Flash/Swop buttons). The chase will start to run. The touch screen above the fader shows the current cue number and speed of the chase.

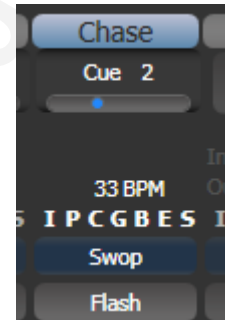

- The HTP (intensity) channels in the chase will be controlled by the fader; if fade times are programmed, the fade will stop at the fader level. The other channels (LTP) will be set as soon as the fader moves above zero according to the fade times programmed in the chase. You can set the point at which the LTP channels activate from the User settings menu.
- While the chase is running, the area of the LCD screen above the wheels shows details of the chase steps.
- You can temporarily pause the chase by pressing the Stop button to the right of the wheels. Press Go to resume playback.

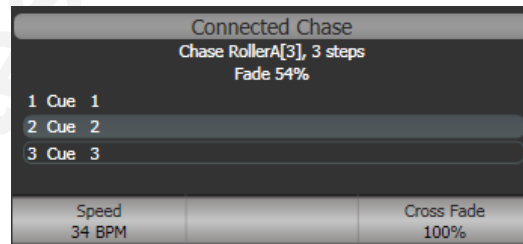

There are many options you can set to determine the way the chase runs and these are described in the rest of this chapter.

### 7.2.2 Connecting a chase for control

When you fire a chase, the wheels and Stop/Go buttons are automatically allocated to control the Speed and Crossfade of the chase – this is called Connecting the chase. If you have more than one chase running, you can choose which chase is connected to the controls using the Connect button.


- Connect a different chase to the controls by pressing the Connect button (right of the wheels) then the Swop button of the chase you want to control.
- Disconnect a chase from the controls by double pressing the Connect button.
- You can turn off the “chase autoconnect” option in the User Settings menu if you don’t want to connect to a chase when you fire it. You will have to use the Connect button to control the chase if you do this.

- Normally if you change the speed or crossfade of a chase, the new setting is saved. However you can set this change to be temporary, so that when the show is reloaded the speed and fade will go back to the previously saved settings. Go to User Settings (Avo button + [User Settings]) and set option C to [Connected View Sets Temporary Chase Speed]. You can still save a temporary speed by pressing [Save Temporary Speed] in the Set Times menu.

### 7.2.3 Setting speed and crossfade for a Chase

The left wheel is assigned to control the Speed of the chase it is connected to. The speed is shown in Beats Per Minute (BPM) on the display. You can also enter a speed from the keypad as described below. The last speed you set on the wheel is always remembered, you do not have to tell the Tiger Touch to save it.

Crossfade is the "slope" between cues; with a crossfade of 0, the fixtures snap instantly to the next cue, but with a crossfade of 100, the fixtures spend the whole cue time fading to the next cue. With a crossfade of 50, the fixtures delay for half the cue time and fade for the other half of the time.

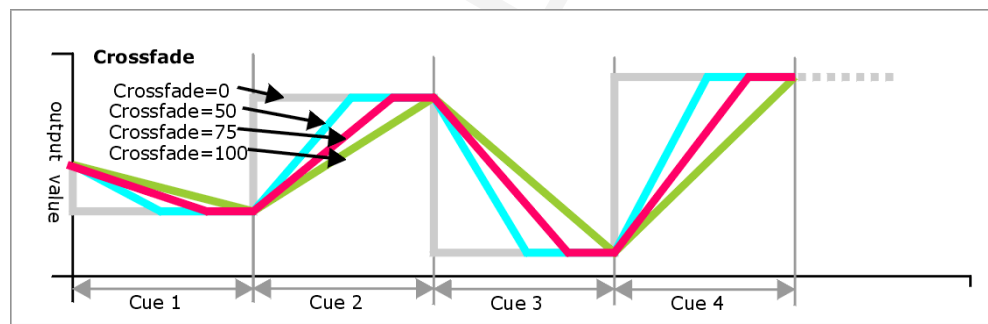

You set the crossfade and speed as follows:

- 1> Press [Edit Times] from the top level menu then the Swop button of the chase.
- 2> To set the crossfade, press [Xfade] and type the fade from 0 – 100. 0=no fade (the chase will "snap"), 100=max fade (the chase will move continuously from step to step).
- 3> To set the speed, press [Speed], type the new speed, then press Enter. The speed can be set in Beats Per Minute (BPM) or seconds depending on the User Settings.

There are other options you can set for the chase from this menu including Fixture Overlap, which are described in the Timings section 7.6.1 on page 81.

You can set individual times for each cue in a chase and unlink cues from each other so they wait for you to press the Go button. This is done using the Playback View, or the Unfold function which is described in section 7.3.2 on page 79.

You can select whether the chase speed is displayed in Seconds or in Beats Per Minute (BPM). Press Avo and [User Settings], then press

[Tempo Units] to set the option to [Tempo Units Seconds] or [Tempo Units Beats Per Minute (BPM)].

#### 7.2.4 Manually controlling the steps of a chase

You can pause a chase, if the chase is connected to the wheels, by pressing the Stop button next to the wheels. Press the red Go button to resume playback of the chase.

While the chase is stopped you can use the ← and → buttons to the right of the Connect button to move to the next or previous step.

You can also configure the blue and grey buttons of the playback handle to be Stop and Go. This uses the Key Profiles function.

- 
- 1> Switch the mode switch to System and press [Key Profiles].
  - 2> Press [Edit Profile] and then press the profile you want to edit (normally this would be "Run" for run mode or "Program" for program mode).
  - 3> Press [Chases] then choose either the Blue key or the Grey key.
  - 4> Select Go or Stop from the function menu. Then press Exit and set the function for the other key if required.
  - 5> Switch the mode switch back to Program or Run to continue using the console.
- 

#### 7.2.5 Changing chase direction

The arrow buttons to the right of the Connect button set the direction of the connected chase. The ↔ double-ended arrow button sets "bounce" mode where the chase will run to the end then reverse. The Review key sets the chase to Random.

#### 7.2.6 Jumping to a step

You can jump directly to a step in a chase by pressing the Connect button, then typing in the desired step number, then pressing Enter or softkey A. Alternatively at the top level menu you can type the step number then press Connect.

### 7.3 Edit

#### 7.3.1 Opening a chase for editing

You can open a chase for editing by pressing Chase then the Swop button of the chase. This does not affect any existing cues in the chase. You can then save new cues at the end by pressing the Swop button just like normal recording.

To see a list of the cues in the chase, use Playback view (touch the playback display above the fader or press View then the Swop button of the playback). To edit any of the time settings in each cue, select the setting to be modified by touching or dragging in the grid, then use the softkey options to change the setting.

Playback View - Chase 'PRESS GO'							
	Legend	Delay In	Fade In	Fade Out	Fixture Overlap	Link	View Cue
1	Cue 1	Global	Global	= As In	Global	After Previous	View
2	Cue 2	Global	Global	= As In	Global	After Previous	View
3	Cue 3	Global	Global	= As In	Global	After Previous	View
5	Cue 5	Global	Global	= As In	Global	After Previous	View
6	Cue 6	Global	Global	= As In	Global	After Previous	View
7	Cue 7	Global	Global	= As In	Global	After Previous	View
8	Cue 8	Global	Global	= As In	Global	After Previous	View

### 7.3.2 Editing a chase using Unfold

The Tiger Touch has a powerful chase editing system. The Unfold button places each cue in a chase on one of the playback faders, allowing you to fire and edit each cue individually as if it was a stand-alone cue. Unfold also allows you to set individual timing for cues in the chase.

- 1> Press the blue Unfold button, then the Swop button of the chase to be edited.
- 2> The first 10 cues of the chase are loaded into the playback faders.
- 3> Raise a playback fader to output the contents of that cue (fade times will operate as programmed).
- 4> Various Unfold options are available, the details are below.
- 5> Press Unfold again to get out of unfold mode.

- To edit the contents of a cue: Press Clear to empty the programmer, raise the fader to output the cue, make the changes, press [Record Step], then the Swop button for the cue number.
- To Insert a new cue at the end of the chase, set up the look for the new cue, press [Insert Step], then press the swop button of the first free playback.
- To Insert a cue between two other cues, set up the look for the new cue, press [Insert Step], then type the cue number for the new cue (such as 1.5 to go between 1 and 2). If this cue number already exists it will be merged with the look you have created. Otherwise a new cue is inserted.
- To change individual times for the cue, press [Edit Times], then the Swop button for the cue (or type the cue number), then set the times. This is described in detail in the Timing section on the following page.
- If the chase has more steps than there are playback faders, you can go between pages using the [Previous Page] and [Next Page] buttons.

## 7.4 Copy, Move and Link

### 7.4.1 Copying or moving a chase

Using the Copy/Move/Link button you can make a copy of an existing chase, move it to a new playback, or create a new playback which is linked to the existing playback. You can copy, move or link multiple playbacks (with cues, chases or cue lists) in one operation.

Move is useful for tidying up the console. Linked chases are handy if you want a chase to appear on more than one page for ease of programming; also the linked chase will have the same chase information in it, but can have different timings and playback options.

- 
- 1> Press the blue Copy/Move/Link button.
  - 2> Select [Copy], [Move] or [Link]. Pressing the Copy/Move/Link button again will also toggle these options.
  - 3> Press the Swap button of the chase you want to copy/move/link. You can select a range of playbacks by holding the first button while pressing the last in the range.
  - 4> Press the empty Swap button where you want it to go.
- 

- The Menu Latch button latches the Copy/Move/Link menu, so you can keep copying, moving or linking things without having to keep pressing the Copy/Move/Link button. Press Exit to unlatch.
- [Retain Layout] or [Bunch Up] is used when copying a group of chases with empty playbacks in the group – you can either keep the empty playbacks, or bunch up the used playbacks together.
- When in Copy mode, option [Copy Legends] can be changed to [Don't copy legends] so that the copied chases are given default legends.
- When in Move mode, [Swap Items if Required] will attempt to reposition any existing playbacks which are in the way of the move. This is useful when rearranging playbacks on a page which is nearly full.

## 7.5 Delete

### 7.5.1 Deleting a chase

To delete a chase:

- 
- 1> Press the blue Delete button (bottom right).
  - 2> Press the Swap button of the playback you want to delete.
  - 3> Press the Swap button again to confirm the delete.
- 

Press Menu Latch to keep the delete mode active. You can keep deleting using steps 2 and 3 without having to keep pressing the Delete button. Press Exit to leave latched delete mode.

### 7.5.2 Deleting a step from a chase

To delete a single step from a chase:

- 
- 1> Press the blue Delete button.
  - 2> Press the Swap button of the chase.



- 3> *The steps in the chase are listed on the screen. Use the left hand wheel to select the step you want to delete, or type in the number of the step to be deleted.*
- 4> *Press [Delete Cue x] to delete the step.*
- 5> *Press [Confirm] to confirm the delete.*

- Alternatively you can use the Unfold function to delete a step from a chase.

## 7.6 Timing

### 7.6.1 Global timings for chases


When a chase is first programmed, each cue in the chase has identical timing. This is called the global timing for the chase. If you want you can then set each cue to have its own timings using the Playback View window or Unfold. This is described in the next section.

- 1> *Press [Edit Times] from the top level menu then the Swop button of the chase.*
- 2> *Set the Crossfade, Speed, Fixture Overlap and Attribute Overlap settings as described below.*
- 3> *Press Exit to finish.*

- To set speed, press [Speed] then type the new speed, then press Enter. The speed can be set in Beats Per Minute (BPM) or seconds depending on the user settings.
- To set crossfade, press [Xfade] then type the fade from 0 – 100 and press Enter. 0=no fade (the chase will “snap”), 100=max fade (the chase will move continuously from cue to cue)
- When in Run mode, you can set the chase speed of the connected chase by tapping the [Tap Tempo] button in the main menu at the speed you want the chase to run. (The option only appears when a chase is connected). You can also assign the blue or grey handle button to be a “tap tempo” button using the Key Profiles option (see section 11.2.1 on page 111).

The Overlap functions allow you to offset and overlap the timing of changes in the chase. This can create really amazing visual effects with hardly any programming. The best way to learn about overlap is to program a chase with two cues involving several fixtures, then experiment with the overlap settings to see the various “roll” and “peel off” effects which result.

The following diagram shows you the effects of cue overlap, fixture overlap and attribute overlap in chases.

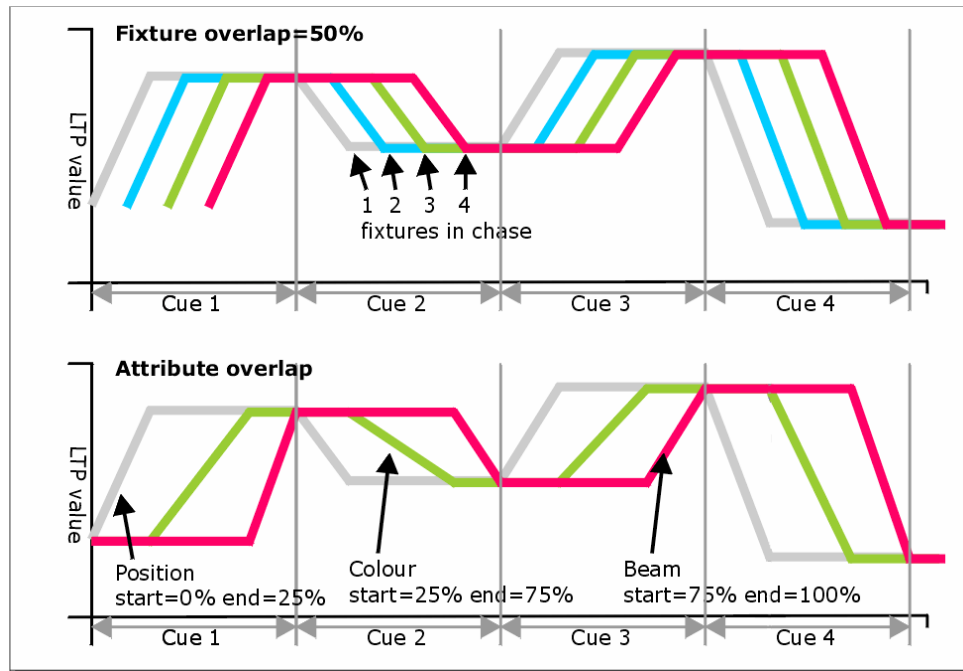

- Press [Fixture Overlap] then enter 0-100 on the keypad to change how fixtures overlap in the cue. 100% (the normal setting) means all fixtures fade together. 0% means that the first fixture will finish its fade before the next one starts giving a “rolling” change across a range of fixtures. 50% means that the 2<sup>nd</sup> fixture will start fading when the first one is half way through its fade. The order of the fixtures is set by the order you selected them when the cue was saved; you can change the order using Unfold.

Note: From v3 software, [Cue Overlap] is no longer available in chases. Instead use a Cue List set to “Link With Previous” and set the Offset as desired.

## 7.6.2 Individual cue times in chases

You can configure each cue in a chase to have its own timing information. You can use the Playback View window, or the Unfold function to set individual times for cues in chases.

Note: It is easier to use a Cue List rather than a chase if you need a lot of different timings or link/unlinks. Cue lists are described in the next chapter.

Using the Playback View window:

- 1> Touch the playback display above the fader, or press View then the swap button of the playback. The Playback View window will open.
- 2> In the grid, touch the times you

Playback View - Chase 'PRESS GO'							
	Legend	Delay In	Fade In	Fade Out	Fixture Overlap	Link	View Cue
1	Cue 1	Global	Global	= As In	Global	After Previous	View
2	Cue 2	Global	Global	= As In	Global	After Previous	View
3	Cue 3	Global	Global	= As In	Global	After Previous	View
5	Cue 5	Global	Global	= As In	Global	After Previous	View
6	Cue 6	Global	Global	= As In	Global	After Previous	View
7	Cue 7	Global	Global	= As In	Global	After Previous	View
8	Cue 8	Global	Global	= As In	Global	After Previous	View

want to edit.

- 3> Use the softkey options to change the times or settings.
- 4> Repeat from 2 to change other times or settings.

- You can change a range of cues all at once by dragging across the grid to select multiple cells, or you can use wheel B to select multiple cells for editing.

Using Unfold:

- 1> Press the blue Unfold button, then the Swop button of the chase to be edited.
- 2> Press [Edit Times] then the Swop button of the unfolded cue you want to edit.
- 3> Set up the timing options as required. The options are described below.
- 4> Press Unfold to get out of unfold mode.

Initially all the timing options are set to Global. You can cancel any individual timings and set the time back to global timings by pressing the softkey for the option then pressing [Use Global].

The timing options for the cue are:

- Delay
- Fade (in)
- Fade Out
- Fixture Overlap
- Linking with previous step
- Attribute times (see next section)

Linking can be set to [Link After Previous] (the chase will run automatically) or [Link Wait For Go] which will stop the chase until you press Go.

### 7.6.3 Setting attribute fade times for a cue in a chase

For each cue in a chase, you can set individual fade times for each attribute group (such as Position). If you set a time, it overrides the normal times. You can use the Cue View window, or the Unfold function to set attribute times.

To set an attribute group fade time:

- 1> Press View or the blue Unfold button, then the Swop button of the chase to be edited.
- 2> Press [Edit Times] then touch the cue you want to edit in the Playback View, or if using Unfold, press the Swop button of the unfolded cue you want to edit.
- 3> Press the Attribute Options button (right hand side) for the attribute you want to change.
- 4> Press [Delay] to set delay time or [Set fade] to set fade time.
- 5> Type the new time using the numeric keypad and press Enter to save it, or press [Use Global] to delete the attribute times and go back to the normal times.
- 6> Press Enter to save the changes.

## **7.7 Advanced options**

To set options for a chase, press [Playback Options] on the root menu, then press the swop button of the playback to be edited.

The same options are available as for Cues (see section 6.7 on page 73), with some additional options for Chases.

### **7.7.1 Loop/Stop on Final Cue**

Option B lets you specify whether the chase will loop back to the beginning or stop on the final cue.

### **7.7.2 Forwards/backwards/bounce/random**

Option C sets the direction of the chase.

### **7.7.3 Cue linking**

Option D sets how the cues in the chase are linked. The settings are:

- [Always Link Steps]: The chase will run on its own using the times
- [Never Link Steps]: The chase will pause after every delay/fade time for the user to press Go.
- [Link according to individual steps]: Each step in the chase will obey its individual link settings which are set using the Playback View window or the Unfold function.

### **7.7.4 Renumber cues**

Option [Renumber cues] will renumber all the cues in the chase starting from 1.

## 8. Cue Lists

*This chapter contains: Programming a cue list; running a cue list; editing, copying and deleting cue lists; setting fade times; cue list options.*

Cue Lists allow you to record a sequence of cues, each of which can have its own timings and can be triggered by the Go button or run automatically to the next cue. This allows you to build a complete show in a single list and is ideal for theatrical shows where the show must be exactly the same each time.

Cue lists differ from chases in the way the console handles changes between cues. Chases will crossfade between cues whereas a cue list will track changes.

For example: You record dimmer 1 in cue 1, press clear, record dimmer 2 in cue 2, press clear, record dimmer 3 in cue 3. If this were a chase, when you play it back each cue will fade out the dimmer from the previous cue, as it is not in that cue. Therefore once you get to cue 3, you will only have dimmer 3 active.

Cue lists on the other hand track the cues. This means that the cue list only knows about the changes, so in going from cue 1 to 2 it won't change dimmer 1 as there is no data about dimmer 1 in cue 2. This means that once you get to cue 3, it will have accumulated the data from all the cues and the output will consist of dimmers 1, 2 and 3 together.

If you wanted cue 2 to turn off dimmer 1, you would have to explicitly set the level of dimmer 1 at zero (by selecting it and setting the Intensity to 0); or you can miss out pressing Clear in between saving each cue.

This means that you need to be mindful of what is actually being saved in each cue when you record your cue list.

To view the contents of a cue list, touch the playback screen above the fader or press View then the swop button of the playback.

Playback View - Cue List Playbacks[7]												
	Legend	Delay In	Fade In	Delay Out	Fade Out	Fixture Overlap	Link	Link Offset	Preload	Curve	Autoload	Tim
1	Tabwarm	0	2	= As In	= As In	100%	Wait For Go	Disabled	<input type="checkbox"/>	Linear	Load Cue RollerB[3];	23:5
2	Cue 1	0	2	= As In	= As In	100%	Wait For Go	Disabled	<input type="checkbox"/>	Linear		23:5
3	End of scene	0	2	= As In	= As In	100%	Wait For Go	Disabled	<input type="checkbox"/>	Linear		23:5
4	Cue 2	0	2	= As In	= As In	100%	Wait For Go	Disabled	<input type="checkbox"/>	Linear		23:5
5	Cue 5	0	2	= As In	= As In	100%	Wait For Go	Disabled	<input type="checkbox"/>	Linear		23:5
6	Cue 6	0	2	= As In	= As In	100%	Wait For Go	Disabled	<input type="checkbox"/>	Linear		23:5

## 8.1 Create

### 8.1.1 Programming a cue-list

Programming a cue list is similar to recording a chase.

You need to set up the look on the stage for each cue and then add it to the cue list. If you want to set fade times, you can either set them while saving the cues or later.

- 
- 1> *Press the blue Record Chase/List button twice (or press Record Chase/List then [Create Cue List]).*
  - 2> *Press the blue Select button of the playback where you want to store the Cue List (you can also store cue lists in the Playbacks window).*
  - 3> *Select the Record Mode of the console: by Fixture, Channel, or Stage using [Record Mode Stage] is safest as you are sure to record the whole console output.*
  - 4> *Set the default Fade and Delay times, and automatic cue linking, using [Set Times]. These settings will be allocated to every new cue.*
  - 5> *Set up the look for the first cue, either manually or by using "Include" on existing cues. [Shape Generator] allows you to program shapes.*
  - 6> *If you require a legend for the cue, set it now using Softkey C. You can also change this later using Unfold or Set Legend (see next section).*
  - 7> *Press the Select button of the handle or [Append Cue] to store the programmer contents as Cue 1 of the cue list.*
  - 8> *Repeat from step 5 for the next cue. Do not press Clear in between cues, unless you want levels to track through from previous cues, as any faders moving to zero will not be stored. If you do press clear, you must make sure that all channels you want to record are selected or in the programmer (inverted display).*
  - 9> *Press Exit to finish when you have stored all the cues you want.*
- 
- [Record Mode] lets you select Record By Fixture (all attributes of any modified fixture are saved), Record By Channel (only modified attributes are saved) or Record Stage (all fixtures with a non-zero dimmer channel are saved). Record By Channel is useful if you want to layer this cue list with other playbacks to create an effect.
  - You can reopen the cue list to add more cues by repeating the procedure above; this does not affect any cues already stored in the cue list.
  - To add more cues to the end of the existing cues press [Append cue].
  - To edit an existing cue, press [Cue Number=] and type the cue number to edit. Make the changes then press [Update Cue x].
  - To insert new cues, see section 8.3.2.
  - The Advanced Options menu allows you to renumber all the cues, and to change the number of an existing cue.
  - There is no limit to the number of cues in a cue list.

### 8.1.2 Changing legends for cues in a cue list

You can set a legend for each cue, which is shown on the screen when running the cue list and can be helpful for keeping track of where you are.

- 1> Press [Set Legend] in the top level menu. If you are setting legends for several cues, press Menu Latch to latch the Set Legend menu.
- 2> Press the Select button of the Cue List.
- 3> The cues in the cue list are shown on the LCD screen. Use Wheel A or touch the list to select the cue which is to have a legend set.
- 5> Press E and type the legend on the keyboard, then press Enter.
- 6> If you latched the menu, you can continue to set legends for other cues, or press Exit to finish.

### 8.1.3 Autoloading a playback within a cue list

You can program a cue within a cue list to automatically load one or more playbacks when the cue fires. The playback can be a single cue, a chase or another cue list. This can be useful to trigger off chases or effects from the cue list.

- 1> Press [Playback Options] in the top level menu.
- 2> Press the blue Select button of the Cue List.
- 3> Press [Autoload].
- 4> The cues in the cue list are shown on the screen. Use Wheel A to select the cue which is to have the Autoload set, or touch the grid.
- 5> Press the Select button of the playback which is to be loaded. The playback legend appears on the softkeys.
- 6> You can continue to add Autoloads to other cues, or press Exit to finish.

Playback View - Cue List Playbacks[7]												
	Legend	Delay In	Fade In	Delay Out	Fade Out	Fixture Overlap	Link	Link Offset	Preload	Curve	Autoload	Tim
1	Tabwarm	0	2	= As In	= As In	100%	Wait For Go	Disabled	<input type="checkbox"/>	Linear	Load Cue RollerB[3];	23:5
2	Cue 1	0	2	= As In	= As In	100%	Wait For Go	Disabled	<input type="checkbox"/>	Linear		23:5
3	End of scene	0	2	= As In	= As In	100%	Wait For Go	Disabled	<input type="checkbox"/>	Linear		23:5
4	Cue 2	0	2	= As In	= As In	100%	Wait For Go	Disabled	<input type="checkbox"/>	Linear		23:5
5	Cue 5	0	2	= As In	= As In	100%	Wait For Go	Disabled	<input type="checkbox"/>	Linear		23:5
6	Cue 6	0	2	= As In	= As In	100%	Wait For Go	Disabled	<input type="checkbox"/>	Linear		23:5

The Autoloaded playback will be fired when the cue starts, and killed when the cue list moves on to the next cue, unless you have also loaded the playback into the next cue.

You can set options for each Autoloaded playback by pressing the softkey where the Autoloaded playback is shown.


For a cue, the only option is A [Remove this Autoload].

For a chase or cue list, softkey B lets you select whether to load the playback from the start, to start at a specific cue, or to press Go on the target playback.


## 8.2 Playback

### 8.2.1 Running a cue list

Raise the fader of the cue list and press the Go button to run the first cue. The bottom section of the display shows the cue list; the current cue is highlighted in grey and the next cue has a box round it.

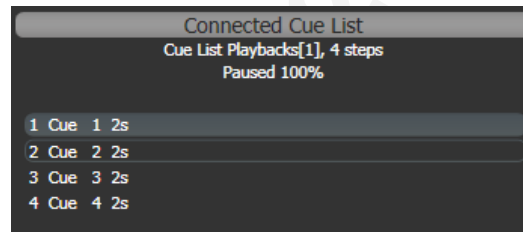

Also the display above the playback fader shows information about the cue list, including the current and next cue, fade progress of the current cue, and fade in/out times.

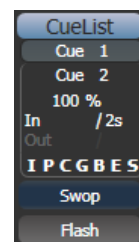

- The HTP levels of cues in the cue list are mastered by the fader level.
- You can pause a fade by pressing the Stop button above the Go button. Press Go again to resume the fade.
- You can skip to any cue in the cue list by selecting a “next” cue using Wheel A, or using the left/right arrow keys. When you press Go, the cue list will run that cue next.
- You can snap back to the previous cue by pressing the Snap Back button
- You can jump directly to a cue by pressing the Connect button, then typing in the desired cue number, then pressing Enter or softkey A. Alternatively at the top level menu you can type the cue number then press Connect.
- You can use Key Profiles to set the blue and grey buttons of the playback to have various functions including Go, Stop, Connect, Next Cue, Prev Cue, Cut Next Cue To Live, and Snap Back.
- When you lower the fader for a cue list, the HTP channels will fade out, but the cue list will remain active. The section below details how to kill the cue list.
- You can use timecode to play back a cue list automatically. See section 8.6.5 on page 95.

### 8.2.2 Killing a cue list

Once a cue list is fired, it remains active until you kill it. You do this by holding down the Avo Shift button and pressing the blue Select button of the cue list’s handle.

You can change this in the Playback Options to make the cue list automatically clear when the fader reaches zero (press [Playback Options] at the program menu, then press the Select button of the cue list, then select [Fader Mode Intensity Kill At 0]).



## 8.3 Edit

### 8.3.1 Editing a cue list using Unfold

The Unfold button places each cue of the cue list on one of the playback faders. This allows you to fire and edit each step individually as if it was a stand-alone cue.

- 
- 1> *Press the blue Unfold button, then the Select button of the cue list to be edited.*
  - 2> *The first 10 cues are loaded into the playback faders. The display shows the cue numbers and legends.*
  - 3> *Raise a playback fader to output the contents of that cue (fade times will operate as programmed).*
  - 4> *Various Unfold options are available, the details are below.*
  - 5> *Press Unfold again to get out of unfold mode.*
- 

- To edit the contents of a cue: Press Clear to empty the programmer, raise the fader to output the cue, make the changes, press [Record Step], then the Select button for the cue number.
- To change the times or cue linking for the cue, press [Edit Times], then the Select button for the cue, then set the times (see Timing on the following page)
- To Insert a new cue, set up the look for the new cue, press B [Insert Step], then press the playback button where you want the new cue to go. All following cues will be shifted on by one and the new cue will be given a number in between the two existing cues (for example, if you press playback 3, your new cue will be 2.5).
- To Delete a cue, press the blue Delete button then the Select button for the cue you want to delete. Press the Select button again to confirm.
- To change the cue legend, press [Set Step Legend] then the playback select for the step you want to change.
- If the cue list has more cues than there are playback faders, you can swop to the next page using softkeys F and G.

### 8.3.2 Editing a cue list which is running

You can also edit cues in a cue list while you are running it without using Unfold.

- 
- 1> *Fire the cue list by raising its fader.*
  - 2> *Use Wheel A to select the cue number you want to change then the white ↔ button above the Snap Back button to jump to it.*
  - 3> *Press Clear to make sure the programmer is empty.*
  - 4> *Make the changes that you want to the current step.*
  - 5> *Press Rec. Step, then select [Replace], [Merge] or [Insert After] to save the changes (pressing Rec.Step again will select Merge).*
  - 6> *Press the ↔ button to jump on to the next step.*
-

- You can edit the times for a cue using the Live Time and Next Time buttons as follows:

- 
- 1> Fire the cue list by raising its fader.
  - 2> Use Wheel A to select the cue number you want to change then the white ↔ button above the Snap Back button to jump to it.
  - 3> Press the Live Time button to set the times for the current step, or the Next Time button for the next step. The Live and Next step numbers are shown on the display above the controller wheel.
  - 4> Use the softkeys to set the times, linking and overlap settings you want (see section 6.6.1 on page 70 for description of the times). If you set the [Link to next step] option to On, then the next cue will not wait for the Go button.
  - 5> Press the ↔ button to jump on to the next step.
- 

- The Next Time button allows you to set the time of the next cue without actually running it.
- The Review button lets you test the live step with the new timings.
- You can also use Unfold to set the times as described in the Unfold section above.

### 8.3.3 Editing a cue list while recording

You can edit cues while you are in the Record Cue List menu.

- 
- 1> Press [Cue Number=x] and type the cue number to be edited.
  - 2> The Tiger Touch will jump to the cue and show the output.
  - 3> Make the changes that you want to the programming of the current step, or to the timings using [Edit Cue x Times].
  - 4> Press [Update Cue x] to save the changes..
- 

- You can't change the cue number using this menu – if you press [Cue Number] this will change the cue you are editing. Use [Advanced Options] to change cue numbers.

## 8.4 Copy, Move and Link

### 8.4.1 Copying or moving a cue list

Using the Copy/Move/Link button you can make a copy of an existing cue list, move it to a new playback, or create a new playback which is linked to the existing playback. You can copy, move or link multiple playbacks (which may include cues, chases or cue lists) in one operation.

Move is useful for tidying up the console. Linked cue lists are handy if you want a cue list to appear on more than one page for ease of programming; also the linked cue list will have the same cue list information in it, but can have different timings and playback options.

- 
- 1> Press the blue Copy/Move/Link button.

- 2> Select [Copy], [Move] or [Link]. Pressing the Copy/Move/Link button again will also toggle these options.
- 3> Press the Swap button of the cue list you want to copy/move/link. You can select a range of cue lists by holding the first button while pressing the last in the range.
- 4> Press the empty Swap button where you want it to go.

- The Menu Latch button latches the Copy/Move/Link menu, so you can keep copying, moving or linking things without having to keep pressing the Copy/Move/Link button. Press Exit to unlatch.
- [Retain Layout] or [Bunch Up] is used when copying a group of cue lists with empty playbacks in the group – you can either keep the empty playbacks, or bunch up the used playbacks together.
- When in Copy mode, option [Copy Legends] can be changed to [Don't copy legends] so that the copied cue lists are given default legends.
- When in Move mode, [Swap Items if Required] will attempt to reposition any existing playbacks which are in the way of the move. This is useful when rearranging playbacks on a page which is nearly full.

## 8.5 Delete

### 8.5.1 Deleting a cue list

To delete a cue list:

- 1> Press the blue Delete button (bottom right).
- 2> Press the Swap button of the playback you want to delete.
- 3> Press the Swap button again to confirm the delete.

Press Menu Latch to keep the delete mode active. You can keep deleting using steps 2 and 3 without having to keep pressing the Delete button. Press Exit to leave latched delete mode.

### 8.5.2 Deleting a cue from a cue list

To delete a single cue from a cue list:

- 1> Press the blue Delete button.
- 2> Press the Swap button of the cue list.
- 3> The cues in the cue list are listed on the screen. Use the left hand wheel to select the cue you want to delete, or type in the number of the cue to be deleted.
- 4> Press [Delete Cue x] to delete the cue.
- 5> Press [Confirm] to confirm the delete.

- Alternatively you can use the Unfold function to delete a cue from a cue list.

## 8.6 Timing

### 8.6.1 Time and fade options for Cue Lists

Time settings are independent for each cue in the cue list. The display shows which cue you are working with. You can select which cue is active using Wheel A or softkey A of the Edit Cue List Cue Times menu.

See the diagrams in section 6.6.1 on page 70 and section 7.6.2 on page 82 for more information about overlaps and fade times.


- 
- 1> *Press A [Edit Times] at the main Program menu then the Swop button of the Cue List.*
  - 2> *To change which cue you are editing, scroll through the list using Wheel A or press A [Cue Number] then type the cue number you want to edit and press Enter. The Chase arrow buttons to the right of the Connect button also step through the cues.*
- 

- You can select a range of cues, enabling you to alter the timings of multiple cues all in one go, by using Wheel B, or in the Playback View window, dragging across the cues you want to select in the grid.
- To set the delay time before the cue starts once the Go button has been pressed, press B [Delay In] then type a time in seconds and press Enter.
- To set the fade-in time of the cue, press C [Fade In] then type a time in seconds and press Enter. Both HTP and LTP channels are affected by the fade.
- The fade-out time of the cue is set by default to be the same as the fade in time. You can change the Fade-Out time by pressing E [Fade Out], then type the time in seconds and press Enter. To set equal to Fade In time, delete the time and leave the box blank.
- The Delay Out time of the cue would normally be used if the console links automatically to the next cue, and sets the wait time before the next cue starts.

### 8.6.2 Cue linking & Link Offset

Cues in cue lists may be linked together, allowing you to build up complex self-timed sequences. The link options are set using the softkeys and are:

- [Link Wait For Go]: the cue waits for the Go button to be pressed then fires immediately. Link Offset is disabled.
- [Link After Previous Cue]: The cue fires when the previous cue has finished its delay in and fade in times. A Link Offset can be set to add a delay between the previous cue finishing and this cue firing. The offset can be given as a time in seconds, or as a percentage of the fade time of the previous cue.
- [Link With Previous Cue]: The cue fires at the same time as the previous cue fires. A Link Offset can be set to add a delay between the previous cue firing and this cue firing, set either in seconds or as a percentage of the fade time of the previous cue.

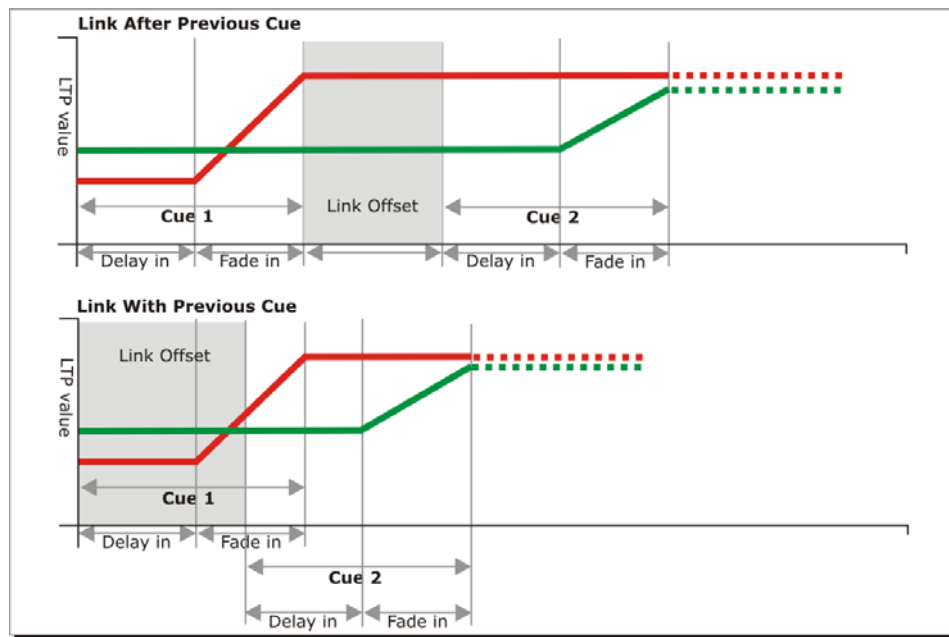

These options allow you to create complex self timed sequences by building up simple steps. For example if you wanted the following effect:

- Go is pressed, Fixture one starts fading up over 20s
- After 10s Fixture two fades up over 15s
- Both lights stay on for 5s
- Both lights go off in 3s

You could program

- Cue 1 - Fixture 1 @ 100%, Fade In 20s, Link Wait For Go
- Cue 2 - Fixture 2 @ 100%, Fade In 15s, Link With Previous, Link Offset 10s
- Cue 3 - Fixture 1 AND 2 @ 0%, Fade Out 3s, Link After Previous, Link Offset 5s

Note: To obtain the effect which was called "cue overlap" in previous versions of software, use [Link With Previous Cue] and set a percentage Link Offset time. Link Offset of 100% is equivalent to Cue Overlap of 0% and vice versa.

### 8.6.3 Individual attribute fade times

You can set individual fade times for each IPCGBES attribute group. You can also select which fixtures this is applied to. For example you can make the position change take 2 seconds, but the colour change take 10 seconds.

Additionally you can set individual times for each attribute so you could make the pan fade over a different time to the tilt.

To set times for an attribute group, first select the Set Times menu and go to the cue you want to set as described above, then press G [Next] to go to the second page of options.

1> Press C [Attribute times].

- 2> *All fixtures in the cue will be selected. If you don't want to change the times for any fixtures, deselect them now. You can press the ALL button (below Next Time) to select all fixtures in the cue or Shift+ALL to deselect all fixtures.*
- 3> *Press the softkey for the attribute group you want to change.*
- 4> *Press A [Delay] to set the delay time, or press B [Fade] to set the fade time. Press G [Use global] to remove the attribute group timing and go back to the normal delay/fade times for the cue.*

- You can use [Individual Attributes] to set times for one attribute within the group, for example just Pan from within the Position group. You can also use the Cue View window to set times for individual attributes.

### 8.6.4 Fixture overlap

For each cue you can set a (linked together) fixture overlap, which causes the Tiger Touch to apply the settings in the cue to each fixture sequentially giving a “rolling” change across the fixtures in the cue. This can create some great effects without much programming on your part.

- Press A [Fixture Overlap] (on the second page of the Cue Times menu) then enter 0-100 on the keypad to change how fixtures overlap in the cue. 100% means all fixtures fade together (the normal setting). 0% means that the first fixture will finish its fade before the next one starts. 50% means that the 2<sup>nd</sup> fixture will start fading when the first one is half way through its fade.
- To change the fixture order when using overlap, press D [Set Fixture Order].

Normally this is the order in which you selected the fixtures when you programmed the cue. The Fixture window shows the fixture order in large green



numbers. Reorder the fixtures by pressing A [Step Number] then type the start number on the numeric keys, then press the fixture Select buttons in the order you want them. For example, to set the order of 8 fixtures, press 1 on the keypad, then press the Select button of the fixture to be first, then the Select button for the second, and so on. You can set several fixtures to the same number if you want them to change simultaneously. If you press a fixture button twice, it will show X and be excluded from the sequence. Press Exit to finish setting the fixture order.

### 8.6.5 Running a cue list to timecode

The Tiger Touch can run a cue list automatically to a timecode. This is very useful for complex performances which must be exactly the same time after time, or for unattended operation. Each step in the cue list is assigned a time at which it will run.

The timecode can be read from the system clock, from an internal timecode source, from MIDI or from Winamp. Internal timecode is useful for programming a sequence which will later be triggered by an external timecode source.


- 1> Connect the cue list for which you want to set timecode.
- 2> Press [Timecode] on the top-level menu.
- 3> Press Softkey A to select the desired timecode source.
- 4> Press [Record].
- 5> Start the timecode source. If using internal timecode, press [Play] to start it.
- 5> Press the red Go button to step each cue at the time you wish the cue to start.
- 6> Press [Record] when you have finished.

To play back a timecoded cue list, press [Connected Cue Lists] and select the cue list which is to be played. Then press [Timer ...] to enable the timecode input.

When you start the timecode source (or press [Play] if using internal timecode), each cue will fire as the timecode matches its programmed time.

You can edit the timecode for each cue by using Wheel A to select the cue, then press Enter and type the new timecode for the cue.

While editing a time you can also use Wheel B to select multiple cues, and use the softkey options to enter a value to change the time of all the cues (offset, add a fixed time or subtract a fixed time).

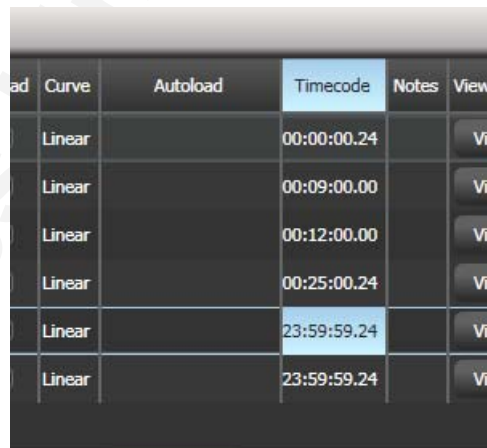

Curve	Autoload	Timecode	Notes	View
Linear		00:00:00.24		View
Linear		00:09:00.00		View
Linear		00:12:00.00		View
Linear		00:25:00.24		View
Linear		23:59:59.24		View
Linear		23:59:59.24		View

## 8.7 Advanced options

Advanced cue list options are set from the Playback Options menu. You can enter the playback options menu by doing the following

- 1> At the top level Program Menu press B [Playback Options].
- 2> Press the blue Swap key for the cue list you wish to edit.

### 8.7.1 Release mask

[Release Mask] lets you specify using the softkeys which attributes will be released back to their state in other live playbacks when the playback is killed. You can also use the Attribute Bank buttons on the

right side of the console to set the mask. The default setting is to not release any attributes.

### **8.7.2 Fader mode**

This option sets how the cue list fader behaves. If set to [Fader Mode Intensity Kill With Off], the fader masters the overall HTP level and the cue list remains active (connected) even when the fader is lowered to zero. If set to [Fader Mode Intensity Kill At 0], the fader masters the overall HTP level and the cue list is killed when the fader is lowered to zero. If set to [Manual Crossfader] the fader behaves as a manual crossfade control, and the cue list will automatically step on to the next cue when the fader reaches the top or bottom of travel.

### **8.7.3 Handle Paging**

This option allows you to lock the playback on a handle so that it always appears on that handle no matter what page is selected.

If you select "Transparent Lock" then the playback will appear on the current page if no other playback is programmed in that position.

### **8.7.4 Cue Options**

This option allows you to change settings for each cue in the cue list. To select the cue number to edit, use the left hand wheel or press softkey A then enter the cue number on the numeric keypad.

- [Curve] allows you to set a different fade curve for the cue; this affects how the fade progresses from one cue to the other (for example you can select a fade which starts off slow, speeds up in the middle and then slows down at the end). Press [Curve] then select a new curve from the softkeys. The effect of the various curves is described in section 11.5 on page 117.
- [Link] can be set to Press Go, With Previous Cue or After Previous Cue. See section 8.6.2 on page 92.
- [Preload] allows you to make this cue load the LTP values from the next cue within the cue list (for example to pre-position some fixtures for an effect).
- [Legend] allows you to set a legend for the cue which is displayed on the cue list display.
- [Notes=] lets you enter a note for the cue ("Leaves stage pursued by bear" or "wake up spot operator").

### **8.7.5 Autoload**

This option allows you to automatically load a playback with a cue and is described in section 8.1.3 on page 87.

### **8.7.6 Key Profile**

Each playback can have an individual Key Profile allocated to it. This allows you to customise the panel button functions differently for each playback. A list of available Key Profiles is shown, or you can add a new one. The softkeys show the function allocated to the blue and grey buttons for each of the available Key Profiles.

If the playback Key Profile is set to "None", the default global profile is used.



## 9. Running the show

*This chapter contains: Operating modes, master faders, manual control during a show, setting up workspaces*

### 9.1 Playback

#### 9.1.1 Back up the show

At regular intervals while you are programming, and when you have finished programming (or you've run out of time) and it's showtime, the most important thing is to back up the show to USB pen drive or the internal disk (see section 1.3.6 on page 24 for instructions).

#### 9.1.2 Operating modes

If you wish to protect your show from accidental modifications, switch the mode switch to Run. This prevents anyone from altering the programming of the console. However the operator can still select fixtures and adjust attributes live.

Expert users can run the console in "Program" mode to allow more flexibility in running the show and live updating of the programming.

#### 9.1.3 Master faders

In the bottom left hand corner of the console is the Master Fader. This allows overall intensity control of the whole console. The Tiger Touch has only a Grand Master fader which controls the intensity of all output from the console. Normally you would set this at full, and use it if you need to quickly fade out all the lights.

The Grand Master slider is disabled by default. It can be enabled in the user settings if required.

The DBO button blacks out the console output while the button is held down.

#### 9.1.4 Flash and swop buttons

The Flash and Swop buttons on the playback faders may be used at any time to flash and solo cues and chases. The Flash button adds the playback into the current output, the Swop button turns off all other output. You must have the mode switch set to Run mode to use Flash and Swop.

You can reallocate the functions of the Flash and Swop/Select buttons on the console using Key Profiles – see section 11.3.4 on page 113. A useful alternative function is Preload which allows you to preset the attributes of the fixtures before you raise the playback fader, which is handy for avoiding visible changes (any fixtures which are already active in another playback will not change when you use Preload). You can also allocate Go and Stop buttons for cue lists and chases. To quickly change the key profile, hold Avo Shift and press [Edit Key Profile].

The touch screen just above the playback faders shows the allocated function of the blue and grey buttons.



### 9.1.5 Playback priority

You can set playbacks to high priority if you do not want them to be overridden by other playbacks using the same fixtures. For example, if you have a couple of fixtures acting as a spotlight, but they are also programmed into some colour washes, you probably want the spotlight cue to take priority over the colour washes. See section 6.7.5 on page 74.

### 9.1.6 Preset playbacks

As well as the 10 playback faders across the bottom of the console, there are 10 further playbacks on the top right of the console. These always stay the same (they aren't affected by the page buttons) and so are useful for memories you use a lot, such as par can washes, basic stage illumination or smoke machines.

### 9.1.7 Manual control during a show (“busking”)

If you have not had as much programming time as you would have liked, you might need to make up some additional effects during the show. This is sometimes called “busking”, and is where the fun starts!

You can create instant variations by recalling palette values to modify your existing cues. The Tiger Touch can fade to the palette values for added effect.

- 
- 1> *Select some fixtures which are already in use on stage..*
  - 2> *Type “2” (or any time, in seconds) on the numeric keypad.*
  - 3> *Touch a Palette button to recall a palette.*
  - 4> *The selected fixtures will change to the new palette over a time of 2 seconds.*
- 

When a fade is entered, you can also change the “Fixture Overlap” using softkey A. This allows you to create “roll” or “peel” effects when using a series of fixtures. With overlap=100%, all fixtures change at the same time. If overlap=50%, the second fixture will not start its fade until the first fixture is half way (50%) through fading. The order of the fixtures is set by the order in which you selected them.

The palette fade time remains active while the Palette Fade menu is open. Press Exit to leave the menu and return to instant palette recall.

If you apply a palette with a fade time, then it will be overridden by the next cue (so if you fade to green using a palette, then fire a cue which sets those fixtures blue, they will go blue). If you apply a palette without a fade time, it will go into the programmer and override any subsequent cues (so if you use a green palette with no fade, the fixtures will be locked in green until you press Clear).

Having the palette overridden by the next cue is quite useful when “busking”. If you need to “snap” a palette but still have it overridden by the next cue, set a fade time of 0 (leaving the Palette fade menu open).

When programming your palettes, group all the colour palettes in one area of the console, position palettes in another area, and so on. This helps you to find them when the show is running and the pressure is on.

If you are lighting a band, make position palettes for every person on stage so you can spotlight them for those unplanned solos.

You can use the Off function (see section 6.3.4 on page 69) when programming to set some cues to only affect position, and other cues to set colours, gobos, add shapes, and so on. By combining two or more cues you can produce a much wider range of effects than if all your cues set all the attributes. However, for this to work well you need to make sure you know what attribute is going to be affected by each cue; as if you fire two "colour only" cues then nothing is going to light up.

## 9.2 Workspaces on touch screen and VDU

The Tiger Touch allows you to configure "workspaces" which store how the various windows are displayed on the touch screen and on an external VDU. Workspaces are stored and recalled from the touch buttons to the left of the menu buttons.

While it can be useful to have an external VDU screen attached to the console, you can operate the Tiger Touch very successfully without one. It does enable you to see a lot more of what the console is doing and if you are using Visualiser, it's very handy to run that on an external VDU.

**Note:** To enable and disable the VDU, turn the key to System and select [Display Options].

### 9.2.1 View menu

Pressing View (right of numeric keys) takes you into the View menu. From here you can set up what is shown on the touch screen and the external monitor.

- [Window Options] allows you to reposition and resize windows, and to move them between the touch screen and the external monitor.
- [Open Workspace Window] allows you to open and close all the possible windows.

### 9.2.2 Tiger Touch Titan application window

The View menu on the Tiger Touch Titan application window lets you show various useful displays. Some of the options do nothing in this version of the software.

## 9.3 Organising the console

If the layout of the fixture buttons, palettes or playbacks has become a bit mixed up during programming, you can use the Move function to move recorded items around and produce a better layout. When an item is moved, all links to other recorded items are retained.

### 9.3.1 Using the Move function

To move fixtures, palettes, groups and playbacks is very simple.

- 1> Press Avo+ the blue Copy/Move/Link button to select Move mode.
- 2> Press or touch the select key(s) of the item(s) to move.

*3> Press or touch the select key of the destination.*

---

When moving a range, it is possible to select a range containing different types of items, and there can be gaps between them. In this case, you can set option B to [Bunch Up] to have all of the gaps in the range removed.

[Swap Items if Required] will attempt to reposition any existing handles which are in the way of the move. This is useful when rearranging handles on a page which is nearly full.

- If there is not enough space, (there is an item in the way or there is not enough space before the end of the page) then the action will not be completed.

## 10. Remote control

*This chapter contains: Setting up the remote control; using the remote control.*

With the addition of an external Wireless Access Point, the Tiger Touch can be remote controlled using Wi-Fi from an iPod Touch or an iPhone. This can be invaluable when rigging, testing and focusing. You can also run playbacks and reset fixtures from the remote.

The remote function operates from a web page on the console which is accessed using the web browser in the iPod/iPhone.



### 10.1 Setting up the remote

This is a basic setup assuming that the console is connected directly to an access point. For more complicated networks, please consult your network administrator. For information on setting up your Wireless Access Point please refer to the documentation provided with it.

#### 10.1.1 Network setup

You need to set up the network settings on the Wireless Access Point, the iPod and the console so that they can communicate with each other.

- 1> Give the access point an IP address such as 192.168.0.1.
- 2> Make sure wireless is switched on.
- 3> Take note of the name of the wireless network (SSID).
- 4> Connect an Ethernet cable from the back of the Expert to the access point.
- 5> Set the IP address of the Tiger Touch: Switch to System, select [Network Settings], press [Local Area Connection], then press [IP Address] and change the IP address to 192.168.0.2. press [Save Settings] to store it.
- 6> On the iPod Touch or iPhone go to Settings > Wi-Fi.
- 7> Ensure Wi-Fi is set to on.
- 8> Select the wireless network from the list, the name you took note of earlier.
- 9> Select the blue arrow next to the network name to change settings for that network:



Select *Static*, type in an IP address such as 192.168.0.3 and type in a subnet mask 255.255.255.0. Finally exit iPod settings.

- 10> Test that the iPod is connected to the Tiger Touch: From the Avolites toolbar on the console VDU, open Command Prompt. Type in "ping 192.168.0.3" and then press return. If it displays "Reply from 192.168.0.3" then the test was successful.



### 10.1.2 Console setup

You need to set the console to allow connections from the remote device.

1. On the Tiger Touch, switch to System and press [AvoTalk Security] then [Remotes]. Press the softkey A toggle until it reads "Allow All Remotes".
2. Connect to the console from the iPod by opening Safari and typing in the address: `http://192.168.0.2/Remote/` (where "192.168.0.2" is the IP address of the Tiger Touch which you set earlier).
3. Choose a user name and type that into the box on the iPod and press Create.
4. The console will notify the operator of the remote request showing the user name you provided. The operator then chooses whether to allow or deny the remote.
5. The console provides a 5 digit key which needs to be typed into the iPod to pair the remote. Steps 3, 4 and 5 only need to be done the first time an iPod is connected; the remote will connect automatically from then onwards.
6. The remote is now ready to control the lights patched on the console.

The options on the Remote menu Softkey A are:

- Remotes Disabled - No commands will be accepted from paired remotes, new pair requests will be ignored.
- Allow Paired Remotes - Only allow commands from previously paired remotes, new pair requests will be ignored.
- Allow New Remotes - Allow previously paired remotes and display pair requests to the user for confirmation.
- Allow All Remotes - For the current version of the remote this is roughly equivalent to the previous option.

Pair requests will only be displayed when in System and Program modes and when one of the last 2 options is selected.

 
At showtime, you should select one of the first 2 options to ensure you don't get any interruptions.

The Remote menu shows a list of paired remotes on the softkeys. Selecting a remote gives you the option to temporarily disable that remote or to delete it from the system.

## 10.2 Operating the remote

To connect to the console, open the Safari browser and type in the address of the console; if set up as described above this will be: <http://192.168.0.2/Remote/>

The remote screen always shows a header with a view selector, to choose which options to view, and a clear button.



### 10.2.1 Keypad

The keypad screen lets you do most common tasks. You can turn on/Locate fixtures and dimmers either singly or together, and a further screen allows macros.

The User Number of the fixture or dimmer is used for control. For example to turn on dimmer 3 at 50% you would press:

*3@5*

To turn on dimmers 1-10 at 80% you would press:

*1 Thru 10 @ 8*

For 100% you just press @ twice, for example

*1 Thru 10 @ @*

To locate one or more fixtures, press Locate instead of the @ button. You can select multiple ranges of dimmers or fixtures using the And button, for example *1 Thru 10 And 20 Thru 30 @ 6*.

The More button allows further commands on the selected dimmers of fixtures. For example to turn On the dimmers at the level set in the User Preferences you would press


*1 Thru 10 More On*

There is also a Locate No Pan and Tilt option on the More screen which turns on a fixture but does not change its position.

The Macro button allows you to operate setup features of fixtures such as Reset, Lamp On, Lamp Off.

To operate macro functions, select the required fixtures, then press More, then Macro, then press the macro function you want.

For example to reset fixtures 1 to 10 you

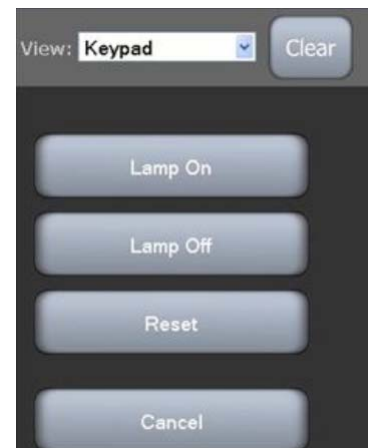

would press

*1 Thru 10 More Macro Reset*

### 10.2.2 Fixture List

The fixture list view shows you all the fixtures in a familiar spreadsheet style, including the user number, fixture type, DMX address and legend. A drop down "Action" list sets an action which will be activated when you select a fixture.

For example if the action is set to Locate, pressing a fixture once will locate it, and pressing the same fixture again will switch it off again (dimmer at 0%).

The All button selects all fixtures, or click on a fixture in the list to select it. When using "all fixtures" you need to click OK to carry out an action.

You can alter the sort order of the list by clicking a column header. An arrow indicates which is the current sort column (the leftmost column, User Number, in the picture). To reverse the sort order, click the column header again.


Fixtures in the Programmer are highlighted in Blue. Fixtures in the Editor are highlighted in Cyan.

You can filter fixtures using the Legend text by typing text into the Filter box. For example typing "drum" into the filter box would show only fixtures 14 and 13.

The dropdown box above the fixture type allows you to filter the list to only that type of fixture as shown in the picture.

### 10.2.3 Playback List

The playback list view shows you all the playbacks including the playback type and legend. A drop down list allows you to carry out actions on the playbacks including "on @ level" (for example Full, or 50%), and "Off". Once the action is selected, pressing a playback in the list will immediately perform the action.



#	Fixture Type	DMX	Legend
14	Mac 250 Wash	A88	Drums R
13	Mac 250 Wash	A69	Drums L
12	MAC 500	A53	USC
11	MAC 500	A37	Centrspec
10	MAC 600	A23	DSR
9	MAC 600	A9	DSL
8	Dimmer	A8	Dim



#	Fixture Type	DMX	Legend
11	MAC 500	A37	Centrspec
12	MAC 500	A53	USC



Type	Legend	Back	Go
Cue	Blu Bax		
Chase	Mad Aeros		
CueList	Predict riot	⏪	⏩
Cue	Red Cyc		
Cue	Riot Base		




Again you can sort and filter the playbacks using the Filter box to filter by legend, or the column headers.

The "Back" and "Go" buttons are used for CueLists which will be enabled in a future software release.

#### 10.2.4 Settings screen

The Settings screen allows you to configure the On level and other options for the operation of the remote.

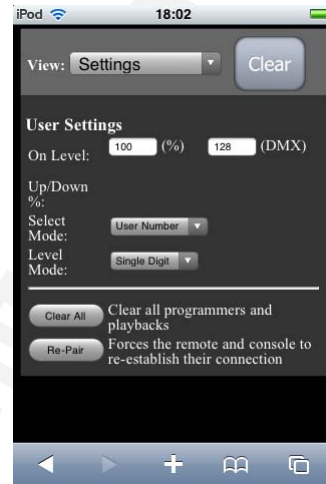

### 10.3 Troubleshooting

If you have problems setting up the remote, try the following steps:

Try connecting locally on the console by typing "http://localhost/remote" into Windows Explorer address bar. This should display the remote screen.

Open Command Prompt on the console and ping the IP address of the iPod as described in step 10 of Network setup.

Clear cookies and cache on the iPod under Settings - Safari.

Delete remotes from the list on the console (System > AvoTalk Security > Remotes)

Choose "Restart Titan Remote" from the additional programs menu on the shell.

Copyright Avolites Limited 2010

## 11. User Settings and other options

*This chapter contains: Configuring the workspace; Key Profiles; Setting the Tiger Touch options using the VDU menu; the Utilities menu; Curves; upgrading the software.*

The Tiger Touch has a large number of options to help you set it up just the way you like it. Commonly used options can be set from the User Settings softkey; you can also set a few options using the onscreen Tools menu (on the VDU menu bar).

In this chapter there is also information on how to upgrade the application software.

### 11.1 Configuring the Workspace

The main area of the touchscreen and the external VDU can each show up to 4 workspace windows. Workspaces can be saved to a touch button and called back immediately.

Some windows have associated touch buttons, when the window is active these are shown in the "context buttons" area just to the left of the menu buttons.

#### 11.1.1 Opening workspace windows

You select which workspace windows you want to see using the [Open Workspace Window] menu command on the root menu or the View menu, or by pressing the appropriate Window Selection button just to the right of the touch screen.

#### 11.1.2 Selecting and positioning workspace windows

To change the position of a workspace window you first make it active by touching its header bar.

You can change the positions and sizes of the active window by using the Window Control buttons above the numeric keypad. The min/max button swaps the active window between full screen and quarter size. The size/position button moves the active window around the possible positions. There are also softkeys on the Window Options menu for the same functions.

Some possible window sizes/positions are shown below.



Quarter size



Double wide



Double height



Maximised

You can move the active window between the external VDU monitor and the touch screen by pressing View then [Window Options] then [Move Screen], or press Avo and the Size & Position button. If you need to activate a touch button on the VDU, you can click it using the mouse trackpad on the keyboard.

You can close the active window using the Close button. You can close all windows by pressing Avo+Close, or use the [Close All] softkey.


### 11.1.3 Saving workspaces

You can save different workspace setups to the Workspaces touch buttons (to the left of the menu) by pressing View then [Record Workspace], then touching one of the Workspaces buttons. This allows you to reconfigure the entire workspace with the touch of one button.

Workspaces are saved with the show.

As an example of setting up a workspace, suppose while programming you wanted to be able to access fixtures, position palettes, fixture attributes and shapes:

- 1> Press Exit to get to the root menu then the [Open Workspace Window] menu softkey.
- 2> Find the [Fixtures] window in the list and press it.
- 3> If the window is not in the top left quarter, press the Size & Position button (above the numeric keys) until the window occupies the top left quarter
- 4> Press [Open Workspace Window] again and select the [Positions] window. Press the Size & Position button to position it in the desired location.
- 5> Repeat to activate the [Attribute Control] and [Shapes] windows.
- 6> Press View (to the right of the numeric keys) then [Record Workspace], or hold Avo and press View. Type in a name for the workspace. Then touch the Workspace button where you want to store this workspace layout. Or, you can use Quick Record – just touch an empty workspace button and it will turn red with a +. Type a name for the workspace and touch again to store it.

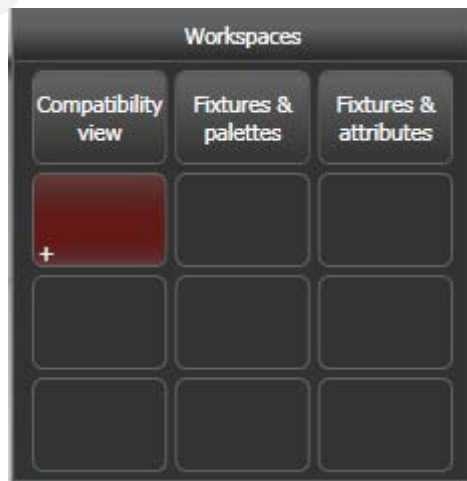

- [Record Visible/All Windows] lets you set whether the workspace will contain only the windows which are currently visible, or will also include any windows which are hidden underneath other windows.
- [Remove/Leave other windows on recall] sets whether all other windows will be closed when this workspace is recalled.

### 11.1.4 Compatibility view

This workspace shows the “blue and grey handle” view which was used in version 2.x of the Tiger Touch software, and which also allows you to access the preset fader handles in shows which have been programmed on the Pearl Expert.

When the compatibility view is opened, there is a softkey option to [Move to workspace]. This will move the handles from the compatibility window to the appropriate workspace window. You need to do this twice, once with the "Fixtures and playbacks" window selected, and once with the "Palettes and groups" window selected.

### 11.1.5 Configuring an external monitor

For extra workspace you can connect an external monitor to the VGA port on the Tiger Touch.

- The external VDU is disabled by default and will show a "disabled" message. To enable it, switch to System mode and select [Display Setup] then press [External Display Disconnected]. The option will change to [External Display Connected] and the display will be enabled.
- If you need to change the VDU resolution or settings, touch "Tools" at the very top of the touch screen and select "Control Panel", then "External Monitor", then select the option to match the resolution of your monitor.
- For best performance of the console, disable monitor outputs you aren't using.



### Troubleshooting

If you cannot see anything on either the touch screen or external monitor, there are some keyboard shortcuts that should in most cases reset all the screens back to their correct settings. You will need to connect an external keyboard (standard PC type) to activate these.

- Ctrl+Shift+Alt+Esc reset to factory default settings (1024x768 for external monitor)
- Ctrl+Shift+Alt+F1 (600x800 for external monitor)
- Ctrl+Shift+Alt+F2 (1024x768 for external monitor)
- Ctrl+Shift+Alt+F3 (1280x1024 for external monitor)
- Ctrl+Shift+Alt+F4 (1600x1200 for external monitor)

All of the above will reset the touch screen to the required resolution. The first shortcut is the preferred choice, however none of these

should be used unless it's necessary (using the menu or Display Setting where possible). Once any of these keyboard shortcuts has been used, power off and restart the console to complete the changes.

If the console software is running, you may have to press Esc to unlock the keyboard before the shortcuts will work.

If none of the above works, the second solution is reinstall the graphics drivers.

1. Press F8 on start up and enable VGA MODE (use an external keyboard, or the Zoom/Focus/Iris attribute button is also mapped to F8 – see section 11.7.4).
2. In Tools, Folder Options, View - enable Show hidden files and folders.
3. In Control panel, System, Hardware, Device Manager , Display Adapters - right click on 945GME and update driver.
4. Select the driver to install as C:\Windows\Inf\iegd.inf.

## 11.2 Key Profiles

The Tiger Touch allows you to reconfigure how the front panel buttons work to suit your method of working. You can save your settings as a Key Profile. Different profiles can be selected for different users or to enhance the operation of the console for a particular use.

The Tiger Touch has standard Key Profiles for Run mode, Takeover Run mode and Program mode. These standard profiles cannot be edited, so you always know how they will behave. You can create your own editable profiles using one of the standard profiles as a starting point.

The current settings of the playback buttons are shown on the touch screen above the playback faders.



### 11.2.1 Creating and editing key profiles

To create or edit a profile, switch the mode switch to System then select [Key Profiles]. You can then use the Manage Profiles menu to View, Edit, Add, Delete or Rename profiles.

When Adding a new profile, you can select an existing profile to copy settings from.

You can also edit Key Profiles from Program mode by holding Avo, then selecting [Edit Current Key Profile]. If the current key profile is one of the non-editable system ones, you are prompted to add a new profile or select an existing editable profile.

The current settings for the [blue], [grey] and (where available), [touch] buttons are shown on the left side of the screen.

The groups of keys you can set are as follows. On the Tiger Touch there are no blue or grey fixture/palette buttons.

**Fixtures:** the blue, grey or touch key can be allocated to Disabled, Select, Flash, Swop,

Latch. The "Latch" function is equivalent to putting the fader to full for that fixture and touching again returns the fader to 0.

**Palettes:** the palette (grey) key can be allocated to Disabled, Select Palette. You can select if the palette function takes precedence over the flash function (if a handle has both palette and flash functions) or vice versa.



**Groups:** the group (grey) key can be allocated to Disabled, Select Group. You can select if the group function takes precedence over the flash function (if a handle has both group and flash functions) or vice versa.

**Cues:** the blue or grey key can be allocated to Disabled, Flash, Swop, Latch, Preload.

**Chases:** the blue or grey key can be allocated to Disabled, Flash, Swop, Latch, Go, Stop, Preload, Connect, Tap Tempo.

**Cue Lists:** the blue or grey key can be allocated to Disabled, Flash, Swop, Go, Go Back, Stop, Preload, Connect, Next Cue +, Next Cue -, Review Live Cue, Cut Next Cue To Live, Snap Back.

**Macros:** can be set to Select or Prefer Macro (the Macro function will take precedence over other functions stored on the button).

**Quick Record:** allows you to disable the quick record function.

### 11.2.2 Selecting a key profile

A Key profile is selected in Run mode by pressing Softkey B and selecting the desired profile from the list. In Program mode, hold the Avo Shift button and press [Select Key Profile].

### 11.2.3 Individual Key profiles for playbacks

Each playback can have an individual Key Profile allocated to it. This allows you to customise the panel button functions differently for each playback. The Key Profile for the playback is selected using the [Key Profile] option on the Playback Options menu (Softkey B on the main program menu). If the playback Key Profile is set to "None", the default global profile is used.

## 11.3 The System menu

The Tiger Touch System menu is accessed by switching the mode switch to System. The options in this menu are separated from the other options on the console because you would normally only change them occasionally, or because they can have serious effects on the way the console works and you wouldn't want to change them accidentally.

**Note:** When the mode switch is set to System, playback control, preset controls and programming buttons are all disabled.

### 11.3.1 Avotalk Security

This option sets how the console communicates with Active Fixtures and with Remotes. See section 13.6 for details of Active Fixtures and 10.1 for information about Remotes.

### 11.3.2 Network Settings

This option sets up networking (Ethernet) parameters for the console. See section 13 for details.

### 11.3.3 User Settings

The User Settings menu may also be accessed from Program mode: hold down the Avo Shift button and press [User Settings].



There are several pages of options and the bottom two softkeys go through the different pages.

- [Grand Master...] sets whether the Grand Master fader is enabled or disabled. This can be handy if it gets broken!
- [Prompt for Merge or Replace...] sets the console action when you try to save to a handle or playback which is already used. The options are [Prompt for Merge or Replace] - the console will always prompt, [Always Merge] - the console will never prompt or [Palettes Always Merge] - the console will prompt unless you are saving a palette.
- [Warn before parking fixtures ...] sets the console action when you patch a fixture which overwrites the DMX channels of another fixture. This causes the overwritten fixture to be "parked" The options are [Always] (console will warn you) and [Never] (console will park the fixture without warning you).
- [Tempo Units...] sets the units for displaying tempo. The options are [Beats per Minute] or [Seconds].
- [Connected View ... Chase Speed] sets the console action when you change the speed of a connected chase. [Connected View Sets Temporary Chase Speed] means that the console will not save the modified speed, and the next time the chase is fired it will go back to its programmed speed. [Connected View Sets Chase Speed] means that the console will modify the saved speed of the chase.
- [Auto Connect...] sets whether Chases and Cue Lists will auto-connect to the wheels when the playback is fired. The options are [Off], [Chases], [Lists] and [Chases and Lists].
- [Channel Levels...] sets how you enter channel levels when using numeric entry of levels. If set to [Channel Levels Set In Tens], you enter one digit for the channel level (e.g. 5 = 50%). If set to [Channel Levels Set in Units] you enter two digits, i.e. 50 = 50%.
- [Preload Time] sets a fade time for the Preload function, normally 2 seconds. This value would normally be set for quiet fixture movement.
- [Key Profiles] accesses the key profiles menu which can also be found on the System menu. The option is also found here so that you can access it using the Avo Shift button. See section 11.2.
- [LED Levels] sets the behaviour of the LEDs in the Select buttons. This option has no effect on the Tiger Touch.
- [Handle Buttons] lets you set the size of the touch buttons to [Small], [Normal], [Large] or [Super Size].

### 11.3.4 Key Profiles

Allows you to modify the functions of some buttons. See section 11.2.

### 11.3.5 Wipe

The Wipe menu erases the current show. This is the same as the [New Show] option on the Disk menu, but is provided here for

experienced Avolites users who are used to it being on the System menu.

#### **11.3.6 Display Setup**

This option gives you a menu for enabling and disabling the external VDU monitor. If you don't have a monitor connected, set this option to "Disabled" to improve the performance of the console.

### **11.4 VDU Tools menu**

Some "system" options on the Tiger Touch can also be set from the Tools menu on the Tiger Touch Titan application. Use the "Switch Task" command on the Tools menu to bring the Titan application to the front.

#### **11.4.1 Virtual Panel**

The virtual panel will be accessed from the Avolites shell toolbar and this option is obsolete.

#### **11.4.2 Visualiser**

This option is obsolete.

#### **11.4.3 VDU User settings**


The user settings menu on the VDU allows you to configure a few options you can't set using the console.

If the console has different users, each user can have their own option settings. You create new users or select from a list of existing users by clicking the user Change button at the top of the screen. You can also use the File → Change User menu command.

To add a new user, click the Add User button in the Change User dialog and type a user name. To select an existing user, click the username in the list then click OK.


The user settings menu has the following tabs:

## General tab

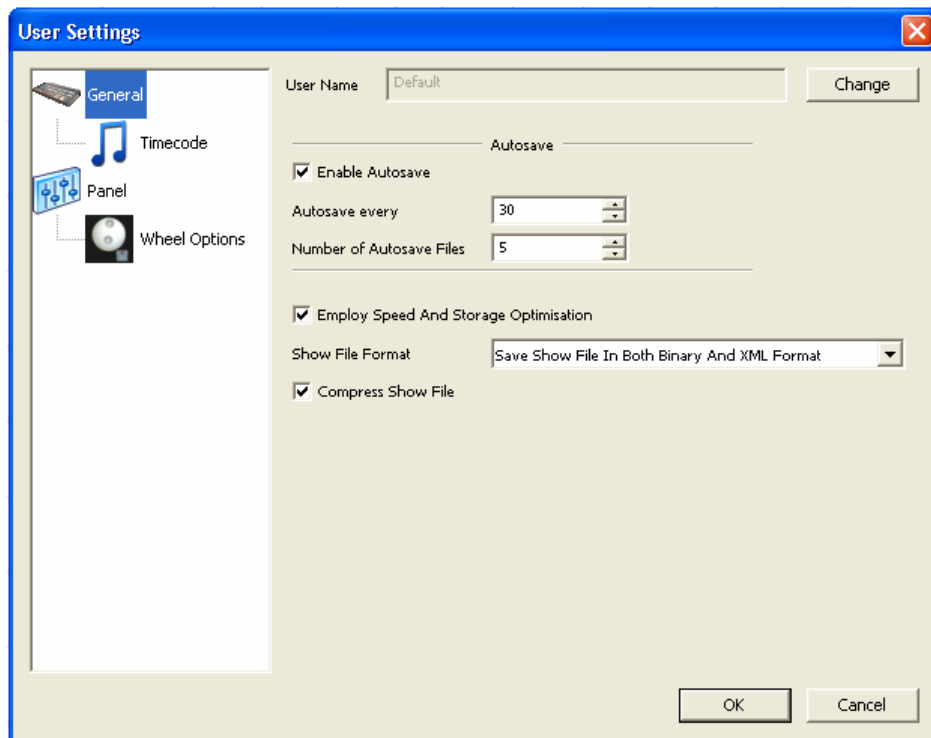

- Autosave enables or disables the autosave option and allows you to set how often the show is saved, and how many previous versions are saved. You can also adjust this from the Disk menu.
- Employ speed and storage optimisation will speed up loading and saving by not saving "off" and "on" mode information.
- Show file format allows you to change the file format to enable compatibility with earlier software versions.
- Compress show file will cause the Tiger Touch to compress the file before saving.

## Wheel options tab

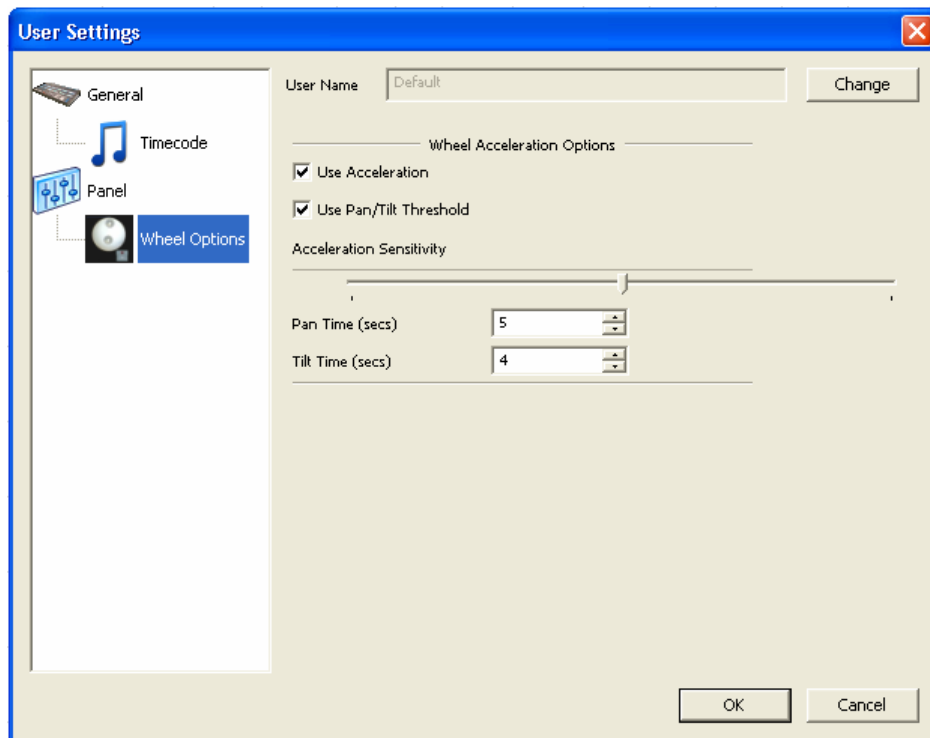


- Wheel acceleration options set how the wheels behave when you spin them.

### 11.4.4 Factory settings

The factory settings menu sets low-level operation of the console. of the console.

- The top drop-down box allows you to set what type of console hardware is fitted. You would only change this selection on the simulator, to simulate the correct type of console.
- The base directory allows you to change where the operating files and show files are stored.
- Show heartbeat on LED: No effect on this console
- Log panel keypresses: All keypresses are logged to a file on the hard disk. This enables Avolites to reconstruct what you've done, should a problem occur.
- DMX Properties...: Allows you to modify the timing of the DMX generated by the console, if you have problematic devices which need specific timings.

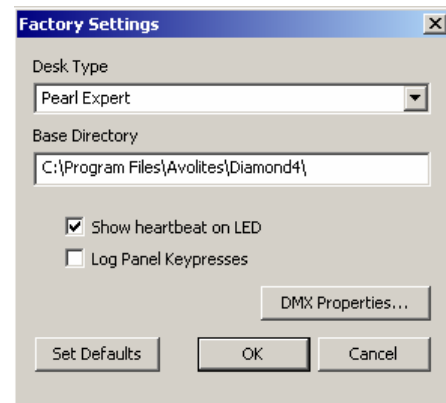

#### **11.4.5 Exchange fixture**

The Tiger Touch allows you to exchange fixtures in your show for entirely different fixtures while retaining the show programming. This feature is described in section 2.2.4 on page 32.

#### **11.4.6 Setup DMX outputs**







This option allows you to setup how the 12 DMX universes produced by the console are output. This is described in detail in section 13 starting on page 129.

#### **11.4.7 Hotkeys**







The Hotkeys function is not available on Tiger Touch.

### **11.5 Curves**


The Tiger Touch provides a variety of curves which set how the console tracks the fade; either the same speed all the way (linear), or starting and ending gently but faster in the middle, and various other options.

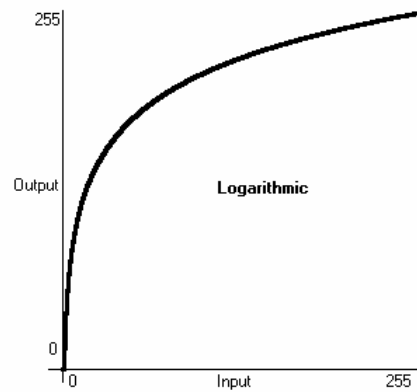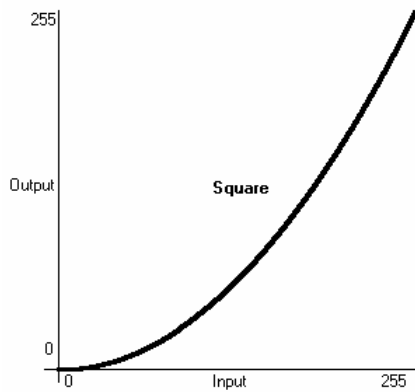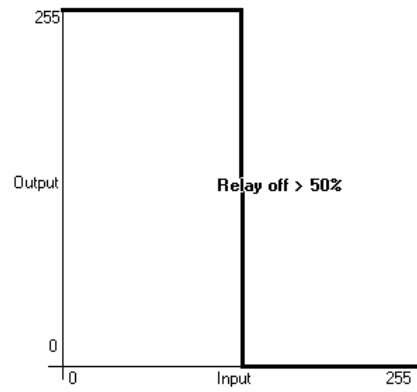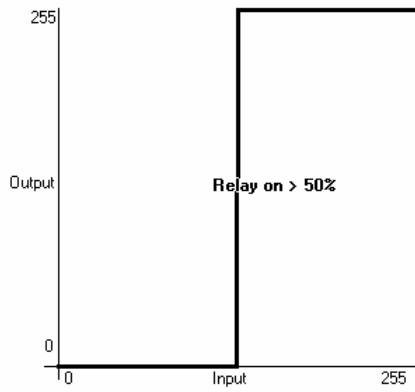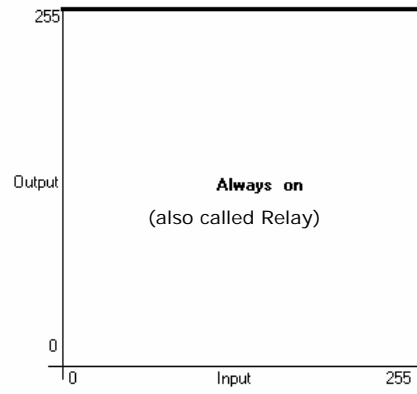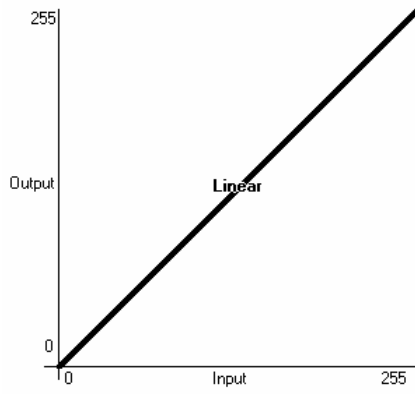

Copyright

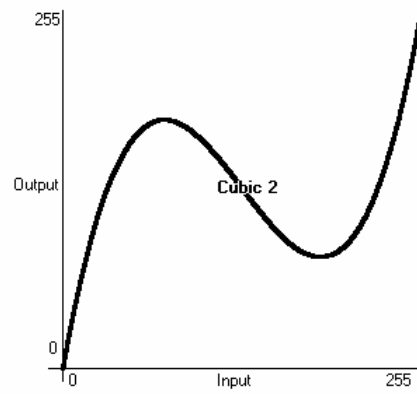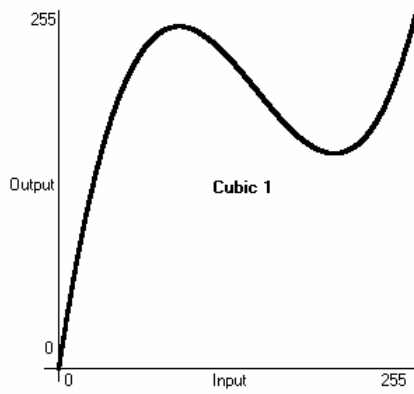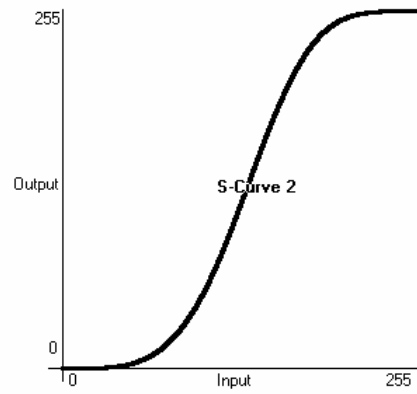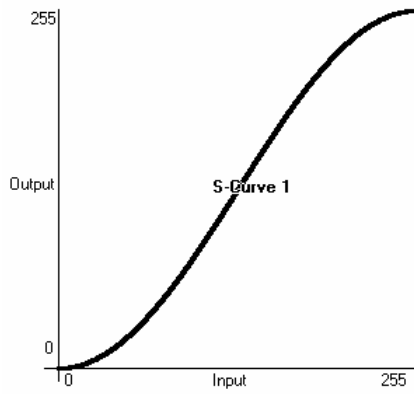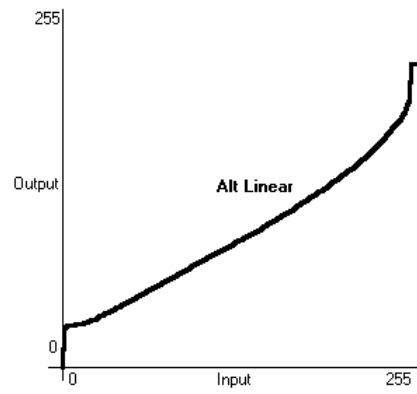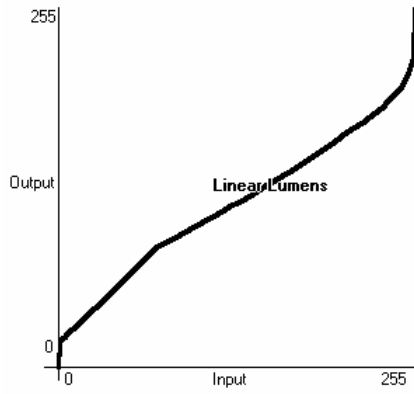

Copyright

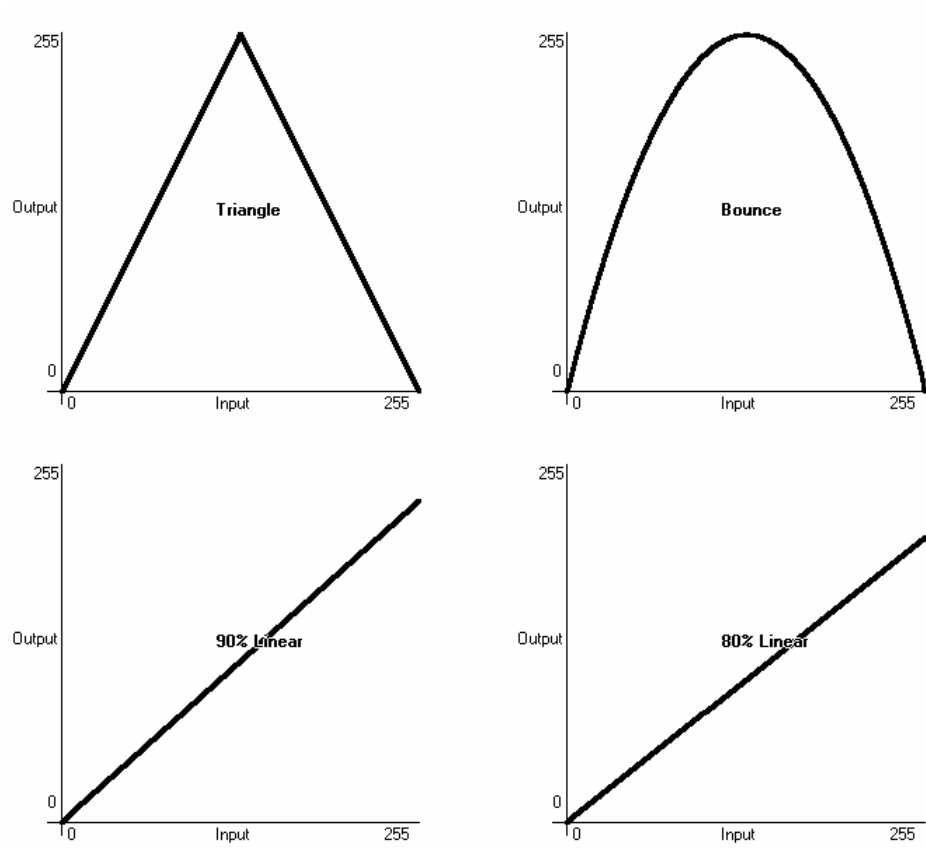

Copyright Avolite



## 11.6 Upgrading the software


The Tiger Touch operating software is under constant revision by the Avolites team. You can always download the latest version of the software from the Avolites website:

<http://www.avolitesdownload.com>

Software upgrades for the Tiger Touch must be installed from a USB pen drive.

Having downloaded a new version of software, copy it to a USB pen drive and install it on the console like this:

- 1> Copy the installer file to a USB pen drive and plug this into the Tiger Touch.
- 2> On the touchscreen tools menu, stop the Tiger Touch software using the Shutdown Software button at the bottom of the list.
- 3> Touch the Folders icon and open the USB drive.
- 4> Run the installer.
- 5> When the installation has completed, use the Restart Software button to start the new version.

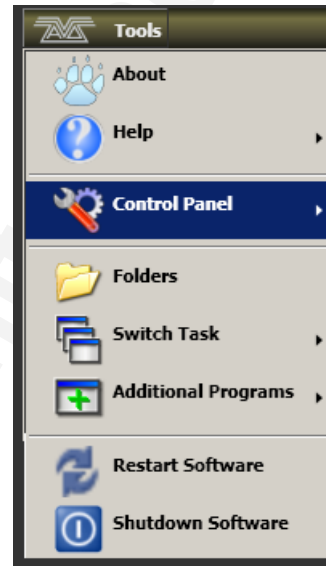

## 11.7 Recovering/reinstalling the system

The Tiger Touch runs on an embedded PC system, and like all computers, there is a possibility of system failure. If it becomes necessary to reinstall the operating system, this is how you do it.

To reinstall the operating system you need a Tiger Touch USB recovery stick, which is provided with the console or obtainable from Avolites.

**Note:** Using the recovery stick will delete all settings and files from the console including show files. Any show files should be saved to a separate memory stick before continuing.

### 11.7.1 Booting from USB recovery stick

- 1> Ensure memory stick is plugged in.
- 2> Start up console pressing Delete button to enter the BIOS.
- 3> When prompted, type in the password "68340", to enter the BIOS.
- 4> Once in the BIOS, press down arrow once then Enter button to open the second menu.
- 5> Then again, press down arrow once then Enter button to open the second menu.
- 6> Press the blue Copy/Move/Link button repeatedly until "USB-HDD0" is in position 1.

- 7> *Press the Speed button (on the Attribute Bank buttons) then Enter, to save changes.*
  - 8> *When the console restarts it will boot automatically into the memory stick.*
- 

### **11.7.2 Installation Instructions**

---

- 1> *Wait while the memory stick boots up, this can take up to 3 minutes.*
  - 2> *Once the memory stick has booted, the touch screen will display "Welcome to Tiger Touch", touch Next to continue.*
  - 3> *Please read to the bottom of the licence agreement then touch Agree to accept.*
  - 4> *On the next screen type in the serial number of the Tiger Touch (using the numeric keypad) - this is the number following the "TT-" written on the back of the console.*
  - 5> *Touching Install will then format the hard drive and copy the setup files to it.*
  - 6> *Once complete unplug the memory stick and touch the Restart button.*
- 

After restarting the console will then install all the software and drivers required to run. This takes approximately 30 minutes to complete during which the console will reboot a number of times. Please do not switch off the console during this process.

### **11.7.3 After Installation**

Once complete the console will boot into the operating system and you will be required to enter the activation code to unlock Titan. A dialog box should be shown on screen asking for the activation code which can be typed in using the on screen keyboard or the numeric keypad. If the dialog box is not visible it may be hidden by another window, in which case use the switch task menu (see section 1.3.3 on page 21) and select "Tiger Touch Titan". The activation code can be found on the front of the console. Once the activation code has been entered successfully, please restart the console.

### **11.7.4 Front panel button mapping for BIOS**

Because you won't normally have a keyboard plugged into the Tiger Touch, some of the front panel buttons have been allocated to keypresses so that you can control the BIOS if necessary.

Attribute Bank buttons 1-12 = F1-12 (e.g. Dimmer is F1, Speed is F10)

Numeric keypad 0-9 as normal

Exit: Esc

Enter: Return

Up, Down, Left, Right arrows: cursor keys as you would expect.

The top 6 blue function buttons are used as follows:

Record Cue:	Y
Record Chase or List:	N
Record Macro:	+
Copy/Move/Link:	-
Record Palette:	BACKSPACE
Delete:	DEL

Copyright Avolites Limited 2010

Copyright Avolites Limited 2010

## 12. Working with Fixture Personalities

For each type of fixture, the Tiger Touch has a “personality” file which tells it how to control the fixture, which channel is the dimmer (HTP) channel, and a large amount of other fixture-specific information. When you patch each fixture, you tell the Tiger Touch which personality to use for it.

The Tiger Touch holds a wide range of fixture personalities internally in the “personality cache”, but you might find a fixture it doesn’t know about. This section explains what you do when this happens.

### 12.1.1 Downloading fixture personalities from Avolites

The Avolites website lists all fixtures for which personalities have been created. You should look here first if the console does not contain a personality for your fixture. The address is

<http://www.avolitesdownload.com/personalitylibrary>

The screenshot shows the Avolites Personality Library website. The page has a dark theme with red accents. At the top, there is a navigation menu with links: HOME, NEW AND UPDATED, REQUEST, BUG REPORTS, ADVANCED SEARCH, DOWNLOAD, and LINKS. Below the menu, there are search filters for Desk (set to Pearl Expert Titan), Manufacturer (set to Martin), and Updated since. A list of fixtures is shown on the left side, including Allen 02, Atomic 3000, Atomic Colors, Color Pro (Martin), CX-10, CX-2, Cyclo 04, Cyclo 3, Ego X4, Exterior 1200 Wash, Exterior 600, Fibre Source CMY 150, Fibre Source QFX 150, Inground 200, Mac 250 Beam, Mac 3, and Mac 2000 Profile. The details for the Mac2000 Profile are shown on the right, including Manufacturer (Martin), Name (Mac2000 Profile), Light Type (Moving Head Spot), and Manufacturers Website (http://www.martin.dk/). Below this, there is a table of Personality Files.

Fixture Name	Desk	File Name	Name On Desk	Last Update	DMX	Disk	Cache	Details	Report Bug
Mac2000 Profile	Pearl Expert Titan	Martin_MAC 2000 Profile.D4	Mac 2000P	25/08/2009					

All available fixture personalities are listed down the left side of the screen. You can use the boxes on the top left to filter the list to show fixtures from specific manufacturers, or fixtures available for a certain console, or to search for a specific fixture name.

**Note:** Ensure you have selected “Tiger Touch (.d4)” in the “Desk” field

Click on the fixture name to open the details in the right hand window. This shows all the personalities available for that fixture type (if you have entered the console type on the top left, only personalities for that console will be displayed).

If there is a personality listed for your fixture on the Tiger Touch, download it by clicking on the Disk icon. This will download a copy of the complete personality cache.

### 12.1.2 Updating the personality cache on the console

Download the current Tiger Touch personality cache by clicking on the disk icon in the Cache column for any fixture. Alternatively you can get this file by clicking on the Download link at the top of the screen, then clicking on Tiger Touch.

Then use the following procedure.

- 
- 1> *Copy the downloaded file TigerTouchFixtureLibrary.exe onto a USB pen drive.*
  - 2> *Touch the "Tools" menu at the top of the touch screen, then touch the folder icon on the menu.*
  - 3> *Locate the TigerTouchFixtureLibrary.exe file on the USB drive and double tap on it to run it. Click "Ok" on the warning box.*
  - 4> *If you had any custom fixture personalities installed, copy them from the C:\Program Files\Avolites\Titan\FixtureLibraryBackup folder into the FixtureLibrary folder.*
  - 5> *Shut down and then restart the console (using the Restart Software button on the touchscreen Tools menu is OK).*
- 

- The Tiger Touch caches the FixtureLibrary folder when the Patch option is used. You therefore need to restart the console to ensure new fixture personalities are loaded (restarting the Tiger Touch application is sufficient).
- Once a fixture is patched, its personality is embedded in the show file. Any changes to the fixture library will not affect fixtures patched in the show.

### 12.1.3 Requesting a new fixture personality

If a personality does not exist for your fixture, Avolites will create one for you. Click on the "Request" link on the above web page to submit your request. A list of current requests is shown.

Your new personality will be incorporated into the cache – to install the new personality, download and install the latest personality cache as described above.

### 12.1.4 Reporting a personality bug to Avolites

If you find a problem with a fixture personality, Avolites would like to know about it so it can be fixed. Search for the personality on the website then click on the "Report Bug" icon on the right of the screen. If you click on the "Bug Reports" tab at the top of the window, a list is shown of currently outstanding problems, so you can check if someone else has already reported the problem.

### 12.1.5 In an emergency

The Tiger Touch contains a selection of "Generic" fixtures which you can use in an emergency if you need to operate a fixture with no personality. When patching, go through the manufacturer list until you find [Generic]. In this section (among other fixtures) are the following:

Multi-DMX: Has up to 10 DMX channels, all channels are LTP. You can select from 1-10 channels on the Mode screen. Press Attribute Bank and use the softkeys to select channels.

Generic RGB: Allows you to control an RGB fixture such as LED colour changers. This offers 5 modes:

1=Dim 2=R 3=G 4=B

VDim 1=R 2=G 3=B

1=R 2=G 3=B 4=Dim

VDim + 4xRGB

4xRGB.

VDim is a virtual overall dimmer channel for fixtures without a DMX dimmer control. When you use the Dimmer attribute the Tiger Touch will adjust the RGB levels accordingly.

Copyright Avolites Limited 2010



## 13. Networking

*This chapter contains; Connecting to a Simulator with ACDI; Connecting to fixtures with ArtNet, eDMX and EzDMX; AvoTalk; explanation of IP addressing.*

There are a number of ways for the Tiger Touch to communicate with lighting fixtures beyond the traditional DMX sockets on the back of the console, which are described in this chapter. The Tiger Touch also supports communicating with a number of different simulators/visualisers over various communication methods.

At the end of the chapter is a section which aims to cover the basics of IP addressing, which is essential for various features on the Tiger Touch such as ArtNet.

**Note:** Lighting networks need to transfer of large amounts of data. For best reliability you should use network wiring which is dedicated to the lighting system and physically isolated from other networks. Connecting to an existing network with other network traffic is possible but can lead to problems both with the lighting equipment and with other IT equipment on the network. If you need to do this please read about the IP addresses you should use, in section 13.7.5.

### 13.1 Setting the Tiger Touch's IP address

Before the Tiger Touch can talk to another device over the network, it has to be given a unique network address. This is called its "IP address".

#### 13.1.1 Setting IP address

We recommend that you use the Tiger Touch's automatic IP setting function. However, if you need to you can also set the IP address using Windows Control Panel as shown on page 137.

- 
- 1> *Switch the mode switch to System and press [Network Settings]*
  - 2> *Press [Local Area Connection].*
  - 3> *Press [Subnet Mask] and set to 255.255.255.0*
  - 4> *Press [Set IP 2. \*. \*. \*]*
  - 5> *Press [Save settings]*
  - 6> *Turn the switch back to Program.*
- 

- Some equipment may operate on IP addresses 10.\*.\*.\* (softkey D) – see later in this chapter for details.
- If you need a non-standard IP address range you can use softkey A.


### 13.2 Setting up DMX outputs

The Tiger Touch has 12 DMX lines which can be routed to the DMX sockets on the rear of the console and can be sent out over the Tiger Touch's Ethernet socket. You need an external VDU connected to access these settings.

The Setup DMX Outputs screen lets you determine where the DMX lines are routed to. Click Tools then Setup DMX Outputs on the Tiger Touch Titan VDU menu to show the screen.

### 13.2.1 Setup DMX outputs screen

On the left hand side of the screen, the 12 DMX lines generated by the Tiger Touch are shown. On the right hand side is a list of nodes where the DMX can be routed to.

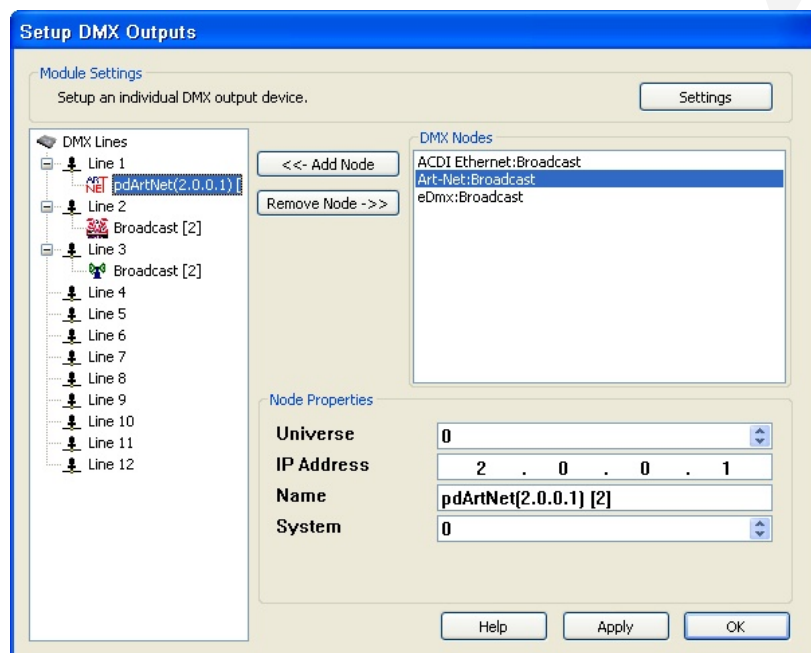

As an example we will add an ACDI node to DMX Line 1.

- 1> On the VDU menu, click on Tools, Setup DMX Outputs.
- 2> Click on Settings
- 3> Select the ACDI module.
- 4> Ensure that the correct Network adapter is set (this may not be the Default Adapter) and the Enable DMX Output box is ticked
- 5> Click OK
- 6> In the left panel, select a DMX line for the simulator
- 7> In the right panel, select the ACDI Ethernet node that you want to connect to
- 8> Click on Add Node. This will add an ACDI node to that DMX output
- 9> On the left hand side, select the node you have added. The node properties will be shown in the panel on the bottom right of the window


- To remove a node from a DMX line, select the node (i.e. Broadcast 2) and click Remove Node.
- Each DMX line can be sent to multiple nodes (this will effectively create a duplicate DMX universe). However you must ensure that you do not send more than one DMX line to a single node, as this can cause problems.

## 13.3 ArtNet

Art Net is an open standard for transmitting Lighting information over Ethernet. It is not specific to one range of products, and is recognised and implemented by a growing number of manufacturers. Many products (such as Dimmers and Moving lights) can accept the Art Net signal directly, so there is no need to convert the signal to DMX. Most people will, however, need to output DMX to their equipment and this can be done using an Art Net to DMX converter.

### 13.3.1 A simple ArtNet system

In the following diagram, an Art Net compliant Console (such as the Tiger Touch) is connected via a network hub to an Art Net compatible dimmer and 2 DMX conversion boxes.

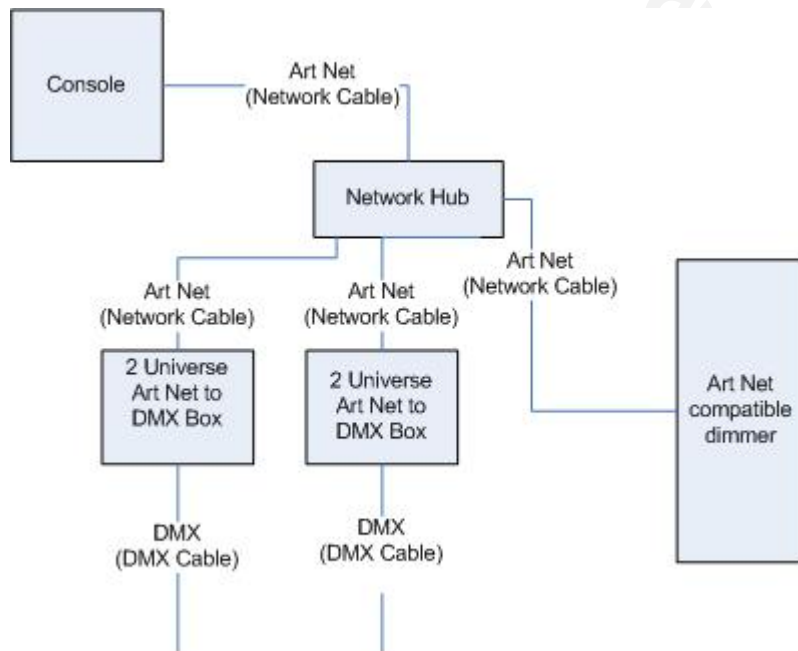

Once the system is connected together, the different outputs (or Nodes) can be configured.

- The dimmer is given the start address of 200
- The 1st DMX box is set to universe 1 and universe 2
- The 2nd DMX box is also set to universe 1 and universe 2

The console is then used to set the DMX lines to the Art Net nodes.


It is important to remember:

- Each Art Net to DMX box (or compatible Dimmer, or compatible moving light) is a device,
- Each device may have one or more nodes (i.e. the Art Net to DMX box has 2 nodes, these are the 2 DMX outputs; the dimmer itself is a node),
- Each node can be set to a Universe (1-256). This universe is equivalent to a 512 channel DMX line

You can then specify which console line is assigned to each node. A console line can be assigned to multiple nodes (this will duplicate the DMX universe), but each node should have only one console line assigned to it.


Here, the console assigns the following:

- Line A to Box 1 universe 1 and box 2 universe 1
- Line B to Box 1 universe 2
- Line C to Box 2 universe 2 and the dimmer rack

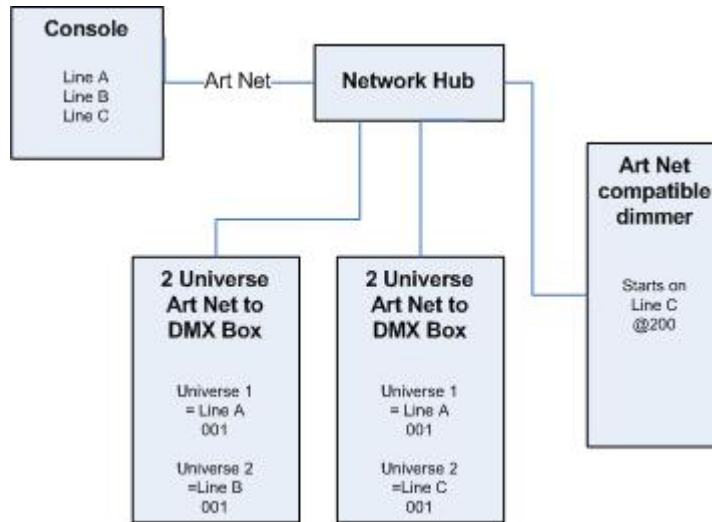

### 13.3.2 Setting up an ArtNet system

For this example, it is assumed that you will connect the Tiger Touch to an Art Net DMX output box (such as an Artistic License Net-Lynx) via a network hub.

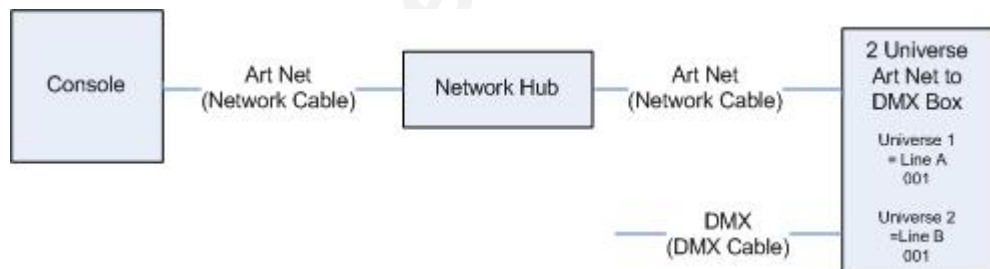

Using standard network cables, attach the devices together.

- If you are using a hub/switch as shown above, use straight-through cables. If you are directly connecting the Tiger Touch to another Ethernet device you need to use crossover cables

Set the Net-Lynx box as follows:

- Subnet Mask = 0
- DMX A Universe = 1
- DMX B Universe = 2

A lot of Art-Net devices, including the Net-Lynx box, are set to IP address 2.x.x.x as default, and can be set to 10.x.x.x using an option jumper, so you should check what the setting of your device is.

If your ArtNet devices need to be set to a non-standard IP address, then in steps 1 and 2 you need to use Windows Control Panel to set the Tiger Touch to that address range instead of 2.x.x.x

With everything connected, start the Tiger Touch.

- 
- 1> *Ensure the Tiger Touch has an IP in the 2.x.x.x range as described at the start of the chapter.*
  - 2> *On the Tiger Touch VDU, click on Tools, Setup DMX outputs.*
  - 3> *Click on settings*
  - 4> *Select the ArtNet module. If the module is not shown in the list, it may not be installed; see section 13.5 on page 135.*
  - 5> *Ensure that the correct Network adapter is set (this may not be the Default Adapter)*
  - 6> *If you wish to turn off the Art Net output, you can un-check the "Enable DMX output" option. This will stop the Console from outputting Art Net on any Lines.*
  - 7> *Art Net normally only sends Data when it is changed, rather than a continuous stream. There are times when it is preferable to send Art Net all the time. to do this, check the "Continuous ArtNet Data Stream" option.*
  - 8> *The "Always broadcast ArtNet" option enables you to send Art Net to the entire network, rather than a specific IP address.*
  - 9> *Click OK*
  - 10> *Select a DMX line for the Tiger Touch*
  - 11> *Select the ArtNet node that you want to connect to*
  - 12> *Click on Add Node. This will add an ArtNet node to that DMX output.*
  - 13> *Select the node you have added to make sure the properties are correct. (Problems can be caused if you attach multiple DMX lines to a single node.)*
  - 14> *Make sure that the Universe is set to 1 for Line 1, and 2 for Line 2.*  
*Art-Net uses a subnet mask with its universe. For Tiger Touch purposes:*  
*Tiger Touch universes 1 - 16 are subnet mask = 0, Art-Net universes = 1 – 16*
  - 15> *Click OK*
- 

The Tiger Touch should now be working correctly.

To remove a node from a DMX line, select the node and select Remove Node.

### 13.3.3 Additional ArtNet Resources


To find out more information about Art Net please refer to the Art Net Standard published by Artistic Licence.

## 13.4 Connecting to a simulator with ACDI

ACDI is Avolites' Application for Interfacing Consoles and Simulators with lighting software such as Visualiser, Capture or Show designer.

### 13.4.1 ACDI

If you are using the Tiger Touch Simulator with the Avolites Visualiser, running on 2 separate computers, you will need a separate Dongle connected to each computer.

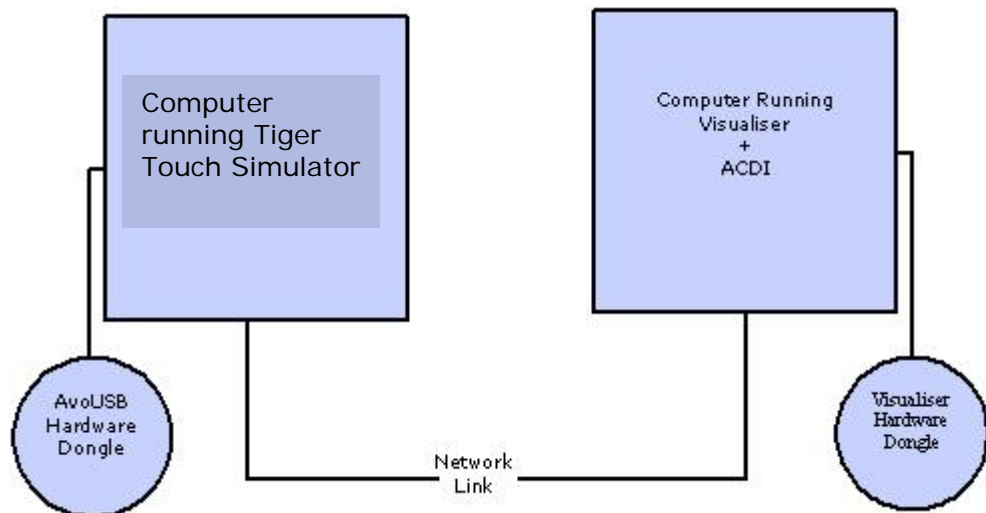

The network link connection can be made through either a crossover cable, or through a network hub.

For this example, both computers are connected together via a crossover cable.

First, we will set up the Network setting for both computers. It is important that both computers use an IP address in the same range (2.0.0.x in this example) and have the same subnet mask, or they won't be able to communicate.

On the Tiger Touch, set the address to 2.x.x.x as described in section 13.1.1 at the start of this chapter. If you need to set a custom address to match the visualiser PC you can use Control Panel to do this.

On the computer running the Visualiser:

- 
- 1> Click Start, Control panel, Network connections.
  - 2> Right click on the connection you wish to use.
  - 3> Click Properties.
  - 4> In the connection properties window select TCP/IP and click Properties
  - 5> Set the PC network adapter to a free address on the network in the range 2.0.0.x.
  - 6> Set the subnet mask to 255.0.0.0.
  - 7> Click OK.
- 

Close any network windows on both machines.

Install and run ACDI on the Visualiser Computer.

In ACDI change "Source" to "Simulator"

Do not close the ACDI window

Refer to the previous section, 13.2.1, to setup a DMX line on the Tiger Touch to be sent to the Visualiser.

Finally, start the Tiger Touch, and open or create the theatre file. (See the Visualiser manual for more information on this)

Once ready to connect to the Tiger Touch, go to run mode in the Visualiser, and select simulator under DMX.

The Tiger Touch should now be working with the Visualiser.

## 13.5 Module Setup

A module is a method of sending DMX and can be thought of as a collection of nodes.

For example, consider using wireless networking technology to transmit DMX to several individual receivers. Each receiver is configured to output a specific universe of DMX. In this case, the wireless system as a whole is the module, and each receiver is a node.

The Module Settings window (top right of the Setup DMX Outputs screen) enables you to set the specific properties of the Modules used with the Tiger Touch. These were selected during the installation process. If you are running the Tiger Touch simulator, some (or all) modules may be missing, depending on what Avolites hardware you have attached.

You can only use different modules (e.g. Art Net) if you have several network adapters, or by re-configuring the IP addresses of the Devices to be compatible.

In the Setup DMX Modules window, click on the Module that you wish to adjust, and its properties will be shown.

This allows you to adjust settings for each module, and to select a network adapter for ACDI and Art-Net. Most people will only have one network adapter, however many laptop users will have their standard network adapter and also a Wi-Fi (wireless) adapter, both of which will be shown.

### 13.5.1 Installing additional Modules

If the DMX Module that you want to use has not been installed, you can add it by running the Tiger Touch installer again and checking the option(s) that you want in the setup window.

## 13.6 AvoTalk

AvoTalk allows devices on a standard network to communicate and share information. In the case of Avolites consoles it allows the console to talk to fixtures and to retrieve and change information such as personalities and Mode information.

For example, when using a media server such as Hippotizer with the Tiger Touch you have the option of patching it as an "active fixture". In order for this to work you must download and install an "Active Fixture Plugin" for the device you want to use and install that plugin on the device (i.e. the Hippotizer). When the plugin is run on the active device, it interrogates the device and generates a personality and other information specific to that device such as media thumbnail clips, and provides this info to the Tiger Touch over the network using the AvoTalk protocol. These thumbnails, for example, can then be used in the wheel view on the Tiger Touch to provide a preview of the media selected on a particular media layer.

Active fixtures can also perform other tasks such as readdressing themselves to a new DMX universe or DMX address etc and all these tasks are performed by sending commands using AvoTalk across the network.

AvoTalk is designed to work alongside other lighting protocols such as eDMX or ArtNet. Once a network connection is established AvoTalk will detect any compatible devices and start talking.

### 13.6.1 Example AvoTalk setup

We will look at setting up a Green Hippo Hippotizer with the Tiger Touch using a combination of AvoTalk and ArtNet.

You will need the following:

- Tiger Touch with Titan Software Version 1.5 (or greater)
- Green Hippo Hippotizer
- AvoTalk Hippo Plugin
- Crossover cable

- 1> *Turn on the Tiger Touch and the Hippotizer. For this example we assume you have performed a wipeall on the Tiger Touch.*
- 2> *Connect the Tiger Touch and the Hippotizer together using the crossover cable. Note that there may be a cable already connected to the network port on the Hippotizer that comes from within the unit. This is connected to the DMX box on the front, and can be disconnected.*
- 3> *Set up the Tiger Touch for ArtNet. For more information on the DMX Modules, see Chapter 3 on DMX outputs.*  
*At the moment you don't need to add any nodes, so click OK to close the Setup DMX Outputs window.*
- 4> *Install the AvoTalk Hippo Plugin on the Hippotizer, but don't run it just yet. The Hippotizer software should not yet be running either.*
- 5> *Using the Stage Settings application, set up the Hippotizer to run in the preferred mode (please refer to the Hippotizer manual for further information).*
- 6> *Run the Hippo Plugin on the Hippotizer. Click on "Set network adapter" and set the adapter, then click on "Detect Hippotizer Layers". The plugin will now look for all of the media files and setup of the Hippotizer. Please note that this may take some time, depending on the number of clips that are available. If you receive the message "No Hippotizer available" ensure that the Hippotizer is enabled.*
- 7> *On the Tiger Touch, go to Patch / Active fixture and select "Hippo (Ser.No.)". In this case the Active Device is called Hippo 15. If there are no active devices found, try exiting the menu and waiting for a few moments before trying again (there can be a short delay while the media clips are examined by the plugin).*
- 8> *On the Tiger Touch, enter a DMX address and press a swop button to patch the Hippotizer. The required number of fixtures will be patched to consecutive handles, and the Hippotizer DMX address will be assigned to the one entered on the Tiger Touch.*
- 9> *Now run the Stage application on the Hippotizer. **DO NOT CLOSE THE PLUGIN.***
- 10> *Finally, on the Tiger Touch, go to Setup DMX Outputs and you will see the Hippotizer appear as a Node. Add this to the*



*required DMX line. Again, there may be a slight delay before the Hippotizer node appears.*

Once the Hippo Plugin is installed, it will automatically start every time the Hippotizer is started. If you change the Hippotizer mode, you will need to go to the Hippo Plugin, re-detect the Hippotizer and re-start the Tiger Touch.

If you disconnect the network cable you will need to go to the Hippo Plugin, re-detect the Hippotizer and re-patch the Tiger Touch.

If you decide to re-patch to a different DMX address you will need to re-start the Hippotizer software. You will also need to reset the ArtNet nodes if you are moving across DMX lines.

## 13.7 All about IP addressing

This section attempts to explain the basics of IP addressing, and what you will need to know when setting up a lighting control network.

IP addresses will normally come in the format "w.x.y.z" where w, x, y and z are numbers between 0 and 255. For example "298.23.46.166". Every object (or node or device) on a network should have a unique IP address. This is the same concept as DMX as each fixture requires a unique DMX address, for IP addresses the same is required.

### 13.7.1 Setting your IP address

The Tiger Touch has a setup function to quickly set its IP address as described on page 129

You can also set your IP address in the same you would on a Windows XP computer. This is done in the following way:

- 1> *Go to the control panel from the Tools menu*
- 2> *Double Click on Network Connections*
- 3> *You will now be confronted with various network adaptors. It is likely that you will only have one or two of importance. The "Local Area Connection" and "Wireless Network Connection". These names may slightly differ but the icons are likely to look like these:*



- 4> *The Local Area Connection (icon on the left) refers to your wired connection and your Wireless Network connection (icon on the right shown disconnected) refers to your wireless connection.*
- 5> *At this point you need to decide which connection you are using and therefore which connection you want to set the IP address for. Select this connection, right click on it and click on Properties.*
- 6> *The Dialogue box you have should have at least three tabs, "General", "Authentication" and "Advanced". It should already be on the General tab which is the only tab where you should need to change settings.*

- 7> *In the middle of the box there is a selection box labelled "This connection uses the following items:" You need to select the item called "Internet Protocol (TCP/IP)" ensure this is ticked and click on "Properties" just below the selection box.*
- 8> *You are now presented with a box which allows you to select whether you want to "Obtain an IP address automatically" or "Use the following IP address". By selecting "Use the following IP address" it is possible to enter in a new IP address and Subnet Mask. The Default gateway, Preferred DNS server and Alternate DNS server and not important in this situation as they are only required if you are connecting to the internet, therefore they can be left blank.*
- 9> *Once you have entered in the new IP address and Subnet mask press Ok on all the dialogue boxes that have been opened. After a few moments your new IP address should be set.*

There is a strong possibility that if you set the IP address on one network device you will have to set it on all of them, therefore if you manually set your IP address on the Tiger Touch you will have to do it on any tracking backup you are using and any ArtNet fixtures. Beware that some ArtNet fixtures have a fixed IP address in the range 2.x.x.x, in which case you have to set the Tiger Touch to that range.

### 13.7.2 Subnet Masks

These are best kept simple. All devices or nodes on a network who wish to communicate with each other must have the same subnet mask. The mask determines which parts of the IP address are unique in that network to each node. If the part of the subnet mask is a 0 then the corresponding digit in an IP address must be unique for each fixture. If the part in a subnet mask is 255 then this part of the IP address needs to be the same for each node.

### 13.7.3 Choosing an IP address and Subnet Mask

This is the hardest part of setting up a network as your IP address totally depends on what you are using on the network and what IP addresses you can and cannot change. Below are a number of different scenarios for standard lighting networks using a Tiger Touch and what IP addresses should be set. These aren't guaranteed to work but try them if the scenario matches your network:

#### **Tiger Touch and ShowSafe, all output is standard DMX.**

	IP Address	Subnet Mask
Tiger Touch	192.168.1.30	255.255.255.0
ShowSafe	192.168.1.31	255.255.255.0

#### **Tiger Touch outputting over ArtNet Fixtures (and DMX).**

	IP Address	Subnet Mask
Tiger Touch	2.100.100.100	255.0.0.0
ArtNet Fixtures	2.x.y.z	255.0.0.0

Or

	IP Address	Subnet Mask
--	------------	-------------

Tiger Touch	10.100.100.100	255.0.0.0
ArtNet Fixtures	10.x.y.z	255.0.0.0

Where a combination of x, y and z are unique for these fixtures.

#### **Tiger Touch and ShowSafe outputting over ArtNet (and DMX).**

	IP Address	Subnet Mask
Tiger Touch	2.100.100.100	255.0.0.0
ShowSafe	2.100.100.101	255.0.0.0
ArtNet Fixtures	2.x.y.z	255.0.0.0

Or

	IP Address	Subnet Mask
Tiger Touch	10.100.100.100	255.0.0.0
ShowSafe	10.100.100.101	255.0.0.0
ArtNet Fixtures	10.x.y.z	255.0.0.0

Where a combination of x, y and z are unique for these fixtures.

**Note:** Never set the last number of an IP address to be 255. This is a special address which will not function correctly.

#### **13.7.4 Automatically assigning IP addresses (DHCP)**

There is another way of assigning IP addresses via an automatic system called DHCP. For this you need one of the devices on the network to be a DHCP server. If you know none of your devices are a DHCP server then this is irrelevant however, if you have a router on the network or some such similar device then it is likely that you have a DHCP server. If you do then in the 8 step instructions in section 13.7.1 on page 137 when you come to step 7 you should ensure that "Obtain an IP address automatically" is selected then press ok. When you are using DHCP all the devices on the network must be capable of obtaining an IP address automatically. If one device cannot (eg some ArtNet devices) then you must manually set all the IP addresses.

#### **13.7.5 Private IP address ranges**

If your network is connected to the internet it is important to use a private IP address range. These are special IP addresses that will not be routed onto the internet. They are:

Start Address	Final Address	Subnet Mask
10.0.0.0	10.255.255.255	255.0.0.0
172.16.0.0	172.31.255.255	255.255.0.0
192.168.0.0	192.168.255.255	255.255.255.0

For Art-Net, the 10.x.x.x range must be used.

## **13.8 Repairing a Network Connection**

If you are sure your network connection settings are correct or had them working but they are no longer working it may be necessary to

repair the network connection. This is a simple windows function that can be accessed by doing the following:

- 
- 1> *Go to the control panel from the Tools menu.*
  - 2> *Double Click on Network Connections*
  - 3> *Double Click on the Network Connection you would like to repair*
  - 4> *Click on the Support tab.*
  - 5> *Click Repair.*
- 

Windows will complete a number of tasks and give you a message informing you it has finished repairing the connection. Click close then ok to all the open windows.

---

---

## 14. Tiger Touch for Avolites users

If you are used to other Avolites consoles, this section will help you to make the move to the touchscreen and Titan operating system used on the Tiger Touch.

**Note:** Tiger Touch shows can be loaded into Pearl Expert consoles running Titan software, but not into the classic Pearl Expert, or a Pearl 2000/2004/2008 console, because the show file has a different format.

### 14.1 The controls and screen

Obviously the main difference is the touch screen, and the lack of preset faders.

#### Touch screen

The touch screen provides a user-configurable “workspace” which can show windows containing buttons for fixtures, palettes, groups, shapes, attribute control and more. You can select which windows are visible, and their size and position, using the Window Control buttons above the numeric keypad, and the window buttons to the right of the touch screen. The View menu also gives you some options. You can store different workspace layouts in the “workspaces” touch keys.

The right hand side of the touch screen is the menu area. This is very similar to the LCD panel on a Pearl Expert. To activate the menu buttons you can either touch the screen or press the button alongside.

You can lock any menu (to keep it active) by pressing the Menu Latch button. The Menu Latch button (ML Menu on other consoles) only shows its menu at the top level screen.

The bottom of the touch screen gives information about the playback faders below.

When a text input is required, a touch keyboard pops up for you to enter text.

When selecting a range of fixtures, you have to use the touch screen slightly differently to how you'd use buttons; touch and hold the first in the range, then touch and hold the last, then release the first; or you can drag your finger along the buttons.

#### Preset playbacks

As well as the 10 playback faders across the bottom of the console, there are 10 further playbacks on the top right of the console. These always stay the same (they aren't affected by the page buttons) and so are useful for memories you use a lot, such as par can washes, basic stage illumination or smoke machines.

#### Cues and Chases on the touch screen

In addition to the playback faders, you can store cues (memories) and chases on the touch screen using the Playbacks window. For playbacks which don't need a fader, this gives you instant fingertip access to an enormous number of effects.

### **Macro buttons**

10 buttons are provided in which you can store frequently used button sequences. Any sequence of button presses can be stored in each of these buttons making those repetitive programming tasks a thing of the past. If you need more than 10, you can show a Macro window on the touch screen.

### **Change button functions**

You can change the functions of the blue and grey buttons on the console to give you quick access to the functions you want, such as Preload, Stop and Go for chases, Tap Tempo and so on. This feature is called Key Profiles (see page 113).

### **Titan Remote**

Titan remote runs on an iPhone or iPod Touch and can control the console using Wi-Fi. This is invaluable for focusing, and you can also activate playbacks.

## **14.2 New programming features**

There are some great new programming features which previously were only found on the Diamond 4.

### **Fixture overlap, Attribute overlap**

The overlap functions allow you to sequence the way a cue plays back. Normally when you fire a cue, everything would move to its programmed setting all together. The fixture overlap feature causes each fixture to move to the new setting in sequence, giving some amazing roll or peel effects without any programming. Attribute overlap is a similar effect with different attributes. When "busking", palettes can also be applied with overlap.

### **Fixture exchange and Copy Fixture**

The Fixture exchange function enables you to replace fixtures which are used in your show with alternative fixtures, retaining important elements such as cue times, shapes and legends. It is very useful for touring shows and venues with a high turnover of events, allowing you to cope with different house rigs or equipment availability.

You can copy fixtures you already have in your show. The new copy will come complete with all the cues and palettes of the original fixture you've copied.

### **Multiple times**

The Titan software allows multiple timers for cues. This means in a complicated show you can have lots of fades going on from different cues each under the control of a different timer.

### **Playback priorities**

You can configure how playbacks will behave if you turn on two playbacks controlling the same fixture. For each playback, priority can be set to Low, Normal, High or Very High. If a fixture is being controlled by a playback and you turn on a playback of the same or higher priority, then the new playback will take over. However, if the new playback is set to lower priority than the first playback, the fixture will not change.

This is useful if, for example, you've programmed looks using all your fixtures, then you decide you want a couple of them to spotlight a singer. If you set the Spotlight playback to be high priority, then while it is active no other playback will affect the spotlight fixtures.

### **Release**

When a playback is killed, you can set how the LTP channels release. The default setting is to not release any attributes (i.e. LTP channels will not change when the playback is killed), but you can set attributes to revert to their state in the most recently active playback.

Copyright Avolites Limited

Copyright Avolites Limited 2010



---

---

## 15. Release notes

This section describes changes in the most recent version of software. Please ensure you save and backup your shows before attempting to upgrade any software.

Note: This section only lists the changes in the most recent update; for changes in earlier versions, please check the release notes provided on the console using the VDU menu option Help → Release Notes.

### 15.1 Version 3.0

#### 15.1.1 Upgrading from: 2.0:

There is no upgrade path from previous version and so the software must be installed by running a recovery disk. You can download a recovery disk containing this software from Avolites download. Please follow the instructions given when downloading the recovery disk to install this version.

#### 15.1.2 New features in v3.0

**Update Personality:** Changes to personalities can mean that you need to update the personality of a fixture in your show. You can update the personality in [Patch] by selecting [Update Personality]. You are presented with a list of fixtures in your show which you can choose to update. The personality is updated from the Titan personalities folder.

**View Playback:** Selecting [View] and then a playback will open the playback view which contains details about the playback and what is recorded in that playback.

**Window Options Menu:** A new [Window Options] menu has been added to the [View] menu to allow control of the new windows in the workspace. With this menu you can select an active window, move and resize, maximize, change the screen and close a window. This allows full control of a window and its appearance.

**Fixture Selection Status:** A selection status bar is displayed on the top of the screen. A list of selected fixtures with their user number is displayed. When a group is selected the group name is presented instead of the fixture user number.

**Media Server Thumbnail Images:** For media servers that support the CFTP protocol an image of media clips is displayed in the attribute editor window. The media server must have been patched as an active fixture first.

**Playback View:** The playback view shows information about a playback and in the case of a cue list shows the cues in the playback. The playback view is opened by selecting [View] and then the

playback you want to open or tapping the playbacks display on the title of the playback.

- Lists each cue in the playback.
- Provides viewing and editing of the playback times.
- Provides viewing and editing of the playback options.
- Shows the timecode for each cue in the playback.
- Shows the Link for each cue in the playback.
- Shows the current curve for the cue.
- Indicates the live and next cue for a cue list.
- Lets you open a cue for editing.
- Provides 2 assignable function buttons for each cue.
- Use the wheels to select the next cue and currently selected cue.

Tapping or dragging in the grid takes you to the Edit Times menu or the Playback Options menu to edit the value.

#### **Cue View:**

The cue view allows you to view and edit the contents of a cue within a playback. It lists all the fixtures and controls in the cue with the saved values for each control. You can then select values to directly edit the content of the cue. The cue view is opened by first opening the playback view and then selecting the view button of the cue you want to look at.

- Displays all the fixtures in a cue.
- Displays all the controls in the cue.
- Shows the IPCBGES mask for each fixture in the cue.
- Shows the user number and name of each fixture.
- Shows the value of each control saved in the cue. Either the range value or the name of the function is shown.

The control cells can be switched between displaying Value, Fade and Delay Time and Palettes.

Select a number of controls and directly edit the values. Any changes will take immediate effect.

**Cue View Remove Attributes:** If you have added fixtures or attributes to a cue you do not want you can remove them using the Cue View. Open the Cue View, select the controls or fixtures you wish to remove and select 'Delete' from the Cue View Context Menu.

**Cue View Time Editing:** When editing attribute times or group times the Cue view window will open on the VDU screen. This shows all the fixtures in the cue, all their attributes and any individual fade and delay times associated with them. You can set times either from the Edit Times menu by selecting with the softkeys and fixture handles or by selecting cells within the grid.

**Quick Record:** A new way of quickly recording items into handle windows allows you to double press an empty handle to instantly record a new item on that handle. The item recorded will be determined by the window type so the position palettes window will

record a position palette and the groups window will record a new group. When you initially press the empty handle it will turn red with a plus icon, this indicates that another press will record the item. Not all windows support quick record but here is a list of ones that do.

- Groups Window
- Workspace Window
- Playback Window
- All Palette Windows

**Integrated Visualiser Window:** The avolites visualiser has now been integrated into the software so it appears on another workspace window. To see the visualiser select [Open Window] and then [Visualiser]. You have access to the visualiser functions such as load and save theatre on the window context menu. It is useful to use the [Screen] button under [Window Options] to move it to the external monitor.

**Visualiser Patch Synchronisation:** The visualiser now updates when you patch or repatch fixtures. You no longer have to close and reload visualiser to update your patch.

**Window Manipulation:** The workspace windows are arranged in a 2 by 2 grid and each window can occupy any space within this grid. There are 4 controls which allow you to move and resize the windows. To use the control you first need to make the window active by selecting the window header, it should become highlighted.

- Min or Max - toggles the window between occupying all the space available and its current size and position.
- Size and Position - moves the window clockwise around the grid.
- Close - closes the window.
- Close All - closes all the windows.
- Screen - moves the window between the available screens.

When using a tiger touch or an expert wing these controls appear as hard keys but they are also available from the [Window Options] menu under the [View] button. You may also want to see the hotkey controls. Some functions on the hard key require that the shift key is held.

- [Shift] + [Close] - Close All
- [Shift] + [Size and Position] - Screen

**Attribute Editor:** The attribute editor window provides a touch friendly way of selecting fixture attributes and choosing values for a fixture. The editor is split into a control selection area on the left and a function viewer area on the right. The editor is opened either from the [Open Window] menu or through touching the attribute names in the wheel display. You can change the attributes being displayed by selecting a different attribute. This will either show 3 or 6 types of attributes in a list of buttons. Touching any button will apply that value and it should change to blue to indicate it is in the programmer. Selecting the attribute again will take it out of the programmer. The title of each attribute is displayed in the column header and this can be touched to expand out the item and display more functions. When

the chosen function is a range value you can change the value by holding down the button until a slide bar appears, the value is then set by sliding your finger left and right. You can also select the attributes being displayed by clicking on the physical bank buttons.

**Colour Picker:** The colour picker appears when viewing CMY or RGB colour fixtures in the attribute editor. It allows you to quickly and easily select a colour. When you touch a colour a magnifying glass appears to accurately select the colour you want.

**Marquee Selection:** When dragging in the handles window you now have a 'Marquee' style selection. This allows you to patch and select fixtures in columns, rows or rectangular groups. This makes it much easier to work with fixtures that are patched in an arrangement that represents where they are on the rig.

**Workspace Handle Windows:** Four new windows have been added to store and organise palettes and groups. These are 'Groups', 'Colours', 'Positions' and 'Gobos and Beams'. They are accessed using the hardware keys or from the Open Workspace Window menu. There is also a factory workspace called 'Groups and Attributes' which will open all four windows. Into these windows you can store palettes and groups arranged by type. You may store as many items as you like, as you record items more buttons will be added. You can record using the existing Record menus or the Quick Record function described below.

**Macros Window:** A handle window has been added to store macros. It can be opened by selecting Open Workspace Window from the root menu and selecting Macros. It allows you to store as many macros as you wish. The first ten macros will appear on the dedicated macro buttons on the Tiger Touch and Expert Touch.

**Fixtures Window:** A handle window has been added to store fixtures. Press the Fixtures hardware key or select 'Open Workspace Window', 'Fixtures' to open the Fixtures window. Here you can patch as many fixtures as you wish laid out in either a scrolling view or on pages using the Show Pages context menu button.

**Pages in handle windows:** Each of the new handle windows (Fixtures, Groups, Colours, Beams, Positions, etc) can have page buttons enabled or disabled. In the context menu of a handle window select 'Pages Show' to show a list of pages on the left hand side of the window. You can use these pages as a fast alternative to scrolling the window. You can name pages by using Set Legend.

**Shapes Window:** The new shapes window allows you to quickly create shapes for the fixtures in the editor. Select some fixtures then open the Shapes window by using Open Workspace Window then selecting Shapes. The shapes window shows all the shapes that could be applied to the context fixture. Use the attribute bank buttons to select shapes for a particular attributes such as position or colour. Selecting a shape button will create a new shape on the selected fixtures and take you to the shape editor to set the properties of the shape.

**Open Workspace Window:** A new button has been added to the root menu to open a workspace window. Select 'Open Workspace Window' then select the window you wish to open. The window will be opened, brought to the front and focused. This menu allows you to open most of the workspace windows including Playbacks, Fixtures,

Groups, Colours, Positions, Gobos and Beams, HUD, Channel Grid, Macros, Shapes, Attribute Editor, Visualiser, Fixtures and Playbacks and Groups and Palettes

**Save Workspace:** The set of windows that are open on all attached screens and their size, position and display options can all be stored in a Workspace for easy recall. You can record a Workspace by holding down Avo and pressing View. You can then give the workspace a name and select which windows you wish to record. Then press a workspace button on a Tiger Touch or an Expert Touch or a grey palette button on an Expert. Pressing that button subsequently will set all the windows to the positions you recorded. Workspaces you record will be saved with the show.

**Editor Status Bar:** On the VDU screen above the window area the console now tells you which fixtures or groups are currently selected. This allows you to see which fixtures will be affected even if they aren't visible.

**Move Handles From Compatability Mode:** If you load a show created on the version 2 software or on an Expert and wish to move all the mixed content from the blue and grey preset handles to the Fixtures, Groups, Playbacks, Colours, Positions and Gobos and Beams windows you can do so easily using the 'Move to Workspace' function. Open the compatability view and select the 'Fixtures and Playbacks' window or the 'Palettes and Groups' window. From the context menu select 'Move to Workspace' then 'Confirm' from the softkey menu. This will move the handles from the compatability window you selected. Repeat to move the content from the other compatability window.

**Go Back:** There is a new key action for Cue Lists which runs the previous cue in the the cue list. Setting the blue and grey keys to Go and Go Back respectively allows you to easily step forward and back through lists.

**Select Attribute Bank on Touch Screen:** You can now select attribute bank on the touch screen by touching the IPCGBES indicator on the Tiger Touch and Expert Touch. Touching an attribute multiple times cycles through the available pages.

**Link and Link Offset:** Link has been overhauled to make it easier to understand and more powerful. For chases the options previously called 'Link From Last Cue On/Off' are now called 'Link After Previous Cue' and 'Link Wait For Go' respectively. The Cue Overlap function for chases has been removed, you should use a linked cue list instead. With Cue Lists there are now three options, 'Link Wait For Go', 'Link After Previous Cue' and 'Link With Previous Cue'. A Link Offset has been added. These work together as follows.

- 'Link Wait For Go' - The cue waits then fires immediately the Go button is pressed. The Link Offset is disabled.
- 'Link After Previous Cue' - The cue follows on as soon as the previous cue has finished its delay in and fade in time. A Link Offset can be set to add a delay between the first cue completing and this cue triggering. The offset can be specified either as a time or a percentage of the fade time of the previous cue.
- 'Link With Previous Cue' - The cue follows on as soon as the previous cue is triggered. A Link Offset can be set to add a

delay between the previous cue starting and this cue starting. The Link Offset can be set either as a time in seconds or as a percentage of the fade time of the previous cue.

These options allow you to create complex self timed sequences by building up simple steps. For example if you wanted the following effect

Go is pressed, Fixture one starts fading up over 20s

After 10s Fixture two fades up over 15s

Both lights stay on for 5s

Both lights go off in 3s

You could program

- Cue 1 - Fixture 1 @ 100%, Fade In 20s, Link Wait For Go
- Cue 2 - Fixture 2 @ 100%, Fade In 15s, Link With Previous, Link Offset 10s
- Cue 3 - Fixture 1 AND 2 @ 0%, Fade Out 3s, Link After Previous, Link Offset 5s

**Window Pop-up Context Menu:** On the Pearl Expert if you do not have a wing attached a button appears in the top right hand corner of each window. Clicking this button reveals a popup context menu for that window. A dedicated close button is also added for convenience.

**Latch Fixture:** A new key profile function 'Latch' is provided for working with fixtures on the touch screen. Touching once is equivalent to putting the preset fader to full for that fixture and touching again returns the fader to 0. In program mode this puts the fixture in the programmer, in run mode it does not.

**Display Settings In System Mode:** A Display Settings menu has been added in System mode which allows you to configure what external screens or wings you have attached. We recommend always using at least one external screen with the Pearl Expert, either a monitor or a wing, on the Tiger Touch the external screen is sometimes helpful. For best performance disable any screens that are not attached.

When you enable and disable screens any windows that were on a screen that is disabled will be moved to a visible screen if there is one. When opening new windows they will attempt to open on the screen they were last used on but if it is not available they will move to a visible screen. You cannot disable the built in touch screen on the Tiger Touch.

**Factory Macro Library:** A number of macros have been added to the built-in macro library. You can assign these to buttons using the Macro, Assign to handle function.

### 15.1.3 Improvements in v3.0

**List of Cues when including from Cue List:** When including from a cue list it displays a list of cues in the cue list from which to select.

**Patching Active Fixture Progress Prompt:** Patching an active fixture can take some time so a prompt is now displayed to reassure the user.

**WPF Logging:** Status information from the WPF rendering system is now logged in the panel server exception log.

**Unique Names for Block Shapes:** In the previous version all block shapes for Position, Colour etc would have the name "Block Shape". As the shapes would never be displayed in a single list this was not a problem. With the new shapes window the names needed to be unique and so the attribute group the block shape applies to has been appended to the name.

**Visualiser Startup Speed:** The time taken for the visualiser to open has been reduced.

**Handle Visual Styles improved:** The visual style of handle buttons has been improved to make it easier to differentiate playbacks from fixtures and between fixtures that are selected and in the editor.

**HUD Integration:** The HUD windows have been integrated with the workspace windows making them easier to manage with the hardware keys. The HUD layout can now be saved in a Workspace allowing you to quickly save and recall HUD layouts. The old VDU views have been moved into the HUD window context menu.

**Handle Pages Reset On New Show:** When you start a new show the handle pages now reset to their default values.

**Wheel Consistency:** The Shape speed, Shape Size and Chase Speed wheels have been harmonised so that turning the wheel clockwise always makes the chase or shape go faster or larger.

**Button Labeling In Playback Display:** If you set a long legend on a cue in a cue list the button label would show the middle part of the legend and not the button function. Now it always shows the button function and as much legend as will fit.

**Warning Icons:** The Tiger Touch now has the ability to show warnings in the softkeys in line with the Expert. Warning icons will be shown if a function is currently unavailable, to warn that you may have made a mistake or to warn of possibly unexpected side effects. Consult the manual for detailed information on a particular warning.

**Group Selection Display:** Groups now show as deselected when all the fixtures in the group are removed from the programmer, not just when you press Clear. This makes it easier to work with groups in a show environment where you rarely press Clear.

**Switch Channel Grid Between Levels, Palettes and Playbacks:** The Channel Grid can now show levels, palette names or controlling playbacks for all the controls on all patched fixtures or for fixtures in the programmer. Switching between these views allows you to quickly determine what a fixture is doing and why and to understand exactly what is being recorded in a cue.

**Fan With One Fixture Selected:** If you have fan selected and only one fixture precisely the wheels would not change the fixture attributes. Now Fan is ignored if only one fixture is selected.

**Channel Grid Show Off:** The Channel Grid now indicates when fixture attributes in the programmer are set to OFF.

**Channel Grid Performance:** The speed and reliability of the Channel Grid have been significantly improved.

**Channel Grid Palette Name reliability:** The reliability of the channel grid has been improved when showing palette names. It now

updates correctly if a palette changes even if the underlying value doesn't. It also updates correctly when opening the grid and changing display mode.

**Editing Values In Channel Grid:** You can now edit and clear values directly in the channel grid. Open the grid in Output or Program mode, drag select some cells and either type a new value on the key pad or select a function from the softkey menu. Pressing Enter sets the value in the programmer. The softkey menu also has a Clear button to remove the selected attributes from the programmer.

**Virtual Keyboard Auto Pop-Up Control:** There is now a button on the virtual keyboard to control whether it pops up automatically when text input is required. The option defaults to on unless a hardware keyboard is attached. In either case the behaviour can be overridden by toggling the button which is in the top right next to Min/Max.

**Virtual Keyboard Shows Case:** The virtual keyboard now reflects the state of the shift button by showing the key legends in the correct case.

**Touch Screen Calibration Shown In Front:** Previously the top touch screen calibration point could be obscured by the toolbar. The calibration window is now brought to the front.

**Mask Settings Retained:** All the mask settings (such as Clear mask, Locate mask, Palette Record mask, etc) are now retained when you restart the console and when you reload a show.

**Store Macro Anywhere:** You can now store a macro on any assignable hardware or virtual handle. This allows you to store a macro close to the things it operates on.

**Display Resolution In Tools Menu:** On Tiger Touch and Pearl Expert you can now set the display resolution of the external monitor directly from the Tools menu for easy access. Select Tools -> Control Panel -> External Monitor and select the native resolution of your display.

**Copy, Link, Move Menu Clearer:** The Copy, Link, Move menu has been improved by separating the toggle button out to three softkeys. This makes it clearer which one is selected and quicker to change between them. You can still toggle options by pressing the Copy button repeatedly and Avo + Copy still goes directly to Move.

**Dongle Information:** If you start the software without an authorised Avolites Titan Dongle you will now be warned on the VDU and LCD screens.

**Timecode Reliability:** With timecode sources running at speeds other than 24fps timecode controlled cue lists The resilience of Titan to a noisy timecode source has been improved. Previously a jittery timecode could cause a timecoded cue list to jump.

**And, Thro And @ Buttons:** In the Channel menu the grey keys now act as And, Thro, and @ buttons as shown on the Tiger Touch and new Expert laminate.

#### 15.1.4 Changes in v3.0

**Compatibility Handles in Windows:** The compatibility handles introduced in the previous version to allow for patching of fixtures and saving of palettes has now been split into two windows.



- Fixtures and Playback
- Groups and Palettes

There is also a new context button which allows you to export the handles to the new windows available.

### 15.1.5 Bugs fixed in v3.0

**When repatching fixture changing user number resets DMX address.:** When you are repatching fixtures, if you changed the user number it would reset the DMX Address.

**Incompatibility between D4 personalities and Titan:** Differences in the way personalities were displayed in Titan meant that some personalities would not display function names correctly.

**Editing Handle Numbers in Fixture Patch View:** Found in version: 2.0 - An issue with manually assigning handle numbers in the fixture patch view has been resolved. On Tiger Touch if you entered a handle number the page assigned would be 1 more than the page displayed.

**Setting Cue List Delay In To Fractional Amount:** Found in version: 2.0 - An issue with assigning fractional delay in times to cue list cues has been resolved. Previously the test input field for 'Delay In' would not accept the decimal point.

**Channel Grid Failed To Load Columns When Switching View:** Found in version: 2.0 - There was an issue with the Channel Grid where if you went into Programmer mode and cleared the programmer then went back to Output it would not always reload the columns. This has been fixed.

**Playbacks View Showed Extra Letter:** Found in version: 2.0 - A display issue with the Playbacks display has been resolved. When setting a legend on a playback if you deleted all the letters of the legend you had typed the playbacks display would continue to show the first letter until you started to enter a new legend.

**Playbacks View Failed With Deleting Cues In Unfold:** Found in version: 2.0 - The Playbacks display had an issue where if a number of cues were deleted in Unfold it could show blank. This has been resolved.

**Connected Playback Wheel View Would Not Update:** Found in version: 2.0 - The connected playback wheel view would not update if you added cues whilst the playback was live. In order to update the list of cues you had to disconnect the playback and connect again. Now the view updates dynamically as you add cues.

**Groups Showed Incorrect Number:** Found in version: 2.0 - If you recorded groups without a legend then the group handle button would show the handle index of the group instead of the user number. The group button now always shows the user number.

**Fixture LEDs stay lit after delete:** Found in version: 2.0 - When deleting a lot of fixtures some LEDs stayed lit until you changed page. This is resolved.

**Attribute Options Assigned To Two Wheels:** Found in version: 2.0 - On consoles with three attribute wheels the Attribute Options menu only assigned attributes to two. Now it assigns the correct number of attributes.

**Clear Button Fails To Clear Locate Intensity:** Found in version: 2.0 - Occasionally Clear could fail to clear fixture intensity. If you located a fixture so the light came on, edited an individual attribute then cleared that individual attribute the Clear function would no longer clear the fixture's locate values unless you selected the fixture again.

**Replace Shared Palette:** Found in version: 2.0 - If you replaced the contents of a shared palette with another shared palette with more than one kind of fixture in the programmer it would only record one fixture type. This is resolved.

**Update Palette:** Found in version: 2.0 - If you set a mask in the record palette menu then subsequently used update palette the record palette mask was used to filter the update. This led to updates in the programmer sometimes not getting merged into the palette. Update palette now always records all the changes in the update palette programmer.

**Copy Fixture And Shape:** Found in version: 2.0 - If you copied a fixture it would not always be included in all the shapes the source fixture was included in. It not copies all the shape parameters from the source fixture in every cue.

**Crash When Autoloading A List From Itself:** Found in version: 2.0 - If you autoloading a cue list from a cue within that list Titan could crash. This has been resolved.

**Record By Stage From Cues To Cue List:** Found in version: 2.0 - Recording a cue list from existing cues using Record By Stage did not work correctly, only the first cue took any information from the live cues. Now all lit fixtures are recorded.

---



---

## 16. Glossary of terms

ADDRESSES	The DMX Channels occupied by individual Fixtures. The first Channel occupied is usually encoded onto the Fixture somehow (often by switches or using a menu) and called its ADDRESS.
ALIGN	A means of copying Attribute characteristics from the first Fixture selected to other selected Fixtures, resulting in the Fixtures being aligned to each other.
ATTRIBUTE	One Channel or function of an Intelligent Fixture, such as "Colour Wheel".
ATTRIBUTE GROUPS	see IPCGBES.
AUTOLOAD	A playback which is automatically fired by a cue in a cue list. Enables a chase to be fired by a cue list.
BACKUPS	Copies of a show stored to an external storage device for safety.
BPM	Beats Per Minute. 60BPM is equivalent to one step per second.
BUSKING	Operating the console live (usually for live music) when you have insufficient programming and need to make up stunning effects as you go along using palettes etc.
CHASE	A sequence of one or more pre recorded steps which automatically run one after the other.
CHASE STEPS	Individual cues within a Chase. See above
COLOUR CHANGER	A mechanical Fixture for changing the colour of a light source, usually by scrolling through a roll of different coloured gels or by moving special filters into the light beam.
COLOUR MIX / CMY	A system of three filters that can each crossfade from white to a colour, or one colour to another. It is a feature of some Intelligent Fixtures, which enables thousands of different colours to be created.
CONNECTED CHASE	A Chase which has been brought under control of a chase Controller by pressing the CONNECT button.
CUE	A single stage look programmed onto a Playback button or fader. Also known as MEMORY, STATE, SCENE, LOOK.
CUE LIST	A sequence of cues programmed onto a Playback button or fader. Each cue can have its own delay and fade times and can also start other cues or playbacks. Also known as a CUE STACK or STACK.
CUE MODE	A playback format programmed into a Cue. There are Cue Modes 0 - 3.
DEVICE	See FIXTURE.

DIMMER	Device used to control the intensity of an individual light.
DMX	DMX512(1990) a specification for communication between control desks and Fixtures, Originally for Dimmers it has been adopted as a control protocol for most Intelligent Fixtures. It can carry 512 different Channels of data.
FADE	A continuous transition from one level to another.
FIXTURE	Any lighting instrument that is patched using a Personality. Generally refers to a moving light or colour changer, not an individual Dimmer channel. Also called Intelligent Fixture, Device, Instrument, Moving Light.
FLASH	Pushbutton which adds a playback into the existing output of the console. Historically called the ADD button. See also SWOP.
FLIP	A function for use with Moving Head Fixtures. They have two possible Pan and Tilt positions for each point on stage, and FLIP will alternate between them.
FOCUS	What Palettes are called on other Avolites consoles. See PALETTE. May also be used in connection with moving fixtures to focus (set the sharpness) of a gobo projection.
FUNCTION WHEEL	A wheel which does not directly control an Attribute channel on a fixture, rather it controls only part of an attribute and another function wheel may control other parts. For example a rotating gobo attribute may have one function wheel to control continuous or indexed mode, and another function wheel to control rotation speed or position, though the actual fixture only uses one DMX channel to control both these functions.
GENERIC	Term used to indicate a Dimmer channel. See also FIXTURE.
GROUP	A GROUP is a pre-programmed collection of Fixtures that can be selected with a single button press.
HTP	Highest Takes Precedence, a mechanism for determining the output level of a channel being controlled by more than one Playback. The Playback outputting the Highest value at any given time will determine the level of the channel. Also see LTP.
HUD	Heads-up-display, an information screen shown on the external VDU monitor.
INCLUDE	A means of transferring the contents of a Cue or Chase Step into the Programmer.
INSTRUMENT	See FIXTURE.
INTELLIGENT FIXTURE	See FIXTURE.
IPCBES	The Attribute Groups, used by the console to conveniently group together similar attributes. For

	example the P(osition) group includes Pan and Tilt attributes.
LCD	Refers to the console's on-board displays (stands for Liquid Crystal Display).
LED	Refers to the small red lights within the buttons on the console (stands for Light Emitting Diode).
LINKS	Connections between cues in a Cue List or Chase enabling them to run on from one to another automatically.
LOCATE	A feature of the console that makes it easy to find your selected Fixtures by putting them in Open White. Pressing Shift+Locate additionally sets the Pan and Tilt at 50%.
LTP	Latest Takes Precedence, a mechanism for passing control of a channel from one Playback to another on the basis that the latest Playback Fader to be moved has control, providing that Playback Fader has moved past the Trigger point. (See TRIGGER POINT). Also see HTP.
MACROS	Macros allow functions programmed into an Intelligent Fixture by the manufacturer to be executed by sending a DMX command sequence from the console. They can allow you to reset the Fixture for example. The DMX command sequences are defined within the Personality File. Also used on the Tiger Touch to refer to a stored sequence of button presses.
MEMORY	The name for a Cue on other Avolites consoles.
MIDI	Stands for Musical Instrument Digital Interface. It is the established hardware and software specification enabling the exchange of data between digital musical instruments (such as keyboards) and other devices such as computers, sequencers and sound and lighting consoles.
MENU LATCH	Provides functions for control of Moving Lights (Moving Light Menu).
ON and OFF	Any channel stored in a playback can be On or Off. A channel which is ON is changed by the playback when it is fired. A channel which is OFF is stored in the playback for future re-use but has no effect when the playback is fired.
OVERLAP	Sets how the Tiger Touch allocates new values to a group of fixtures. 100% means that all fixtures are updated simultaneously. 0% means that the fixtures will be updated one after the other.
PALETTE	A term used to describe a referenced pre-defined state for an Attribute that can be recalled whenever required during programming. Each Fixture may be set to a different value in the Palette, the entries can be named, and recalled with a single button press.

PARK	A Parked fixture is one which is patched to a handle but has no DMX address set. This happens to a fixture when its DMX address is taken by another fixture during a later patching session; the Repatch function is used to give it a new DMX address.
PERSONALITY	A description of what Attributes a particular Intelligent Fixture has and how the console will patch and use these. It also determines which Attribute Wheel will control which Attribute.
PLAYBACK	Area of the console that can replay recorded Cues or Chases using Playback Faders.
PRELOAD	A playback button which sets the LTP channels in a cue but not the HTP channels. Used to pre-position fixtures before firing a cue. Also a cue list function which allows one cue to preload the LTP channels in another cue.
PRESET FOCUS	What Palettes are called on other Avolites consoles. See PALETTE.
PROGRAMMER	The part of the console which contains Channel information which has been changed by the user, prior to recording.
SAFE	Desk mode in which all Playback functions are enabled, but all programming functions disabled.
SELECTED	A Fixture that is under manual control.
SEQUENCE	See CHASE.
SHAPE	A preprogrammed effect available which is applied to an Attribute. It can then be customised and stored in a Cue.
SHARED PALETTE	A Palette in which information is only stored for one Fixture, but is available to all Fixtures of that type.
SOFTKEY	Buttons marked A-J, with different functions which are shown on the LCD screen above.
STACK	See CUE LIST.
SWOP	Type of flash button which turns on the output being flashed and turns off all other output while the button is pressed. Sometimes called "Solo". Also used for selecting fixtures or playbacks when programming. See also FLASH.
TABLE	List of pre-defined levels for an attribute allowing settings to be recalled by name (for example the colours available from a colour wheel may be found in a table).
TIMECODE	An electronic timer signal which allows cue list playback to be synchronised to a soundtrack or other events. The console can read MIDI timecode or can take a timecode from the Windows sound player application "Winamp". An internal free-running timer is also provided.
TRACKING	A mode in which Moving Lights can move around an area all pointing at the same spot.

TRAINING	The process of recording points on a stage so that the console can work out the TRACKING for Moving Lights.
TRIGGER POINT	The level set in the User Settings which determines at which point a Playback Fader triggers the LTP Channels programmed onto it.
UNFOLD	A function that allows Chase Steps to be laid out onto Playback Faders for easy editing.
USER SETTINGS	User definable desk settings. Found in the Tools menu on the VDU.
VDU	A computer monitor plugged into the VDU socket on the Tiger Touch giving further information about the operation of the console.
VIRTUAL DIMMER	Used with LED RGB (red-green-blue) colour mixing fixtures, these add an intensity function to the fixture which masters the RGB controls on the fixture when it does not actually have an intensity control channel.
WIPEALL	A process which clears all the previous programming out of the desk, but does not touch the System Software.
WHEEL	Wheels are used on the Tiger Touch to set Fixture Attributes and to control chases and cue lists (see FUNCTION WHEEL).

Copyright Avolites Limited 2010



# Index

Softkey Menu items are indicated with capital letters (for example "Activate A Timecode Cuelist")

---

## A

acceleration mode of wheels · 40  
 ACDI · 16  
 ACDI, connecting up · 133  
 active fixture  
   media thumbnail · 42  
 active fixture (AvoTalk) · 135  
 Add Swop button · 97  
 Align fixtures · 46  
 All button · 45  
 always merge · 67  
 Append · 78  
 Append Cue (cue list) · 86  
 Apply Time To Palette · 98  
 ArtNet, setting up · 131  
 As In · 92  
 attribute editor window · 41  
 attribute groups · 44  
 attributes  
   controlling · 39  
   entering numerically · 42  
   setting · 39, 40  
 auto connect chase · 113  
 autoload playback in cue list · 87  
 autosave options · 26  
 autosave show option · 114  
 AvoTalk · 135

---

## B

backing up show · 26  
 banks of attributes buttons · 39  
 base directory for system files · 116  
 block shape · 57  
 Bunch Up · 34, 53, 70, 80, 91  
 busking · 98

---

## C

channel button · 42  
 channel grid window · 47  
 chases  
   appending new cues · 78  
   connecting · 76  
   cue linking · 84  
   cue, fixture and attribute overlap · 82  
   deleting · 70, 80  
   difference between chase and cue list · 85  
   direction · 78  
   editing using unfold function · 79  
   global timing · 81  
   individual cue times · 82  
   inserting cues · 78  
   pausing · 78  
   recording · 75  
   running · 76

  speed and crossfade · 77  
   tap tempo · 81  
   temporary speed · 77  
 clear button · 38  
 Clear button · 63  
 clearing the console · 26  
 colour picker · 41  
 compatibility view · 108  
 connect button · 76  
 copy chase · 80  
 copy cue · 69  
 copy cue list · 90  
 copy palette · 53  
 copying  
   fixtures · 34  
 crossfade of chase · 77  
 cue list  
   append cue · 86  
   attribute fade times · 93  
   autoload · 87  
   cue legends · 87  
   default delay/fade times · 86  
   deleting · 91  
   difference between chase and cue list · 85  
   editing cues and times · 89  
   killing · 88  
   recording · 86  
   setting times · 92  
 Cue Overlap · 82, 93  
 cue view · 67  
 cues  
   attribute fade times · 73, 83  
   changing page · 66  
   deleting · 70  
   editing · 66  
   fade modes · 72  
   flashing · 65  
   include function · 68  
   playing back · 65  
   recording · 64  
   removing attributes · 69  
   setting fade times · 70  
   setting legends · 64  
 curve · 74  
 curves · 117

---

## D

Delay Time · 72  
 delete palette · 54  
 deleting  
   chase · 70, 80  
   cue · 70  
   cue list · 91  
 deleting patched fixtures · 34  
 desk lamps · 17  
 DHCP · 139  
 dimmer, virtual · 41  
 dimmers  
   entering numerically · 42  
   patching · 28  
 display setup · 114  
 DMX address

displaying for fixture · 28  
 setting for fixture · 29  
 DMX nodes · 130  
 DMX outputs · 16

---

## E

Edit Times · 70  
 editing a cue · 66  
 editing values · 47  
 Editor · 63  
 effects generator · 57  
 enter numeric values · 42  
 ethernet, configuring DMX outputs ·  
 130  
 external monitor · 109

---

## F

fade curves · 117  
 Fade Out Time · 72  
 Fade Time · 72  
 fade times for cues · 70  
 fading palettes · 54  
 fading palettes over time · 98  
 Fan button · 46  
 filtered palettes · 52  
 firing a chase · 76  
 fixture exchange · 32  
 fixture macros · 48  
 fixture order · 72, 94  
 Fixture Overlap · 72  
 Fixture Overlap (chases) · 82, 94  
 Fixture Overlap (cue lists) · 94  
 fixture overlap (palettes) · 98  
 fixture page buttons · 27  
 fixture personalities, downloading  
 and installing · 125  
 fixture select buttons · 27  
 fixtures  
 changing page · 38  
 groups · 44  
 locating · 38  
 patching · 28  
 selecting · 37  
 step through selection · 45  
 Flip · 46

---

## G

Generic fixtures · 126  
 global chase timing · 81  
 go and stop · 78  
 Go button · 88  
 grand master fader · 97  
 Group button · 44  
 grouping fixtures · 44

---

## H

handle paging · 74, 96  
 HiLight button · 46  
 hotkeys · 117  
 HTP and LTP, explanation of · 65

---

## I

Include button · 68  
 Insert (in unfold mode) · 89  
 Insert (rec chase) · 78  
 insert chase step · 79  
 Invert attributes · 35  
 IP address, setting · 129  
 IP addressing explained · 137  
 IPCGBES groups · 44  
 iPod/iPhone · 101

---

## J

jump to step in chase · 78

---

## K

key modes · 97  
 key profile  
 individual for playback · 74, 96  
 key profiles · 111  
 keyboard  
 touch · 22  
 keyboard, external · 17

---

## L

latch menu · 20  
 latching the copy menu · 70, 80, 91  
 latching the rec cue menu · 64  
 LED brightness · 113  
 legend button · 53  
 legends  
 setting for fixtures/dimmers · 31  
 legends for cues in cue list · 87  
 level matching of playbacks · 66  
 Link (cue lists) · 92  
 Link Offset · 92  
 Load Show · 25  
 loading a show · 25  
 Locate button · 38  
 lock playback on handle · 74, 96  
 log panel keypresses · 116  
 LTP and HTP, explanation of · 65

---

## M

macros · 48  
 macros (keypress) · 24  
 mask  
 clear · 38  
 master faders · 97  
 master palette time · 54  
 media thumbnail (AvoTalk) · 135  
 midi connections · 17  
 mode 0 - 3 for cues · 72  
 monitor · 109  
 mouse, external · 17  
 move chase · 80  
 move cue · 69  
 move cue list · 90  
 move function · 99  
 move palette · 53

Moving fixture · 34  
Multi-DMX fixture · 126

---

## N

network connection · 17  
New Show · 26

---

## O

Off button · 69  
operate mode · 97  
options, setting · 114  
order of fixtures · 72

---

## P

page  
  selecting fixture pages · 27  
page buttons · 52  
page legends · 32, 66  
pages of cues · 66  
pages of fixtures · 38  
pages of palettes · 52  
pages show/hide button · 27  
Palette Bank buttons · 52  
palettes · 49  
  creating · 50  
  editing and deleting · 52  
  fading over time · 54, 98  
  fixture overlap · 98  
  master time · 54  
  recalling · 51  
  setting legends · 53  
park fixture · 31  
patch a fixture · 29  
patching  
  copying fixtures · 34  
  deleting fixtures · 34  
  dimmers · 28  
  displaying DMX view window · 28  
  fixtures · 28  
  inverting attributes · 35  
  setting legends · 31  
  swap pan and tilt · 35  
pattern selection · 43  
pausing a chase · 78  
pearl expert shows · 108  
phase of shapes · 60  
phase offset · 60  
playback options  
  chases · 84  
  cues · 73  
playback priority · 74  
playback view · 67  
playbacks  
  releasing · 66  
preset palettes · 30  
Press to show DMX channels · 28  
Prev/Next buttons · 45  
priority setting for playback · 74  
Programmer · 63  
prompt for merge · 113

---

## Q

quick palettes · 52

quick record · 19  
palette · 51

---

## R

random chase · 78  
Rec Step button · 89  
Rec Times button · 89  
Record (in unfold mode) · 79, 89  
Record Chase button · 75  
Record Cue button · 64  
recording macros · 24  
reinstalling software · 121  
release mask · 74  
releasing playbacks · 66  
remote control · 101  
resetting fixtures · 48  
Retain Layout · 34, 53, 70, 80, 91  
running a chase · 76

---

## S

safe mode · 97  
Save Show · 25  
saving show to hard disk · 25, 26  
Select a DMX line · 29  
Select Cue · 92  
Select Fix Page button · 38  
selecting a range of fixtures · 37  
selecting fixtures in a pattern · 43  
Set Cue Times (in unfold mode) · 79  
Set Fixture Order · 94  
Set IPCGBES Times · 73, 83  
Set Legend button · 31, 64  
Set Out Time · 92  
setting attributes · 40  
Setup button · 25, 26  
Setup DMX Outputs · 130  
shape generator · 57  
shapes  
  deleting · 61  
  fading in · 61, 74  
  phase · 60  
  reversing · 61  
show file  
  saving and loading · 25  
Snap Back button (cue lists) · 88  
software, recovery · 121  
software, upgrading · 121  
Speed (chase) · 81  
speed of chase · 77  
spread of shapes · 60  
Stop button (cue lists) · 88  
Store Palette · 50  
swap items if required · 34, 54, 70, 80, 91  
Swap Pan Tilt · 35  
system menu · 112

---

## T

tap tempo · 81  
tempo units · 113  
temporaru speed · 77  
temporary chase speed · 113  
theatre mode · 85  
timecode · 95

touch button size · 113  
touch keyboard · 22  
transparent lock · 74, 96

---

## U

unfold  
  cue list · 89  
Unfold button · 79  
Unknown fixtures · 126  
unlinking chase cues · 82  
update personalities · 33  
upgrading the software · 121  
UPS · 16  
user number · 28  
User Settings · 114  
user settings menu · 112

---

## V

VDU · 109  
VDU screen  
  connecting · 17  
view fixture patch · 32

view menu · 99  
viewing key profiles · 111  
virtual dimmer · 41  
Visualiser · 23  
Visualiser auto patch · 30

---

## W

warn before parking fixtures · 113  
wheels  
  acceleration · 40  
  controlling attributes · 40  
  fast mode · 40  
window positions · 18, 107  
Wipe · 113  
wipeall · 26  
workspace  
  positioning windows · 18, 107  
  saving · 19, 108

---

## X

X in fixture order · 73

Avolites Tiger Touch Operator's Manual

part number **8200-3000**

Price £30

Additional copies of this manual, together with other useful spares etc. can be purchased through the Avolites On line shop. Visit <http://www.avolites.com> then navigate to Avo Shop from the links on the left hand side.